
# Changing the Direction of the Retrieve on a Flystart Reel (2007 Model)

## CHANGING THE DIRECTION OF RETRIEVE

1. Remove the Spool Assembly (14 & 15) from the Frame (3).
2. Using a #1 Phillips screwdriver, remove the four Escapement Cover Screws (10) on the inner flange of the Spool Assembly (14 & 15).
3. Remove the Escapement Cover (11).
4. Remove the Escapement (12), turn it over, and replace it on the Spool Assembly (14 & 15) screw holes. For left hand retrieve, the escapement pawls should point counterclockwise. For right hand retrieve, the drag clicker pawls should point clockwise (see diagram below).
5. Replace the Escapement Cover (11), aligning the Escapement Cover (11) screw holes with the Escapement (12) screw holes.
6. Reinsert and tighten the Escapement Cover Screws (10) and replace the Spool Assembly (14 & 15) on the Frame (3).

**NOTE:** When changing the direction of the retrieve; the direction in which the backing and line are wound onto the spool must be reversed. When viewing the outer face of the spool, backing and line should be wound on in a clockwise direction for left hand retrieve and in a counterclockwise direction for right hand retrieve.

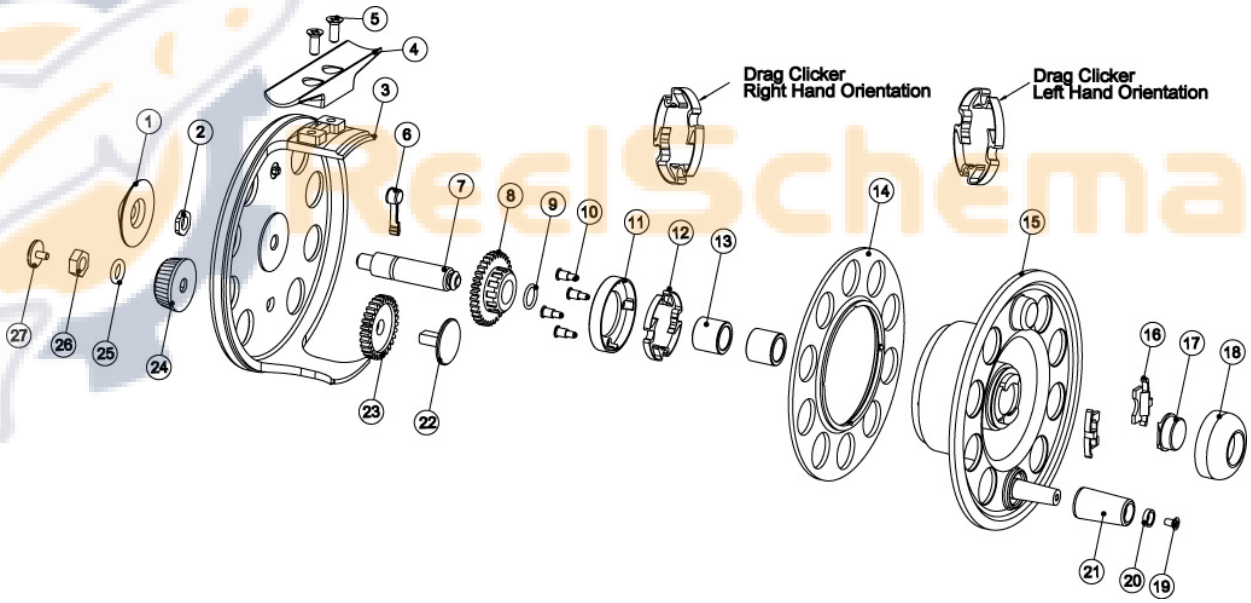


| | | | |
|---|---|---|---|
| 1 | SPINDLE COVER | 15 | SPOOL |
| 2 | SPINDLE NUT | 16 | SPOOL RELEASE SLIDE |
| 3 | BODY | 17 | SPOOL RELEASE BUTTON |
| 4 | FOOT | 18 | SPOOL CAP |
| 5 | FOOT SCREWS | 19 | HANDLE RETAINING SCREW |
| 6 | CLICKER | 20 | RETAINER |
| 7 | SPINDLE | 21 | HANDLE |
| 8 | DRIVE GEAR | 22 | DRAG SPINDLE |
| 9 | O-RING | 23 | DRAG GEAR |
| 10 | ESCAPEMENT COVER SCREWS | 24 | DRAG KNOB |
| 11 | ESCAPEMENT COVER | 25 | O-RING |
| 12 | ESCAPEMENT | 26 | DRAG NUT |
| 13 | SPOOL BEARING | 27 | DRAG KNOB SCREW |
| 14 | SPOOL REAR | | |

ALL PRODUCTS AND CONTENT ©2005-2006 ROSS REELS WORLDWIDE. ALL RIGHTS RESERVED.