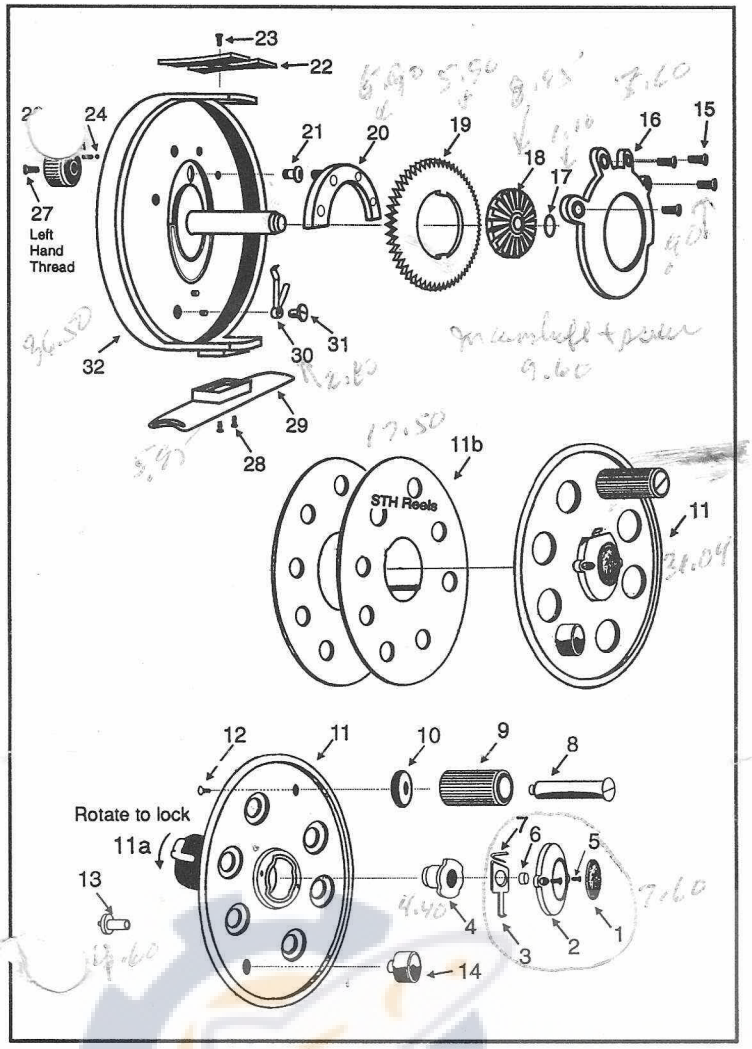



## IM-POP REELS PARTS LIST

1. STH Medallion
2. Retainer
3. Retainer Clip
4. Front Flange Retainer
5. Stainless Steel Screws (2)
6. Spacer
7. Retainer Spring
8. Handle Fastener
9. Handle
10. Spacer
11. Front Flange of Reel
11a. Release Spring
11b. Cassette
12. Handle Fastener Screw
13. Stop Pin Assy.
14. Counter Weight
15. Disk Drag Cover Retainer Screws
16. Disk Drag Cover
17. O Ring
18. Reversible Disk Gear
19. Disk
20. Drag Pad
21. Splined Worm Gear
22. Line Guard
23. Line Guard Screw
24. Drag Adjustment Knob Bearing
25. Drag Adjustment Knob Spring
26. Drag Adjustment Knob
27. Drag Adj. Knob Screw (LH Thread)
28. Foot Fasteners
29. Reel Foot
30. Clicker Spring
31. Clicker Spring Post
32. Reel Frame

# OWNER'S MANUAL
# IM-POP REELS

Please take a few minutes to read through this Owner's Manual.

### DRAG ADJUSTMENT

The drag on the IM-POP Reel features a full disc drag with cork and naval bronze. Just turn the drag knob to increase or decrease drag resistance.

### TO REMOVE SPOOL AND/OR INSTALL THE SPOOL

To Remove: Just press in on retainer clip. (see figure below) Then pull the spool from reel.
To Install: Hold retainer clip in, push spool firmly onto reel, and release the retainer clip.

### RIGHT OR LEFT HAND RETRIEVE

To change from right to left hand retrieve, just follow these steps:

1) Remove the spool as outlined above.
2) Turn the shaft down and gently tap on a firm surface to slide the black O-ring and center gear partway down the shaft.
3) Remove O-ring that holds the center gear in place.
4) Remove center gear from the shaft.
5) Flip center gear over and replace on the shaft.
6) Make certain that keyways on the center gear match up with tabs on the bronze disk.
7) Replace the black O-ring that holds the center gear in place.
8) Replace the spool and go fishing.

### TO CHANGE CASSETTES

1) Remove the spool from the reel.
2) Grasp front flange, then just pull on the cassette. It will pop right off.
3) To Replace: Slide the cassette onto the front flange, making sure to align the keyway on the cassette and the key on the front flange.
4) When cassette is firmly seated, flip white cassette retention lever to lock cassette in place.
5) Replace the spool on the reel.

**Figure A**


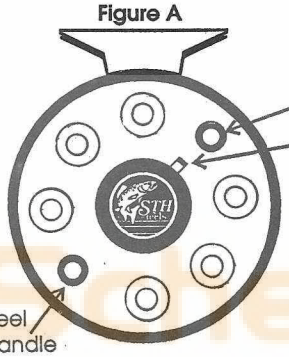



**Figure B**

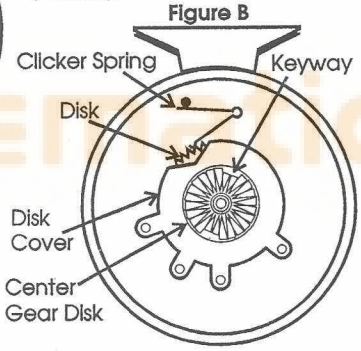


STH REELS (USA) INC.
P.O. Box 500816
Marathon, Florida 33050-0816
Phone (305) 743-5971
Fax (305) 743-3519

Steelhead Argentina S. R. L.
STH REELS
Peru 447
(1067) Buenos Aires
Republica Argentina