
www.reelschematic.com

MCH20/MCH40

Rev A. 7/98

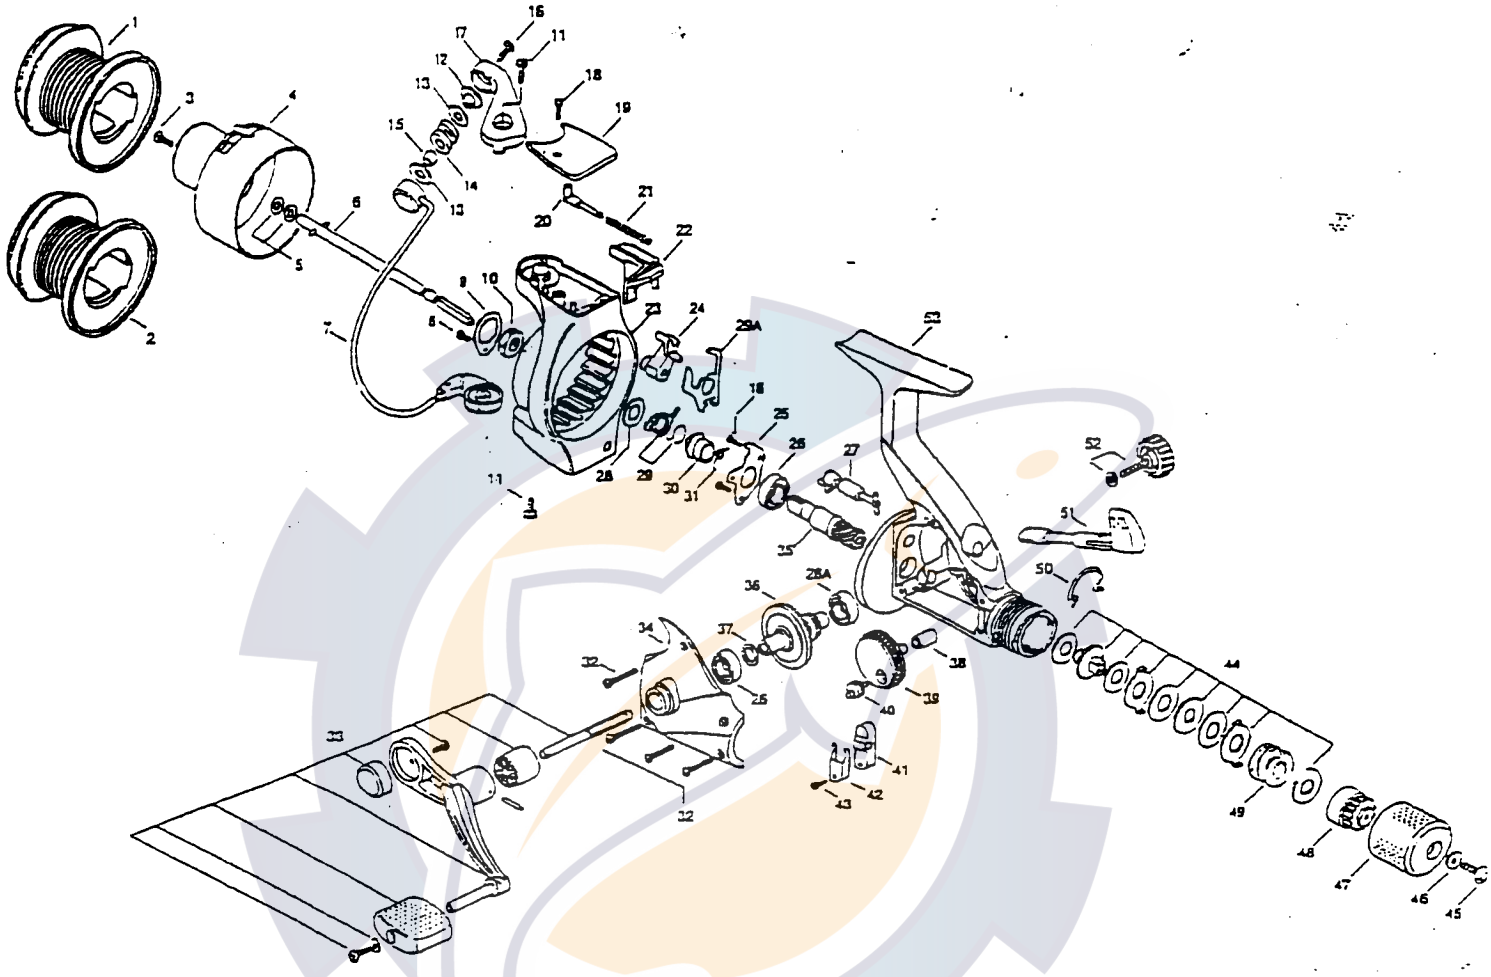

1	888-9351	Size 20 copper anodized spool assembly
	888-9352	Size 40 copper anodized spool assembly
2	888-9353	Size 20 graphite spool
	888-9354	Size 40 graphite spool
3	850-3800	Spool hub screw
4	888-9355	Size 20 spool hub assembly
	888-9356	Size 40 spool hub assembly
5	894-8900	Size 20 spool washer
6	888-9357	Size 20-main shaft assembly
	888-9358	Size 40 main shaft assembly
7	888-9359	Size 20 bail wire assembly-
	888-9401	Size 40 bail wire assembly
8	850-5900	Screw- rotor nut retainer
9	850-3900	Retainer- lower nut
10	842-9900	Nut- rotor
11	863-2000	Bail screw
12	867-6800	Bushing- line roller
13	866-7700	Washer- line roller TEFLON®
14	866-6700	Line roller- ceramic
	888-9402	Ball bearing, line roller
	850-3800	Screw- bail arm
17	888-9403	Size 20 bail arm
	888-9404	Size 40 bail arm
18	888-9405	Screw- rotor cover & pinion
19	888-9406	Size 20 rotor cover
	888-9407	Size 40 rotor cover
20	850-4800	Size 20 bail trip plunger
	851-4900	Size 40 bail trip plunger
21	850-4600	Bail spring
22	859-2000	Size 20 internal bail trip lever
	861-0500	Size 40 internal bail trip lever
23	888-9408	Size 20 rotor
	888-9409	Size 40 rotor
24	889-4300	Size 20 anti-reverse pawl
	851-1700	Size 40 anti-reverse pawl
25	859-0800	Size 20 pinion bb retainer
	861-0900	Size 40 pinion bb retainer
26	897-4200	Ball bearing
26a	897-4500	Size 20- ball bearing
27	887-3200	Size 20 anti-reverse stem
	887-4300	Size 40 anti-reverse stem
28	861-1600	Spacer washer
29	888-9411	Size 20 anti-reverse spring assembly
29a	853-9900	Size 40 anti-reverse actr spring
30	893-4000	Size 20 anti-reverse actuator lace
	861-1500	Size 40 anti-reverse actuator lace
31	850-5300	Anti-reverse on-off spring
32	888-9412	Body screws
33	888-9414	Size 20 handle assembly
	888-9415	Size 40 handle assembly
34	888-9416	Size 20 body cover assembly
	888-9417	Size 40 body cover assembly
35	888-9418	Size 20 brass pinion
	888-9419	Size 40 brass pinion
36	859-0300	Size 20 drive gear
	861-1300	Size 40 drive gear
37	850-5600	Spacer- drive gear
38	887-3000	Size 20 oscillation gear assembly
	887-3900	Size 40 oscillation gear assembly
39	887-2900	Size 20 oscillation main gear
	887-4000	Size 40 oscillation main gear
40	887-3300	Size 20 oscillation planetary gear
	887-4100	Size 40 oscillation planetary gear
41	889-2500	Size 20 oscillation slider
	892-8800	Size 40 oscillation slider
42	889-2600	Size 20 main shaft keeper
	892-8900	Size 40 main shaft keeper
43	850-1900	Screw- oscillation
44	888-9421	Size 20 drag washer
	888-9422	Size 40 drag washer kit
45	889-3800	Size 20 drag knob screw
	850-7000	Size 40 drag knob screw
46	831-1400	Washer- drag knob
47	888-9519	Size 20 drag knob
	888-9521	Size 40 drag knob
48	889-3300	Size 20 drag nut
	865-1900	Size 40 drag nut
49	889-3200	Size 20 drag spring
	865-1800	Size 40, drag spring
50	889-2700	Size 20 drag cup
	865-1700	Size 40 drag cup
51	888-9423	Size 20 anti-reverse switch
	888-9424	Size 40 anti-reverse switch
52	888-9425	Handle nut
53	888-9427	Size20 body
	888-9428	Size40 body