




Please order by parts number, not key number  
Veuillez indiquer le numéro de la pièce.

BAITCASTING REEL

# EXCELER 100P

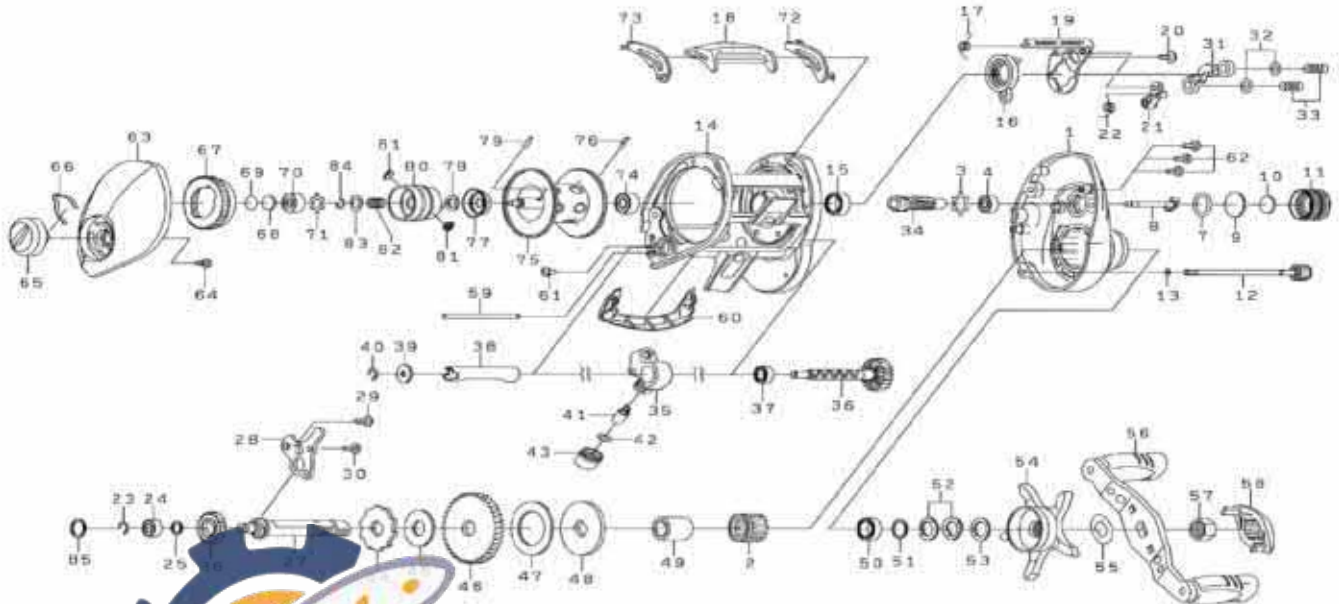

| Key No. | Parts No. | Parts Name                     | Key No. | Parts No. | Parts Name                 |
|---------|-----------|--------------------------------|---------|-----------|----------------------------|
| 1       | H00-0622  | Right side plate               | 40      | 320-5901  | Worm shaft retainer        |
| 2       | G93-0501  | Roller clutch                  | 41      | F51-6501  | Line guide part            |
| 3       | H18-0501  | Bearing retainer (A)           | 42      | 373-1300  | Line guide washer          |
| 4       | B35-8607  | Ball bearing (A)               | 43      | F40-2601  | Pawl cap                   |
| 7       | B05-5204  | "O" ring (A)                   | 44      | G93-4301  | Clutch wheel               |
| 8       | G93-1001  | Pinion shaft                   | 45      | G93-4401  | Drive shaft washer         |
| 9       | 375-7401  | Spool adjusting cap metal      | 46      | H49-8401  | Drive gear (B)             |
| 10      | B17-5503  | Spacer (A)                     | 47      | G93-4601  | Drag washer                |
| 11      | H21-3601  | Cast control cap               | 48      | G93-4701  | Key washer                 |
| 12      | G93-1101  | Right side plate screw (A)     | 49      | G93-4801  | Gear shaft collar          |
| 13      | B85-3101  | "O" ring (B)                   | 50      | B86-1704  | Ball bearing (B)           |
| 14      | H01-3414  | Frame assembly                 | 51      | B55-3801  | Bearing washer             |
| 15      | B86-1704  | Ball bearing (B)               | 52      | 150-8901  | Drag spring washer         |
| 16      | G93-1601  | Clutch cam (A)                 | 53      | 373-7810  | Spacing sleeve             |
| 17      | G93-1701  | Clutch cam spring (A)          | 54      | H10-8901  | Star drag                  |
| 18      | G93-1801  | Clutch lever                   | 55      | 150-9001  | Friction washer            |
| 19      | G93-1901  | Clutch cam (B)                 | 56      | H01-3802  | Handle assembly            |
| 20      | 352-2501  | Clutch cam screw               | 57      | F84-9903  | Handle nut                 |
| 21      | G93-2001  | Clutch trip lever              | 58      | G96-9901  | Handle nut plate           |
| 22      | G93-2101  | Clutch cam spring (B)          | 59      | H00-2401  | Stabilizer bar             |
| 23      | 320-8002  | Retainer (A)                   | 60      | H01-4202  | Front plate                |
| 24      | B35-8607  | Bell bearing (A)               | 61      | G61-1501  | Front plate screw          |
| 25      | E09-6501  | Washer (A)                     | 62      | 351-1001  | Right side plate screw (B) |
| 26      | G93-2201  | Drive gear (A)                 | 63      | H19-0401  | Left side plate            |
| 27      | G93-2301  | Drive shaft                    | 64      | F21-2201  | Set plate screw            |
| 28      | G93-2401  | Drive shaft retainer           | 65      | G93-6209  | Brake adjusting knob       |
| 29      | 352-2501  | Drive shaft retainer screw (A) | 66      | H08-4401  | Brake click spring         |
| 30      | 351-1001  | Dave shaft retainer screw (B)  | 67      | H02-9701  | Magnet holder              |
| 31      | G93-3501  | Yoke                           | 68      | 375-7411  | Spacer (B)                 |
| 32      | B41-1706  | Yoke washer                    | 69      | 375-7404  | Spacer (C)                 |
| 33      | G85-0301  | Yoke spring                    | 70      | G51-1505  | Ball bearing (C)           |
| 34      | H49-8301  | Pinion gear                    | 71      | H18-0501  | Bearing retainer (B)       |
| 35      | H00-1703  | Line guide                     | 72      | H01-3501  | Spacer (D)                 |
| 36      | G93-9901  | Worm shaft assembly            | 73      | H01-3601  | Spacer (E)                 |
| 37      | G05-1701  | Bearing (A)                    | 74-84   | Z01-9744  | Spool assembly             |
| 38      | G93-4201  | Level wind guard               | 85      | H30-6600  | Washer (B)                 |
| 39      | F65-5501  | Worm shaft washer              |         |           |                            |