
MAXXUM 101
101 lbs Thrust
36 Volt 46 Amps
42" SHAFT

for use with "M" serial numbers
2-year warranty

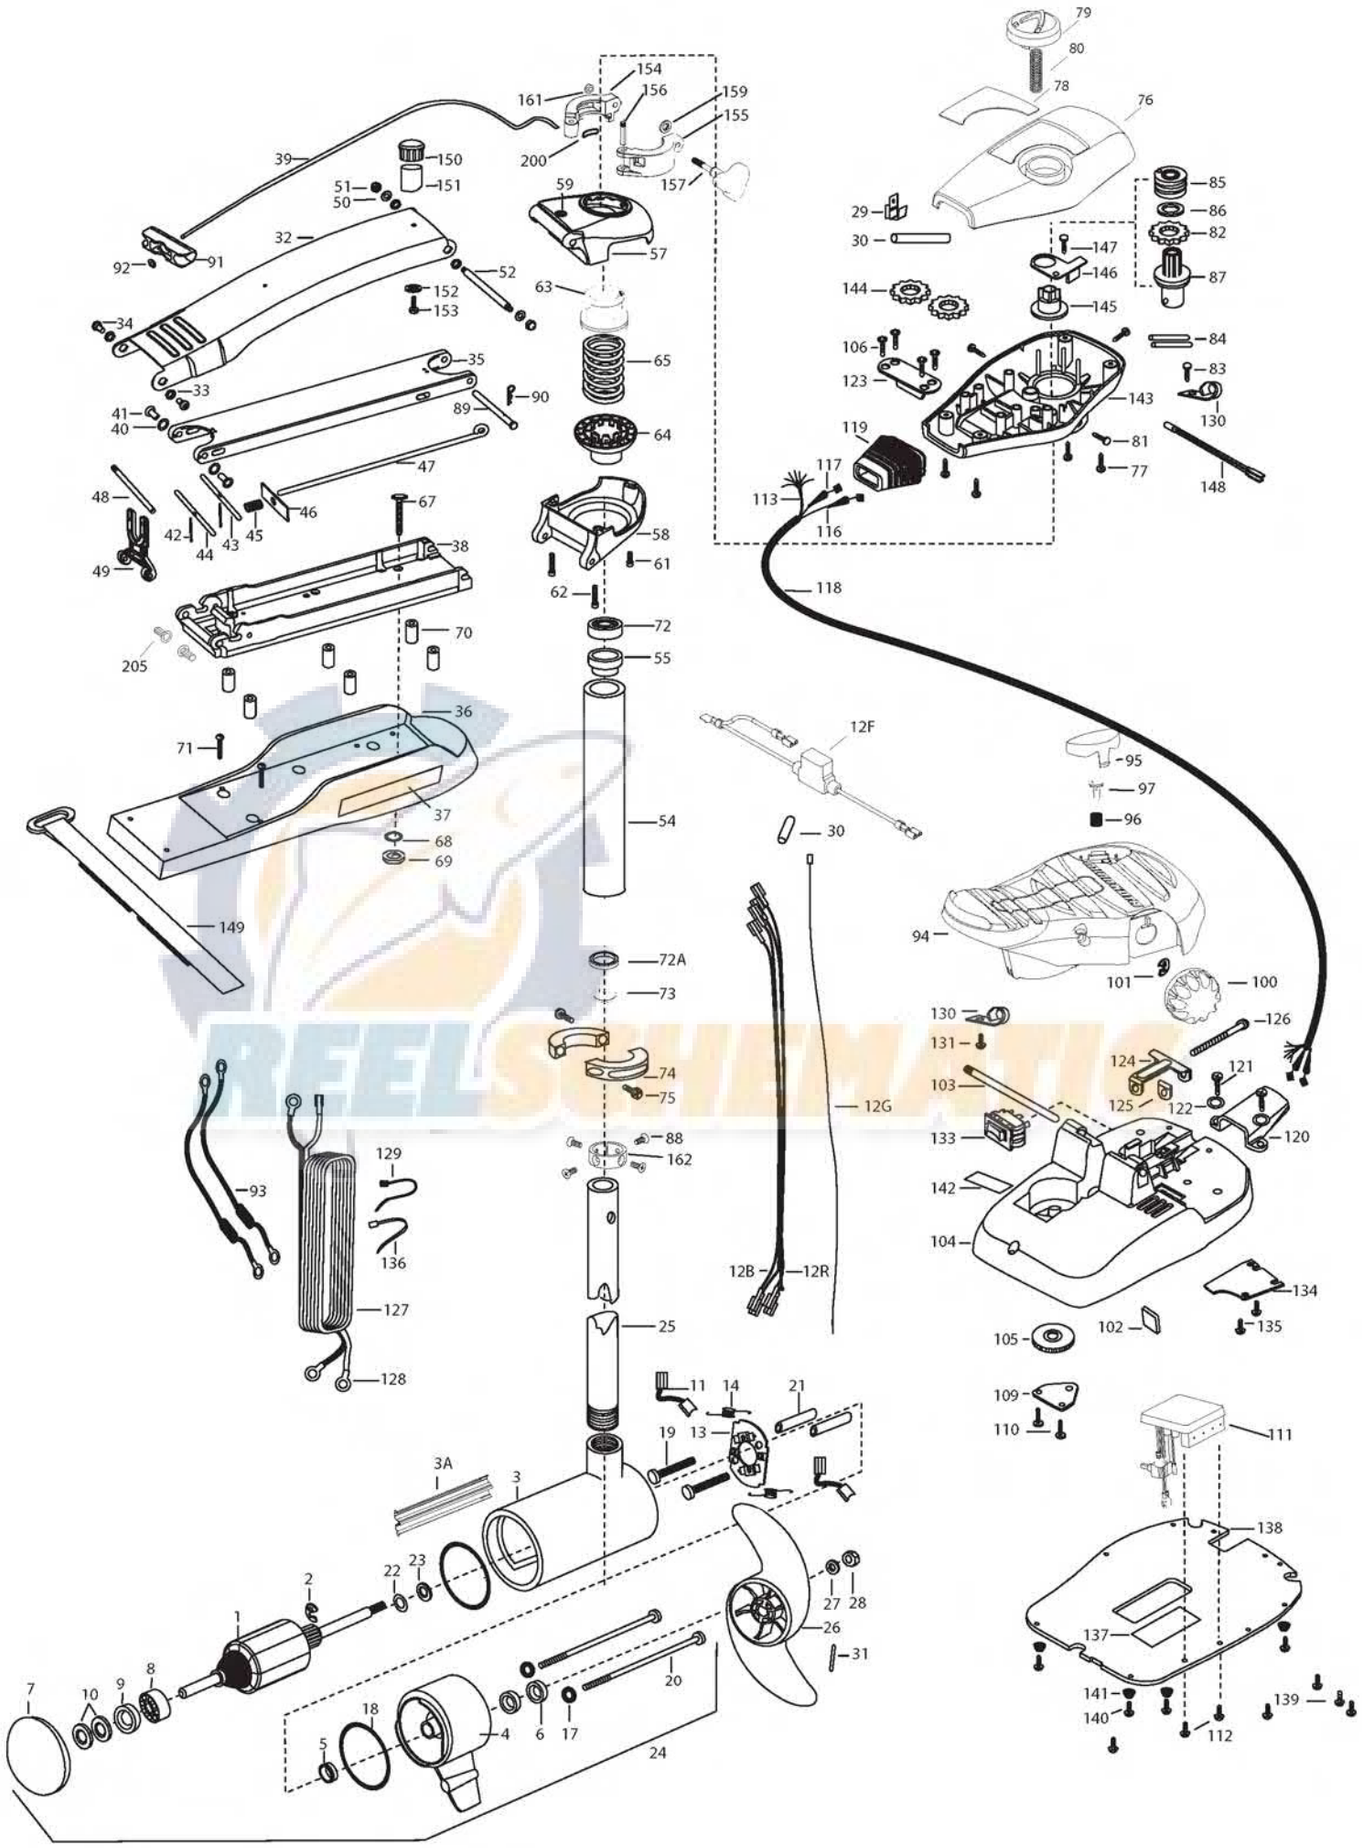

1	2-100-216	ARMATURE ASSEMBLY 36V 4 VARS TXT
2	788-040	RETAINING RING
3	2-200-110	CENTER HOUSING ASSEMBLY 4.0 FW TXT 101
3A	582-014	CLIP, RETAINING, US2
4	2-300-160	BRUSH END HOUSING ASSEMBLY 4.0 FW TXT
5	144-017	BEARING -FLANGE (SERVICE ONLY)
6	880-025	SEAL [2.EA]
7	421-276	PLAIN END HOUSING ASSEMBLY 4.0
	9421-284	PLAIN END HOUSING ASSEMBLY 4.0 US2 42”
8	140-010	BALL BEARING
9	990-045	THRUST SPACER
10	992-010	SPRING WASHER [2.EA]
11	186-094	BRUSH 4” [2.EA]
12R	640-014	BRUSH WIRE- BLACK 10 AWG 54 1/2
12B	640-118	BRUSH WIRE- RED 10 AWG 56 XLP
12G	640-315	GROUND WIRE42” (US MOTORS ONLY)
12F	2218200	FUSE HOLDER (US MOTORS ONLY)
13	738-004	BRUSH PLATE - 4” TERMINAL
14	975-041	SPRING -TORSION [2.EA]
17	701-009	O-RING -THRU BOLT [2.EA]
18	701-043	O-RING [2.EA]
■	2889460	SEAL & ORING KIT
19	830-027	SCREW -SELF TREADED 10-32 X 2” [2.EA]
20	830-096	THRU BOLT 12-24 X 11.56” SS [2.EA]
21	973-025	SPACER -BRUSH PLATE [2.EA]
22	990-051	WASHER-THRUST, STEEL
23	990-052	WASHER- NYLATRON
24	2316280	MOTOR ASSEMBLY 36V 4 VARS TXT
	2326285	MOTOR ASEMBLY 36V 4 VARS. TXT US2
25	2032003	TUBE (COMP) 4 HOLE 42”
■	1378132	PROPELLER KIT
26	2331160	PROPELLER (W.WEDGE 2)
27	2091701	WASHER-PROP (LARGE) MAX 101
28	2093101	NUT-PROP (LARGE) MAX 101
29	2020713	TERMINAL- ADAPTOR MAX50/S
30	2335400	SHRINK TUBE 1/4ODX2” [2EA.]
31	2262658	PROP PIN
■	2991840	MOUNT, BOW ASSY, W/O BGRD FW STD MAX
32	2264241	ARM-UPPER FW STD
33	2293501	BUSHING, STAINLESS STEEL [4.EA]
34	2263500	BOLT, SHOULDER [2.EA]
35	2994307	ARM-LOWER ASSEMBLY, STD, FW EXT
36	2263912	MOTOR REST STD, MAXXUM
37	2265514	DECAL- MOTOR REST [2.EA]
38	2773987	BOWPLATE/INSERT- STD FW
39	2251601	ROPE 40” MAXXUM
40	2267318	BEARING NYLINER [2.EA]
41	2261708	WASHER-3/8 X 1/2 X.010” SS [2.EA]
42	2152610	SPRING-PIN (LOCKBAR) [2.EA]
43	2233600	LOCK BAR- (BOW MOUNT)
44	2233602	LOCK BAR, REAR - ZINC
45	2152700	SPRING -LOCKBAR
46	2262703	SPRING STOP
47	2153602	EYE SHAFT -2LOCKBAR STD PLTD
48	2260506	HINGE-PIN HEADLESS ZINC
49	2293811	YOKE, MAXXUM MOUNT POLYPROPYLENE
50	9908236	WASHER SS [2.EA]
51	2223100	NUT- TENSION 5/16-18 SS [2.EA]
52	2262605	PIN- BWGRD UPPER THREADED ZP
■	2772085	TUBE W/BEARING RACE ASSEMBLY
54	2272085	TUBE OUTER -21” 4 HOLES
55	2266260	BEARING RACE- 565T
■	2991763	BOWGUARD ASSEMBLY-FT CT FW
57	2772319	BRACKET BASE TOP/EYELET
58	2991770	BRACKET BOTTOM/BEARING ASSEMBLY
59	2772352	EYELET KIT -ROPE
61	2263423	SCREW 5/16-18 X 1” SHCS ZINC
62	2263425	SCREW 5/16-18 X 2-1/2” SHCS [2.EA]
63	2071541	SPRING-SLEEVE UPPER
64	2071535	SPRING SLEEVE, LOWER
65	2262706	SPRING, BOWGUARD, NIK
■	2994830	BAG ASSEMBLY-MAXXUM
*67	2263431	SCREW 1/4-20 X 3.5” PPH [6.EA]
*68	2261713	WASHER-1/4” FLAT S/S [6.EA]
*69	2263103	NUT -NYLOCK JAM 1/4-20 S/S [6.EA]
70	2261505	SPACER, MOTOR REST [6.EA]
71	2263434	SCREW, 8-18 X 1” PPH [2.EA]
72	2266000	BEARING, BALL-STEEL
72A	2266116	BEARING, CARTRIDGE
73	2266001	BEARING, SPLIT RING
74	2261619	COLLAR HALF-ZINC-2 PER
75	2263452	SCREW- 1/4-20X3/4 SHCP SS [2.EA]
76	2280201	CONTROL BOX COVER
77	2372100	SCREW-8-18 X 5/8” THD SS [4.EA]
78	2275606	DECAL COVER, MAXXUM 101
79	2990140	DIRECTIONAL INDICATOR
80	2282730	SPRING-INDICATOR
81	2053414	SCREW-8-32 X 1/2” TRI-LOBE [3.EA]
82	2267800	GEAR INDICATOR
83	2372100	SCREW-8-18 X 5/8” SS
84	2355410	SHRINK TUBE-3/8 OD X 2” [2.EA]
85	2232360	PULLEY-CABLE DRUM
86	2261730	WASHER-NYLON A/T
87	2996247	TOP BEARING RACE /PINION DRIVE ASSEMBLY
88	2223468	SCREW-8-32 X 7/16” ZINC PLATE [4.EA]
89	2262607	PIN- CLEVIS ZN PL
90	2260805	SPRING CLIP ZN PL
91	2150400	PULL-GRIP
92	2151700	WASHER-EYE SHAFT .562”
93	2998200	CIRCUIT BREAKER ASSEMBLY 36V-101 [2.EA]
94	2994496	FOOT PEDAL/PLUG ASSEMBLY
95	2993705	PUSH-BUTTON MAGNET ASSEMBLY
96	2302732	SPRING-LOWER PEDAL SS
97	2260810	CLIP, REED SWITCH
100	2280115	KNOB-SPEED CONTROL
101	2263000	E-RING TRU-ARC#5133-43
102	2266413	TENSION SCREW PLATE FT
103	2260511	PIN-PIVOT A/T FT PDL
104	2992102	FOOT PEDAL BASE/PIN ASSEMBLY
105	2262301	PULLEY FOOT PEDAL
106	2223430	SCREW- #8 X3/4” PPH TYPE 25 SS [4.EA]
109	2266401	COVER-PULLEY STAMPING
110	2301310	SCREW-8-18 X 1/2” SS [2.EA]
111	2264056	CONTROL BOARD ASSY 24-36V MAX
112	2223455	SCREW 10-32 X 1/2 [2.EA]
113	2261220	WIRE HARNESS MAX 101
116	2267505	CABLE ASSEMBLY-RIGHT 5’
117	2267515	CABLE ASSEMBLY-LEFT 5’
118	2265430	CABLE JACKET 5’
119	2265110	BOOT-CONTROL BOX
120	2265115	BOOT-FOOT PEDAL BASE
121	2372100	SCREW-8-18 X 5/8”,THDT [2.EA]
122	2261714	WASHER-MAXXUM FT PDL [2.EA]
123	2261901	BRACKET-CONDUIT AT/MAX
124	2263210	BRACKET-CONDUIT ADJUST
125	2263140	NYLOCK KEEPER
126	2263466	SCREW-1/4-20 X 2” STL PPH
127	2261238	LEADWIRE MAX
128	2020700	TERMINAL RING, 3/8” [2.EA]
129	2256300	TIE WRAP-5.5” BLACK
130	2263201	CLAMP WIRE HARNESS MICRO [2.EA]
131	2332103	SCREW-6-20 X 3/8” THD
133	2254031	SWITCH-MOM/OFF/COM
134	2266412	SWITCH PLATE, FT PEDAL
135	2332103	SCREW-6-20 X 3/8” THD [2.EA]
136	2256301	TIE WRAP-5.5’ WHITE [2.EA]
137	2365107	INSULATING PAD 2.3 X 3.2”
138	2264511	BOTTOM PLATE, MAX 101
139	2372100	SCREW-8 X 5/8” SS [5.EA]
140	2263455	SCREW #12-14 X 1/2” THR FRM [4.EA]
141	2265126	BUMPER PAD, FOOT PEDAL [4.EA]
142	2266610	DECAL-ON/OFF SWITCH
143	2282500	CONTROL BOX
144	2267800	GEAR-INDICATOR [2.EA]
145	2262221	INDICATOR-DRIVE
146	2261905	BRACKET/INDICATOR
147	2301310	SCREW-8-18 X 1/2” SS
148	2264015	LIGHT/INDICATOR
149	2263802	STRAP- HOLD DOWN 30.5 VELCRO]
■	2994841	BAG ASSEMBLY- MAXXUM STABILIZER
*150	2268400	SHAFT- SUPPORT
*151	2268401	BUMPER- SHAFT
*152	2263465	SCREW 1/4-10X1” HHD Z/P
*153	2261716	WASHER- CONICAL ID.28 SS
■	2991550	CLAMP COLLAR ASSEMBLY
154	2071550	CLAMP COLLAR “A”
155	2071555	CLAMP COLLAR “B”
156	2072621	PIN-KNURLED
157	2281505	KNOB-CLAMP COLLAR
159	2071718	WASHER #10 NYLON RETAINING
161	2073102	NUT - HEX 1/4 - 28 SS
162	2071560	SPLIT COLLAR
163	2211410	EXTENSION CABLE US2
200	2075120	URETHANE PAD
205	2261540	INSERT-THREADED BOWPLATE (2 EA)

* This item is part of an assembly. This item cannot be sold separately due to machining and /or assembly that is required.

THIS IS A UNIVERSAL MULTI-VOLTAGE DIAGRAM. DOUBLE CHECK YOUR MOTORS VOLTAGE FOR PROPER CONNECTIONS
CECI EST UN SCHÉMA À TENSION MULTIPLE UNIVERSEL. REVÉRIFIEZ LA TENSION DE VOTRE MOTEUR POUR BIEN LE BRANCHER.

Maxxum 101 is 36-volts only!

