




PARTS LIST FOR MODELS 113H2 (1153838), 113H2LW (1153841), AND 113H2SP (1153840)

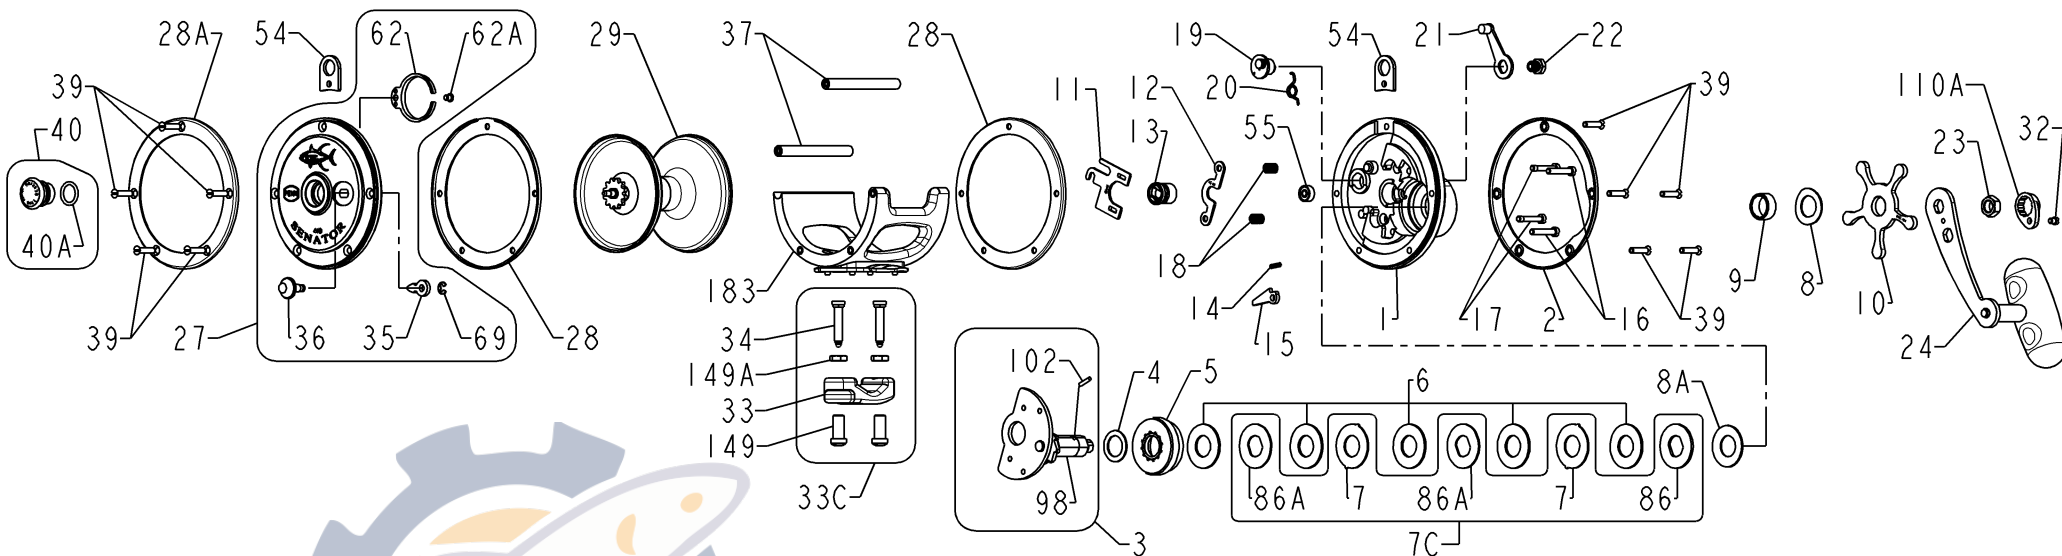

KEY NO.	113H2 PART NO.	113H2LW PART NO.	113H2SP PART NO.	DESCRIPTION	KEY NO.	113H2 PART NO.	113H2LW PART NO.	113H2SP PART NO.	DESCRIPTION
1	1197481	1197481	1197481	1-113H2 Right Side Plate	27	1197521	1197521	1197521	27-113H2 Left Side Plate
2	1197489	1197489	1197489	2-113H2O Outer Right Side Ring	28	1197488	1197488	1197488	2-113H2I Inner Side Ring (2 req.)
3	1197495	1197495	1197495	3-113H2 Bridge Assembly	28A	1197527	1197527	1197527	28-113H2 Outer Left Side Ring
4	1180775	1180775	1180775	4-349 Fiber Washer	29	1191514	1191516	1191515	29-113H2, H2W, H2SP Spool
5	1180843	1180843	1180843	5-113H Main Gear	32	1182708	1182708	1182708	32-15 Handle Nut Cap Screw
6	1180909	1180909	1180909	6-113H Drag Washer (5 req.)	33	1182754	1182754	1182754	33-113 Rod Clamp
7	1181029	1181029	1181029	7-970 Metal Ear Drag Washer (2 req.)	33C	1197533	1197533	1197533	33C-112H2 Rod Clamp Kit
7C	1197506	1197506	1197506	7C-113H2 Metal Drag Washer Set	*	*1182783	*1182783	*1182783	*33R-200 Ringed Rod Clamp (Optional)
8	1181077	1181077	1181077	8-349Tension Spring	34	1182786	1182786	1182786	34-016VS Clamp Screw (2 req.)
8A	1181627	1181627	1181627	18-970 Tension Spring	35	1182901	1182901	1182901	35-060 Click Tongue
9	1197507	1197507	1197507	9-113H2 Spacing Sleeve	36	1182989	1182989	1182989	36-113 Click Button
10	1181197	1181197	1181197	10-349 Star Drag Wheel	37	1183066	1183067	1183066	37-113, 113HLW Frame Post (2 req.)
11	1181233	1181233	1181233	11-113 Eccentric Jack	39	1197540	1197540	1197540	39-112H Side Plate Screw (10 req.)
12	1181257	1181257	1181257	12-60 Pinion Yoke	40	1197542	1197542	1197542	40N-113HL Left Side Bearing Assembly
13	1181317	1181317	1181317	13-113H Pinion	40A	1184522	1184522	1184522	120-113H Left Side Bearing O-Ring
14	1181393	1181393	1181393	14-99 Dog Spring	54	1183856	1183856	1183856	54-113 Harness Lug (2 req.)
15	1181435	1181435	1181435	15-113H Dog	55	1183880	1183880	1183880	55-113H Right Side Bearing
16	1181570	1181570	1181570	16-113H Lower Bridge Screw (2 req.)	62	1184028	1184028	1184028	62-309 Click Spring
17	1181595	1181595	1181595	17-113H Upper Bridge Screw (2 req.)	62A	1184048	1184048	1184048	63-209 Click Spring Screw
18	1181615	1181615	1181615	18-60 Clutch Spring (2 req.)	69	1184129	1184129	1184129	69B-600 Retaining Ring
19	1181662	1181662	1181662	19-113 Eccentric	86	1184253	1184253	1184253	86-113H Metal Keyed Drag Washer
20	1288917	1288917	1288917	20-113H2 Eccentric Spring	86A	1184270	1184270	1184270	86-970 Metal Keyed Drag Washer (2 req.)
21	1181835	1181835	1181835	21-66 Eccentric Lever	98	1197430	1197430	1197430	98-113H Gear Sleeve
22	1197513	1197513	1197513	22-112H2 Eccentric Screw	102	1192230	1192230	1192230	102-113 Gear Sleeve Pin
23	1181950	1181950	1181950	23-555 Handle Nut	110A	1184442	1184442	1184442	110A-555 Handle Nut Cap
24	1197517	1197517	1197517	24-113H2 Handle Assembly	149	1184702	1184702	1184702	149-045 Clamp Nut (2 req.)
					149A	1184706	1184706	1184706	149-200 Hex Nut (2 req.)
					183	1198906	1198939	1198908	183N-113HL, HLW, HSP Frame Asm.

*Not Shown