




# CABO CLW20PTS & CLW30PTS

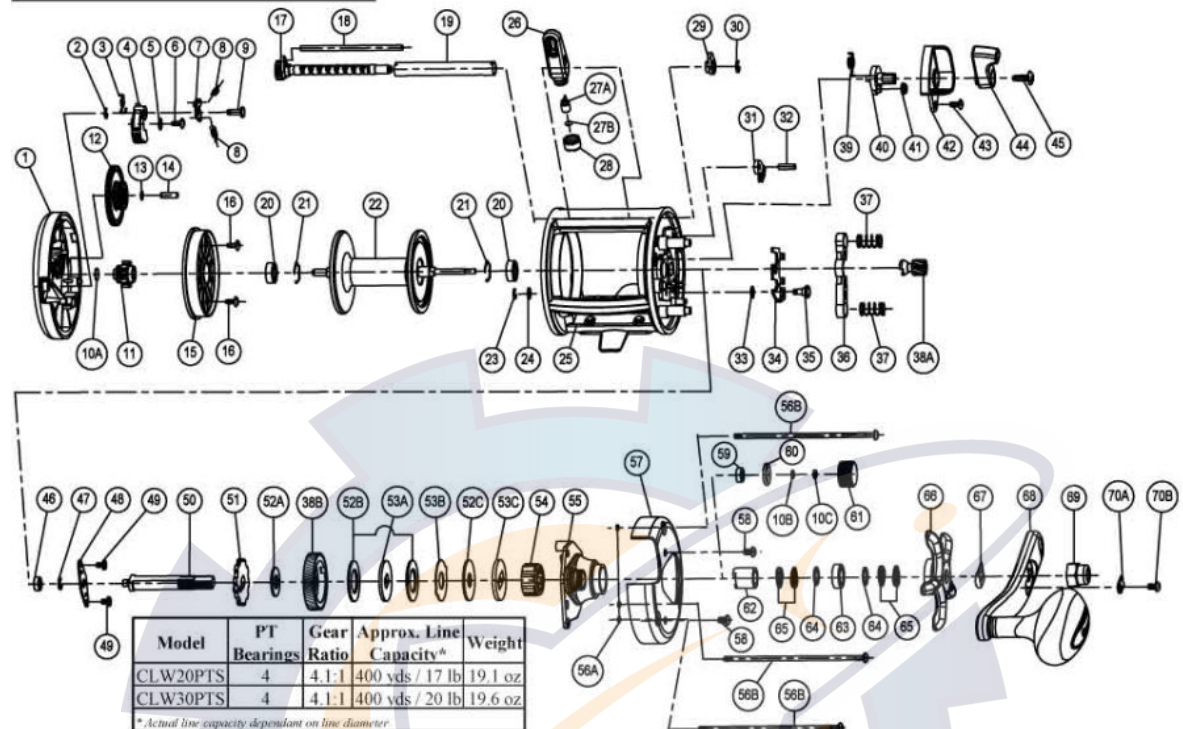

Model	PT Bearings	Gear Ratio	Approx. Line Capacity*	Weight
CLW20PTS	4	4.1:1	400 yds / 17 lb	19.1 oz
CLW30PTS	4	4.1:1	400 yds / 20 lb	19.6 oz

\* Actual line capacity dependent on line diameter

Quantum Cabo CLW20PTS/CLW30PTS Part List

Key #	Description	Part No.		Key #	Description	Part No.	
		CLW20PTS	CLW30PTS			CLW20PTS	CLW30PTS
1	Left Side Cover Assembly	KV323-03	↔	39	Release Slider Cam Spring	KV104-01	↔
2	Click Pawl Post E-Clip	NX092-01	↔	40	Release Slider Cam	KV141-01	↔
3	Bait Click Lever Spring	KV022-01	↔	41	Release Slider Guide Bushing	JX068-01	↔
4	Bait Click Lever	LV109-01	↔	42	Release Lever Cover	LV143-01	↔
5	Bait Click Lever Washer	KV038-01	↔	43	Release Slider Screw	XX050-01	↔
6	Bait Click Lever Screw	AV125-01	↔	44	Release Lever	LV142-01	↔
7	Bait Click Pawl	KV114-01	↔	45	Release Lever Screw	KV053-01	↔
8	Bait Click Spring	KV110-01	↔	46	Crank Shaft Bushing (L)	JX017-01	↔
9	Bait Click Pawl Post	KV098-01	↔	47	Crank Shaft Retainer E-Clip	QW120-01	↔
10	Spool Tension Washer Kit includes 10A-Spool Shaft Washer 10B-Spool Tension Washer 10C-Cushion Washer	XX4038-01	↔	48	Crank Shaft Retainer	JX002-01	↔
11	Oscillate Drive Gear	KV112-01	↔	49	Crank Shaft Retainer Screw	JX107-01	↔
12	Oscillate Idle Gear	KV127-01	↔	50	Crank Shaft	NV008-03	↔
13	Oscillate Idle Gear Washer	KV121-01	↔	51	Ratchet	KV083-01	↔
14	Oscillate Idle Gear Post	JX098-01	↔	52	Drag Disc Kit includes 52A-Ratchet Washer 52B-Drag Disc~A~ 52C-Drag Disc~B~	AV4059-01	↔
15	Spool Cover	KV051-01	↔	53	Drag Washer Kit includes 53A-Drag ~D- Washer (U) 53B-Drag Key Washer 53C-Drag ~D- Washer (U)	LV4045-01	↔
16	Spool Cover Screw	AV125-01	↔	54	One Way Bearing	LV063-01	↔
17	Worm Shaft Assembly	KV372-01	LV372-01	55	Crank Shaft Guide Assembly	LV366-01	↔
18	Line Guide Carrier Guide	KV061-01	LV061-01	56	Side Cover Screw Kit includes 56A-Thumb Screw O-ring 56B-Button Head Cap Screw	LV4124-02	LV4124-01
19	Worm Shaft Guide	KV016-01	LV016-01	57	Right Side Cover	KV024-09	KV024-11
20	Spool Shaft Bearing	CW017-02	↔	58	Right Side Cover Screw	KV154-01	↔
21	Clip Ring	KV080-01	↔	59	Bushing - Tension Knob	JX117-01	↔
22	Spool Assembly	KV321-02	LV321-02	60	Tension Knob O Ring	QW101-01	↔
23	Kick Lever Guide Post E-Clip	NX092-01	↔	61	Spool Tension Knob Kit includes 61-Spool Tension Knob 10-Spool Tension Washer Kit	KV4033-01	↔
24	Kick Lever Guide Post Washer	XX035-01	↔	62	One Way Bearing Sleeve	PV052-01	↔
25	Frame Assembly	N/A	N/A	63	Crank Shaft Bearing	BL157-01	↔
26	Line Guide Carrier Assembly	KV347-01	↔	64	Crank Shaft Washer	JX038-01	↔
27	Line Guide Pawl Kit includes 27A-Line Guide Pawl 27B-Line Guide Pawl Washer	JX4006-01	↔	65	Spring "D" Washer	JX046-01	↔
28	Line Guide Carrier Screw	JX007-02	↔	66	Star Drag	LV055-01	↔
29	Worm Shaft Bushing	JX067-01	↔	67	Handle Washer	NX054-01	↔
30	Worm Shaft E-Clip	QW120-01	↔	68	Handle Assembly	LV318-01	↔
31	Anti Reverse Pawl Assembly	KV363-01	↔	69	Handle Nut	LV003-01	↔
32	Anti Reverse Pawl Post	JX098-01	↔	70	Handle Nut Retainer Kit includes 70A-Handle Nut Retainer 70B-Handle Nut Retainer Screw	LV4034-01	↔
33	Release Slider Spacer	KV111-01	↔				
34	Release Slider	KV039-01	↔				
35	Kick Lever Guide Post	JX102-01	↔				
36	Pinion Yoke	KV025-01	↔				
37	Pinion Yoke Spring	JX040-01	↔				
38	Gear Set includes 38A-Pinion Gear 38B-Drive Gear	PV4012-01	↔				