
www.reelschematic.com

41/70

Shakespeare®

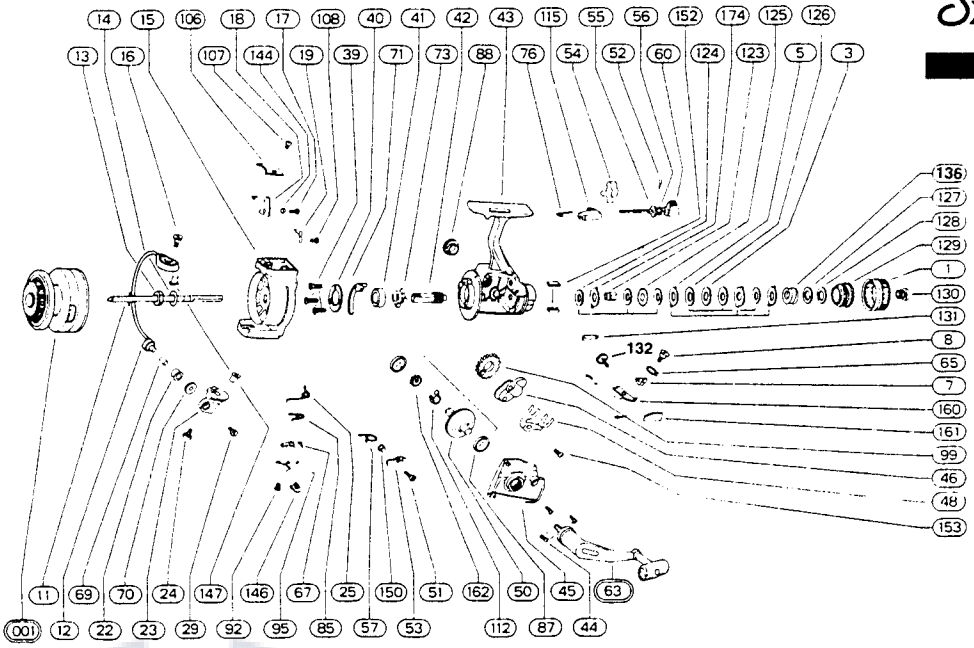

PART NO.	DESCRIPTION
41/70-1	Drag Nut
41/70-3	Metal Washer
41/70-5	Eared Washer
41/60-7	Click Spring
41/60-8	Click Screw
41/70-11	Main Shaft
41/70-12	Bail Wire
41/70-13	Pickup Nut
41/70-14	Pickup Washer
41/70-15	Pickup Housing
41/60-16	Bail Screw
41/70-17	Trip Lever Screw (see 79-58-0267-01)
41/70-18	Trip Lever
41/70-19	Trip Lever Spring
41/60-22	Line Roller
41/70-23	Bail Bracket
41/50-24	Bail Bracket Screw
41/70-25	Bail Spring
41/60-29	Roller Screw
41/70-30	Retainer Screw (see 79-58-0277-01)
41/70-40	Bearing Retainer
41/70-41	Ball Bearing
41/70-42	Pinion
41/70-43	Frame Assembly
41/50-44	Cover Screw
41/70-45	Cover Plate
41/70-46	Level Wind Yoke
41/70-48	Retainer Clip
41/70-50	Drive Gear
41/70-51	N/R Pawl Screw (see 79-58-0276-01)
41/70-52	Retainer Clip (see 79-15-0022-01)
41/70-53	Anti-Reverse Pawl
41/50-54	A/R Cam Spring
41/50-55	A/R Cam
41/50-56	A/R Cam Washer
41/50-57	Non-Reverse Spring
41/70-60	Anti-Reverse Shaft (see 79-60-0068-01)
41/70-63	Crank Assembly

PART NO.	DESCRIPTION
41/70-67	Bail Fold Lever
41/60-69	Line Roller Sleeve
41/60-70	Line Roller Cup
41/70-71	Bail Brake
41/70-73	Ratchet
41/60-76	Throwout Arm
41/60-85	Release Button Spring
41/70-87	Ball Bearing
41/70-88	Crank Cap
41/70-92	Plate Screw (see 79-58-0279-01)
41/70-95	Bail Spring Plate
41/70-99	Level Wind Gear
41/60-106	Trip Lever Plate
41/70-107	Plate Screw (see 79-58-0274-01)
41/70-108	Trip Spring Screw (see 79-58-0278-01)
41/70-112	Silent N/R Cam
41/70-115	Silent N/R Arm
41/70-123	Drag Shaft
41/70-124	Vinyl Washer
41/70-125	Latch Washer
41/70-126	Rulon Washer
41/70-127	Metal Washer
41/70-128	Nylon Washer
41/70-129	Drag Ratchet
41/60-130	Drag Nut Screw
41/70-131	Lever
41/70-132	Lever Pin
41/70-135	Drag Spring
41/50-144	Trip Lever Bushing
41/70-146	Bail Fold Button (see 79-10-0046-01)
41/50-147	Threaded Sleeve
41/70-150	N/R Pawl Spacer (see 79-65-0005-01)
41/60-152	Housing Protector
41/50-153	Level Wind Screw
41/60-160	Click
41/60-161	Click Plate
41/70-162	Gear
41/60-174	Earred Washer