
# SHIMANO

## Saragosa

## SRG-5000SW

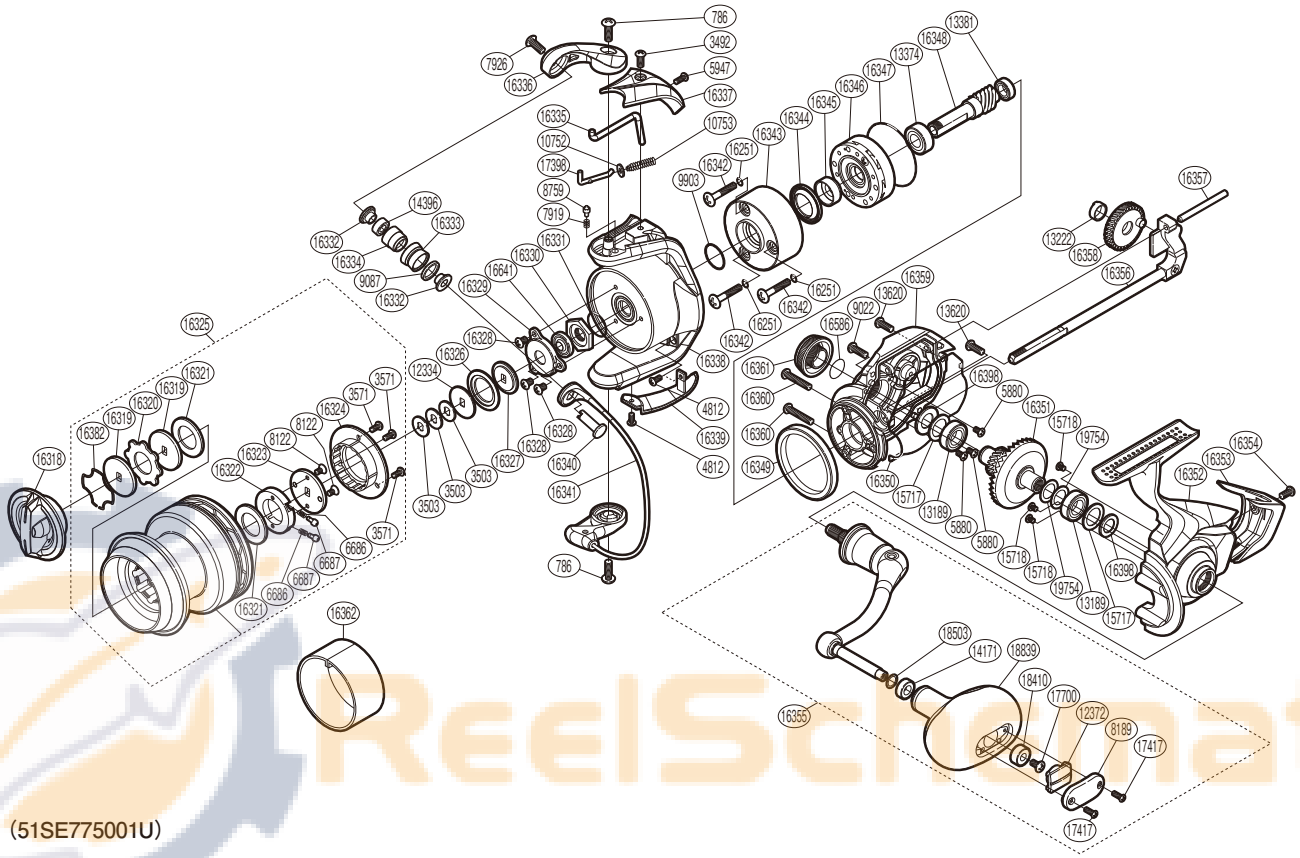

(51SE775001U)

| # | Part No. | Description | # | Part No. | Description | # | Part No. | Description |
|---|---|---|---|---|---|---|---|---|
| 786 | 103J1 | Screw | 16251 | 108WW | O Ring | 16347 | 10H4F | Roller Clutch Cover Seal |
| 3492 | 103DC | Screw | 16318 | 102EB | Drag Knob | 16348 | 10BZ4 | Pinion Gear |
| 3503 | 10BXK | Spool Washer | 16319 | 10BC8 | Key Washer | 16349 | 104G7 | Friction Ring |
| 3571 | 10MPP | Screw | 16320 | 102Z8 | Eared Washer | 16350 | 10CDA | Body Seal |
| 4812 | 103N8 | Screw | 16321 | 10347 | Drag Washer | 16351 | 10EK8 | Drive Gear |
| 5880 | 10MT3 | Screw | 16322 | 10JJW | Drag Click Holder | 16352 | 104CY | Side Cover |
| 5947 | 103NH | Screw | 16323 | 109HG | Drag Click Holder Cover | 16353 | 10NKR | Rear Protector |
| 6686 | 10JXE | Click Spring | 16324 | 10C1P | Drag Cover | 16354 | 103CJ | Screw |
| 6687 | 10PEH | Click Pin | 16325 | 10HSB | Spool Assembly | 16355 | 10N7C | Handle Assembly |
| 7919 | 1077Q | Click Spring | 16326 | 10J6D | Spool Support Seal | 16356 | 10NF5 | Main Shaft Assembly |
| 7926 | 103HN | Screw | 16327 | 103MY | Spool Support | 16357 | 1035G | Oscillating Guide |
| 8122 | 10MGD | Screw | 16328 | 10LSM | Screw | 16358 | 10G9P | Oscillating Gear |
| 8189 | 108SM | Handle Knob I.D. Plate | 16329 | 10K32 | Nut Lock Plate | 16359 | 10B8X | Body |
| 8759 | 106UX | Click Pin | 16330 | 10811 | Rotor Nut | 16360 | 10LZ7 | Screw |
| 9022 | 10LZJ | Screw | 16331 | 10EZA | O Ring | 16361 | 10N48 | Handle Screw Cap |
| 9087 | 10KFE | Line Roller Spacer | 16332 | 107X4 | Line Roller Washer | 16382 | 10B8P | Drag Washers Retainer |
| 9903 | 108WA | O Ring | 16333 | 10KUW | Line Roller | 16398 | 10CD1 | Bearing Water Proof |
| 10752 | 10TYE | Spring Guide A Support | 16334 | 107RN | Line Roller Bushing | 16586 | 10TZX | O Ring |
| 10753 | 10FVD | Bail Spring | 16335 | 106KM | Bail Trip Lever | 16641 | 107F7 | Bearing Water Proof |
| 12334 | 10HZW | Spool Support B | 16336 | 10KLG | Bail Arm | 17398 | 105LU | Bail Spring Guide A |
| 12372 | 10B97 | Handle Knob Seal | 16337 | 1087Y | Bail Spring Cover | 17417 | 10L1T | Screw |
| 13189 | 104PT | Ball Bearing | 16338 | 10PY7 | Rotor | 17700 | 10LFA | Screw |
| 13222 | 10JYG | Oscillating Gear Bushing | 16339 | 10MNB | Bail Hold Support Guard | 18410 | 10EU0 | Handle Knob Bushing A |
| 13374 | 104Q5 | Ball Bearing | 16340 | 10Q3G | Line Roller Support | 18503 | 101BD | Washer |
| 13381 | 104JT | Ball Bearing | 16341 | 1073F | Bail Assembly | 18839 | 10T7J | Handle Knob Assembly |
| 13620 | 10L6D | Screw | 16342 | 10A6S | Screw | 19754 | 10DKJ | Washer |
| 14171 | 104UJ | Handle Knob Bushing | 16343 | 10MH9 | Roller Clutch Water Proof Cover | | | |
| 14396 | 104VQ | Ball Bearing | 16344 | 10MH1 | Roller Clutch Water Proof | 16362 | 109UZ | Line Band (accessory) |
| 15717 | 10BGE | Washer | 16345 | 10K7R | Rotor Ring | | | |
| 15718 | 1055G | Screw | 16346 | 10QPE | Roller Clutch Assembly | | | |

Please note that the number of adjusting washers may not be the same as shown in the exploded views.
(Adjustment will vary with each individual product.)

(241030)_006