


SHIMANO

STELLA S A-RB

STL-1000

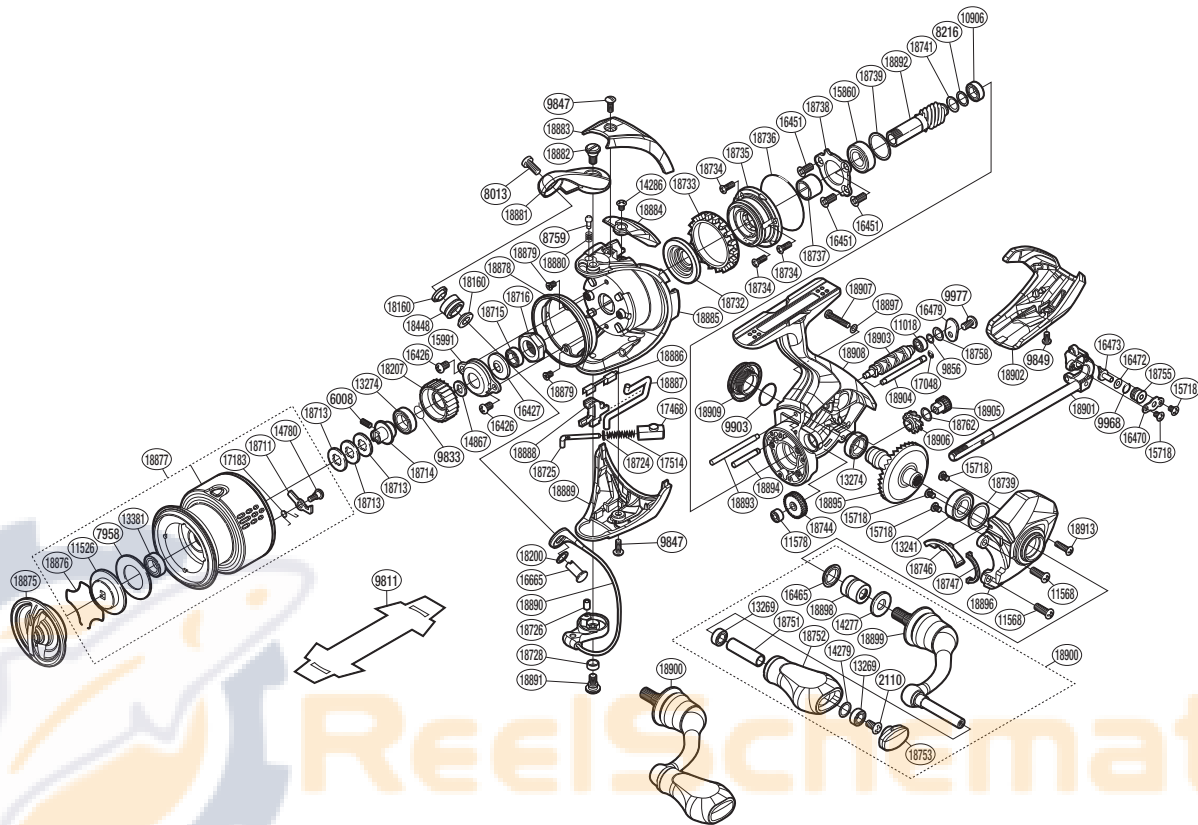

* (18735) Please send the equipment out to after-sales service for replacement of the roller clutch assembly.

(51SF14B010X)

Please note that the number of adjusting washers may not be the same as shown in the exploded views.
(Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
RD 2110	Screw	RD17048	O Ring	RD18879	Screw
RD 6008	Set Screw	RD17183	Drag Click Spring	RD18880	Click Spring
RD 7958	Drag Washer	RD17468	Bail Spring Guide B	RD18881	Bail Arm
RD 8013	Screw	RD17514	Bail Spring	RD18882	Screw
RD 8216	Washer	RD18160	Bearing Spacer	RD18883	Bail Spring Cover
RD 8759	Click Pin	RD18200	Washer	RD18884	Counterbalance Cover
RD 9833	Ratchet Spring	RD18207	Drag Click Ratchet	RD18885	Rotor
RD 9847	Screw	RD18448	Line Roller Set (With Bearing)	RD18886	Bail Trip Sheet
RD 9849	Screw	RD18711	Drag Click	RD18887	Bail Trip Lever
RD 9856	Washer	RD18713	Spool Washer	RD18888	Bail Trip Lever Cover
RD 9903	O Ring	RD18714	Bearing Bushing	RD18889	Bail Hold Support Guard
RD 9968	O Ring	RD18715	Main Shaft Spacer Assembly(With Bearing)	RD18890	Bail Assembly
RD 9977	Screw	RD18716	Rotor Nut	RD18891	Screw
RD10906	Ball Bearing	RD18724	Spring Guide A Support	RD18892	Pinion Gear *
RD11018	Ball Bearing	RD18725	Bail Spring Guide A	RD18893	Oscillating Guide A
RD11526	Key Washer	RD18726	Bail Spring Guide A Bush	RD18894	Idle Gear B Shaft
RD11568	Screw	RD18728	Bail Trip Cam Bushing	RD18895	Drive Gear *
RD11578	Ball Bearing	RD18732	Rotor Ring	RD18896	Side Cover Assembly
RD13241	Ball Bearing	RD18733	Friction Ring	RD18897	Washer
RD13269	Ball Bearing	RD18734	Screw	RD18898	Handle Shaft Cover B
RD13274	Ball Bearing	RD18735	Roller Clutch Assembly	RD18899	Handle Shank Assembly
RD13381	Ball Bearing	RD18736	O Ring	RD18900	Handle Assembly
RD14277	Large Handle Shank Washer	RD18737	Roller Clutch Inner	RD18901	Main Shaft Assembly
RD14279	Washer	RD18738	Bearing Retainer	RD18902	Rear Protector
RD14286	Screw	RD18739	Washer	RD18903	Worm Shaft ***
RD14780	Screw	RD18741	Washer	RD18904	Oscillating Guide B
RD14867	Spool Support	RD18744	Idle Gear	RD18905	Idle Gear B S *
RD15718	Screw	RD18746	Bail Trip Strike	RD18906	Idle Gear *
RD15860	Ball Bearing	RD18747	Flange Water Proof	RD18907	Screw
RD15991	Rotor Nut Lock Plate	RD18751	Handle Knob Pipe	RD18908	Body Assembly
RD16426	Screw	RD18752	Handle Knob Assembly	RD18909	Handle Screw Cap
RD16427	Bearing Water Proof	RD18753	Handle Knob Seal	RD18913	Screw
RD16451	Screw	RD18755	Oscillating Slider Bushing		
RD16465	Handle Shaft Seal	RD18758	Washer	RD 9811	Reel Seat Spacer (accessory)
RD16470	Oscillating Pawl Cover	RD18762	Washer		
RD16472	Washer	RD18875	Drag Knob Assembly	PK 0457	Gear Set *
RD16473	Oscillating Pawl	RD18876	Drag Washers Retaine	PK 0458	Bearing Set **
RD16479	Worm Shaft Retainer	RD18877	Spool Assembly	PK 0459	Oscillation Set ***
RD16665	Line Roller Support	RD18878	Rotor Brim	PK 0450	Line Roller Set ****