www.reelschematic.com


2X515902

Please order by parts number,not key number
Bitte,Best:-Nr.angeben(Nicht " key " -nr.)
Veuillez indiquer le numero de la pièce(Non " key " no.)

WARRANTY QUALITY

SPINNING REEL

GB2500 / GB2500BH / GB2500H / GB2500HBH
GB3000 / GB3000BH / GB3000H / GB3000HBH

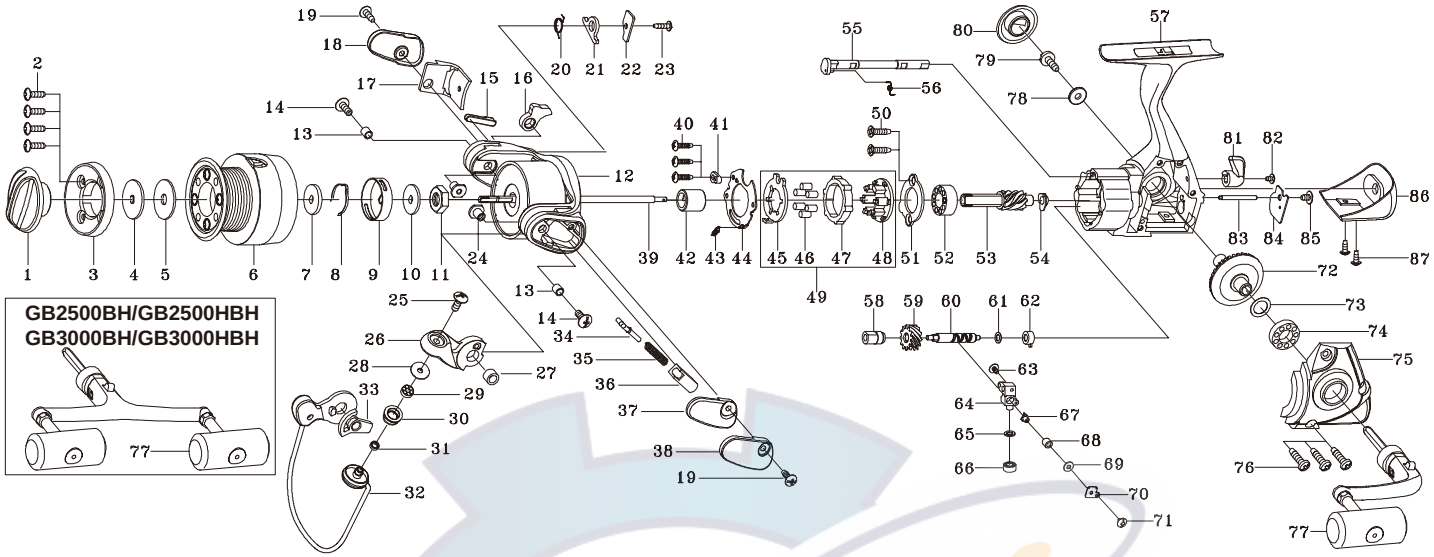

Key NO.	Parts No.	Parts name
2-6	2YT-113-01	SPOOL TOTAL ASSEMBLY
1	2YD-024-02	DRAG KNOB ASSEMBLY
2	2E2-005-03	B26M-080 SCREW
3	2S5-002-02	LIP COVER
4	2W2-013-01	KEY WASHER
5	2W1-052-01	050-187 WASHER
6	2YS-052-01	SPOOL ASSEMBLY
7	2W2-020-01	KEY WASHER
8	2L3-014-01	CLICK LEAF SPRING
9	2F8-013-01	CLICK LEAF SPRING HOLDER
10	2W2-015-01	KEY WASHER
11	2E3-007-02	ROTOR NUT
12	2YR-057-02	ROTOR ASSEMBLY
13	2C1-069-01	COLLAR SPACER
14	2E2-018-01	B30M-080 SCREW
15	2R5-102-01	BAIL TRIP PLATE
16	2R5-104-01	BAIL TRIP LEVER A
17	2R4-107-02	BAIL TRIP COVER SPACER
18	2F5-207-02	BAIL TRIP COVER
19	2E1-016-02	B26-080 SCREW
20	2Q3-056-01	BAIL TRIP LEVER SPRING
21	2R5-103-01	BAIL TRIP LEVER
22	2W5-037-01	SPACER
23	2E1-048-01	B22-080 SCREW
24	2E3-040-01	SHAFT NUT
25	2E2-018-01	B30M-080 SCREW
26	2R2-035-02	BAIL ARM
27	2C2-082-01	BAIL ARM BUSH
28	2C1-034-01	LINE ROLLER COLLAR
29	2Z1-012-02	407-2.5 BALL BEARING
30	2R6-020-02	LINE ROLLER
31	2C2-032-01	LINE ROLLER BUSH
32	2YL-093-02	BAIL ASSEMBLY
33	2F6-033-02	HOLDING PLATE
34	2R5-101-01	BAIL TRIP SHAFT
35	2Q1-075-01	BAIL SPRING
36	2C2-081-01	BAIL SPRING GUIDE
37	2R4-106-01	BAIL SPRING COVER SPACER
38	2F5-206-02	BAIL SPRING COVER
39	2M3-028-01	MAIN SHAFT
40	2E1-029-01	B22-090 SCREW
41	2F8-079-01	ANTI-REVERSE SPRING ANCHOR
42	2A4-021-01	ONE-WAY CLUTCH INNER TUBE
43	2Q2-016-01	SPRING
44	2F5-192-01	ROLLER CLUTCH RETAINER
45	2F2-028-01	ANTI-REVERSE PAWL
46	2Z3-001-01	ROLLER
47	2A3-008-01	ANTI-REVERSE RATCHET

Key NO.	Parts No.	Parts name
48	2F8-078-01	CAGE
49	2YZ-014-01	ONE-WAY CLUTCH BEARING ASSEMBLY
50	2E1-067-01	F26-090 SCREW
51	2F5-193-01	BEARING RETAINER
52	2Z1-003-02	714-5 BALL BEARING
53	2G2-036-01	PINION GEAR
54	2C2-033-01	PINION GEAR BUSH
55	2A2-009-01	ANTI-REVERSE CAM
56	2Q3-009-01	ANTI-REVERSE SPRING
57	2YB-131-01	BODY ASSEMBLY
58	2C2-037-01	WORM SHAFT BUSH C
59	2G3-012-01	WORM SHAFT GEAR
60	2M4-001-01	WORM SHAFT
61	2W1-058-02	030-050 WASHER
62	2C2-035-01	WORM SHAFT BUSH A
63	2E2-013-02	B20M-060 SCREW
64	2M1-023-01	OSCILLATING SLIDER
65	2W1-058-03	030-050 WASHER
66	2Z1-014-01	306-2.5 BALL BEARING
67	2M5-001-01	LINE GUIDE PIN
68	2C2-034-01	LINE GUIDE PIN BUSH
69	2W1-059-01	020-049 WASHER
70	2F5-048-01	OSCILLATING SLIDER COVER
71	2E2-022-01	B20M-030 SCREW
72	2G1-003-01	DRIVE GEAR
73	2W1-019-00	071-103 WASHER
74	2Z1-002-01	714-3.5 BALL BEARING
75	2B2-024-02	BODY COVER
76	2E1-005-02	A26-120 SCREW
77	2YH-061-01	HANDLE TOTAL ASSEMBLY
78	2W1-004-01	029-080 WASHER
79	2E2-023-01	a30M-120 SCREW
80	2H6-010-01	HANDLE SCREW CAP
81	2A1-022-01	ANTI-REVERSE LEVER
82	2E2-013-02	B20M-060 SCREW
83	2P1-015-01	OSCILLATING SLIDER PIN
84	2F5-049-01	WORM SHAFT COVER
85	2E1-036-01	B26-040 SCREW
86	2YN-003-02	NAMEPLATE ASSEMBLY
87	2E1-020-02	B22-055 SCREW
GB2500BH	SPECIAL PARTS	
77	2YH-077-01	HANDLE TOTAL ASSEMBLY
GB2500H	SPECIAL PARTS	
2-6	2YT-113-04	SPOOL TOTAL ASSEMBLY
6	2YS-052-04	SPOOL ASSEMBLY
53	2G2-073-01	PINION GEAR
59	2G3-047-01	OSCILLATING GEAR
72	2G1-056-01	DRIVE GEAR

Key NO.	Parts No.	Parts name
GB2500HBH	SPECIAL PARTS	
2-6	2YT-113-04	SPOOL TOTAL ASSEMBLY
6	2YS-052-04	SPOOL ASSEMBLY
53	2G2-073-01	PINION GEAR
59	2G3-047-01	OSCILLATING GEAR
72	2G1-056-01	DRIVE GEAR
77	2YH-077-01	HANDLE TOTAL ASSEMBLY
GB3000	SPECIAL PARTS	
2-6	2YT-118-01	SPOOL TOTAL ASSEMBLY
6	2YS-056-01	SPOOL ASSEMBLY
12	2YR-058-02	ROTOR ASSEMBLY
17	2R4-108-02	BAIL TRIP COVER SPACER
21	2R5-105-01	BAIL TRIP LEVER
32	2YL-094-02	BAIL ASSEMBLY
57	2YB-131-02	BODY ASSEMBLY
GB3000BH	SPECIAL PARTS	
2-6	2YT-118-01	SPOOL TOTAL ASSEMBLY
6	2YS-056-01	SPOOL ASSEMBLY
12	2YR-058-02	ROTOR ASSEMBLY
17	2R4-108-02	BAIL TRIP COVER SPACER
21	2R5-105-01	BAIL TRIP LEVER
32	2YL-094-02	BAIL ASSEMBLY
57	2YB-131-02	BODY ASSEMBLY
77	2YH-077-01	HANDLE TOTAL ASSEMBLY
GB3000H	SPECIAL PARTS	
2-6	2YT-118-04	SPOOL TOTAL ASSEMBLY
6	2YS-056-04	SPOOL ASSEMBLY
12	2YR-058-02	ROTOR ASSEMBLY
17	2R4-108-02	BAIL TRIP COVER SPACER
21	2R5-105-01	BAIL TRIP LEVER
32	2YL-094-02	BAIL ASSEMBLY
53	2G2-073-01	PINION GEAR
57	2YB-131-02	BODY ASSEMBLY
59	2G3-047-01	OSCILLATING GEAR
72	2G1-056-01	DRIVE GEAR
GB3000HBH	SPECIAL PARTS	
2-6	2YT-118-04	SPOOL TOTAL ASSEMBLY
6	2YS-056-04	SPOOL ASSEMBLY
12	2YR-058-02	ROTOR ASSEMBLY
17	2R4-108-02	BAIL TRIP COVER SPACER
21	2R5-105-01	BAIL TRIP LEVER
32	2YL-094-02	BAIL ASSEMBLY
53	2G2-073-01	PINION GEAR
57	2YB-131-02	BODY ASSEMBLY
59	2G3-047-01	OSCILLATING GEAR
72	2G1-056-01	DRIVE GEAR
77	2YH-077-01	HANDLE TOTAL ASSEMBLY