www.reelschematic.com


2X515802

Please order by parts number,not key number
*Bitte,Best:-Nr.angeben(Nicht " key " -nr.)*
Veuillez indiquer le numero de la pièce(Non " key " no.)

WARRANTY QUALITY

# SPINNING REEL

## SA2500 / SA2500BH / SA2500H / SA2500HBH
## SA3000 / SA3000BH / SA3000H / SA3000HBH

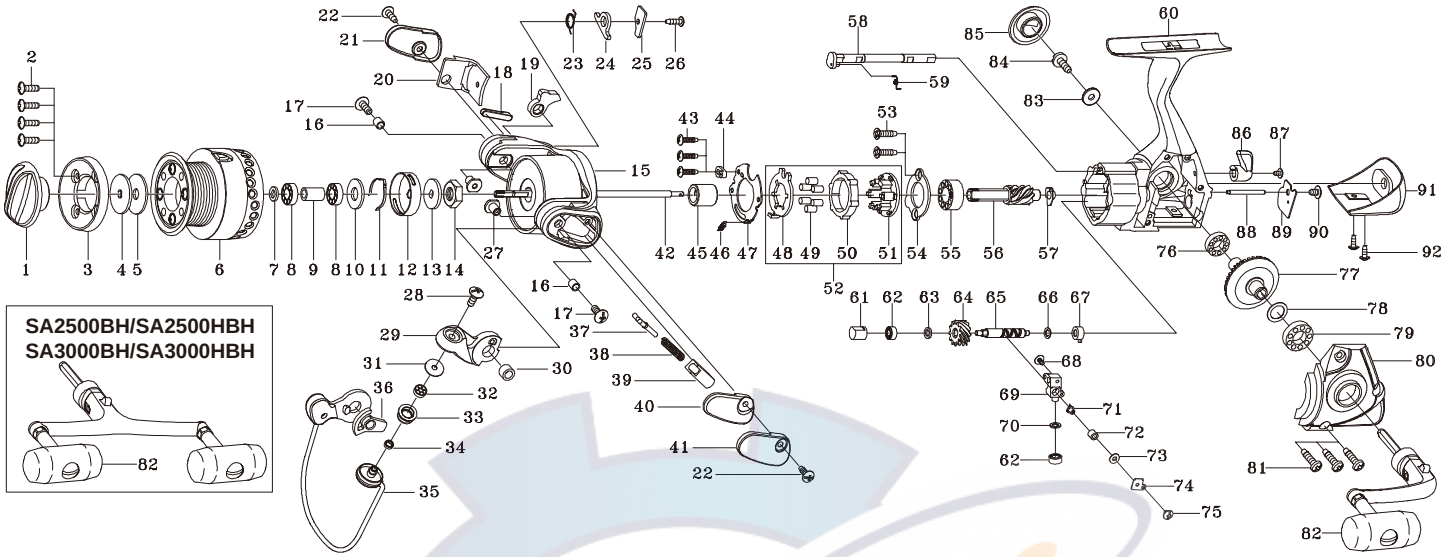





| Key NO. | Parts No. | Parts name |
|---|---|---|
| 2-6 | 2YT-112-01 | SPOOL TOTAL ASSEMBLY |
| 1 | 2YD-024-01 | DRAG KNOB ASSEMBLY |
| 2 | 2E2-005-03 | B26M-080 SCREW |
| 3 | 2S5-002-01 | LIP COVER |
| 4 | 2W2-013-01 | KEY WASHER |
| 5 | 2W1-052-01 | 050-187 WASHER |
| 6 | 2YS-051-01 | SPOOL ASSEMBLY |
| 7 | 2W2-016-01 | KEY WASHER |
| 8 | 2Z1-013-01 | 610-3 BALL BEARING |
| 9 | 2C1-037-01 | BEARING SPACER |
| 10 | 2W1-053-01 | 080-185 WASHER |
| 11 | 2L3-014-01 | CLICK LEAF SPRING |
| 12 | 2F8-013-01 | CLICK LEAF SPRING HOLDER |
| 13 | 2W2-015-01 | KEY WASHER |
| 14 | 2E3-007-02 | ROTOR NUT |
| 15 | 2YR-057-01 | ROTOR ASSEMBLY |
| 16 | 2C1-069-01 | COLLAR SPACER |
| 17 | 2E2-018-01 | B30M-080 SCREW |
| 18 | 2R5-102-01 | BAIL TRIP PLATE |
| 19 | 2R5-104-01 | BAIL TRIP LEVER A |
| 20 | 2R4-107-01 | BAIL TRIP COVER SPACER |
| 21 | 2F5-207-01 | BAIL TRIP COVER |
| 22 | 2E1-016-03 | B26-080 SCREW |
| 23 | 2Q3-056-01 | BAIL TRIP LEVER SPRING |
| 24 | 2R5-103-01 | BAIL TRIP LEVER |
| 25 | 2W5-037-01 | SPACER |
| 26 | 2E1-048-02 | B22-080 SCREW |
| 27 | 2E3-040-01 | SHAFT NUT |
| 28 | 2E2-018-02 | B30M-080 SCREW |
| 29 | 2R2-035-01 | BAIL ARM |
| 30 | 2C2-082-01 | BAIL ARM BUSH |
| 31 | 2C1-034-01 | LINE ROLLER COLLAR |
| 32 | 2Z1-012-02 | 407-2.5 BALL BEARING |
| 33 | 2R6-020-01 | LINE ROLLER |
| 34 | 2C2-032-01 | LINE ROLLER BUSH |
| 35 | 2YL-093-01 | BAIL ASSEMBLY |
| 36 | 2F6-033-01 | HOLDING PLATE |
| 37 | 2R5-101-01 | BAIL TRIP SHAFT |
| 38 | 2Q1-075-01 | BAIL SPRING |
| 39 | 2C2-081-01 | BAIL SPRING GUIDE |
| 40 | 2R4-106-01 | BAIL SPRING COVER SPACER |
| 41 | 2F5-206-01 | BAIL SPRING COVER |
| 42 | 2M3-028-01 | MAIN SHAFT |
| 43 | 2E1-029-01 | B22-090 SCREW |
| 44 | 2F8-079-01 | ANTI-REVERSE SPRING ANCHOR |
| 45 | 2A4-021-01 | ONE-WAY CLUTCH INNER TUBE |
| 46 | 2Q2-016-01 | SPRING |
| 47 | 2F5-192-01 | ROLLER CLUTCH RETAINER |
| 48 | 2F2-028-01 | ANTI-REVERSE PAWL |
| 49 | 2Z3-001-01 | ROLLER |
| 50 | 2A3-008-01 | ANTI-REVERSE RATCHET |
| 51 | 2F8-078-01 | CAGE |
| 52 | 2YZ-014-01 | ONE-WAY CLUTCH BEARING ASSEMBLY |
| 53 | 2E1-067-01 | F26-090 SCREW |
| 54 | 2F5-193-01 | BEARING RETAINER |
| 55 | 2Z1-003-02 | 714-5 BALL BEARING |
| 56 | 2G2-036-01 | PINION GEAR |
| 57 | 2C2-033-01 | PINION GEAR BUSH |
| 58 | 2A2-009-01 | ANTI-REVERSE CAM |
| 59 | 2Q3-009-01 | ANTI-REVERSE SPRING |
| 60 | 2YB-130-01 | BODY ASSEMBLY |
| 61 | 2C2-036-01 | WORM SHAFT BUSH |
| 62 | 2Z1-014-01 | 306-2.5 BALL BEARING |
| 63 | 2W1-058-01 | 030-050 WASHER |
| 64 | 2G3-012-01 | WORM SHAFT GEAR |
| 65 | 2M4-001-01 | WORM SHAFT |
| 66 | 2W1-058-02 | 030-050 WASHER |
| 67 | 2C2-035-01 | WORM SHAFT BUSH A |
| 68 | 2E2-013-02 | B20M-060 SCREW |
| 69 | 2M1-023-01 | OSCILLATING SLIDER |
| 70 | 2W1-058-03 | 030-050 WASHER |
| 71 | 2M5-001-01 | LINE GUIDE PIN |
| 72 | 2C2-034-01 | LINE GUIDE PIN BUSH |
| 73 | 2W1-059-01 | 020-049 WASHER |
| 74 | 2F5-048-01 | OSCILLATING SLIDER COVER |
| 75 | 2E2-022-01 | B20M-030 SCREW |
| 76 | 2Z1-009-01 | 711-3 BALL BEARING |
| 77 | 2G1-003-01 | DRIVE GEAR |
| 78 | 2W1-019-00 | 071-103 WASHER |
| 79 | 2Z1-002-01 | 714-3.5 BALL BEARING |
| 80 | 2B2-024-01 | BODY COVER |
| 81 | 2E1-005-03 | A26-120 SCREW |
| 82 | 2YH-060-01 | HANDLE TOTAL ASSEMBLY |
| 83 | 2W1-004-01 | 029-080 WASHER |
| 84 | 2E2-023-01 | a30M-120 SCREW |
| 85 | 2H6-010-01 | HANDLE SCREW CAP |
| 86 | 2A1-022-01 | ANTI-REVERSE LEVER |
| 87 | 2E2-013-03 | B20M-060 SCREW |
| 88 | 2P1-015-01 | OSCILLATING SLIDER PIN |
| 89 | 2F5-049-01 | WORM SHAFT COVER |
| 90 | 2E1-036-01 | B26-040 SCREW |
| 91 | 2YN-003-01 | NAMEPLATE ASSEMBLY |
| 92 | 2E1-020-01 | B22-055 SCREW |

**SA2500BH SPECIAL PARTS**

| Key NO. | Parts No. | Parts name |
|---|---|---|
| 82 | 2YH-068-01 | HANDLE TOTAL ASSEMBLY |

**SA2500H SPECIAL PARTS**

| Key NO. | Parts No. | Parts name |
|---|---|---|
| 2-6 | 2YT-112-05 | SPOOL TOTAL ASSEMBLY |
| 6 | 2YS-051-05 | SPOOL ASSEMBLY |
| 56 | 2G2-073-01 | PINION GEAR |
| 64 | 2G3-047-01 | OSCILLATING GEAR |
| 77 | 2G1-056-01 | DRIVE GEAR |
| 82 | 2YH-068-01 | HANDLE TOTAL ASSEMBLY |

**SA3000 SPECIAL PARTS**

| Key NO. | Parts No. | Parts name |
|---|---|---|
| 2-6 | 2YT-117-01 | SPOOL TOTAL ASSEMBLY |
| 6 | 2YS-055-01 | SPOOL ASSEMBLY |
| 15 | 2YR-058-01 | ROTOR ASSEMBLY |
| 20 | 2R4-108-01 | BAIL TRIP COVER SPACER |
| 24 | 2R5-105-01 | BAIL TRIP LEVER |
| 35 | 2YL-094-01 | BAIL ASSEMBLY |
| 60 | 2YB-130-02 | BODY ASSEMBLY |

**SA3000BH SPECIAL PARTS**

| Key NO. | Parts No. | Parts name |
|---|---|---|
| 2-6 | 2YT-117-01 | SPOOL TOTAL ASSEMBLY |
| 6 | 2YS-055-01 | SPOOL ASSEMBLY |
| 15 | 2YR-058-01 | ROTOR ASSEMBLY |
| 20 | 2R4-108-01 | BAIL TRIP COVER SPACER |
| 24 | 2R5-105-01 | BAIL TRIP LEVER |
| 35 | 2YL-094-01 | BAIL ASSEMBLY |
| 60 | 2YB-130-02 | BODY ASSEMBLY |
| 82 | 2YH-068-01 | HANDLE TOTAL ASSEMBLY |

**SA3000H SPECIAL PARTS**

| Key NO. | Parts No. | Parts name |
|---|---|---|
| 2-6 | 2YT-117-05 | SPOOL TOTAL ASSEMBLY |
| 6 | 2YS-055-05 | SPOOL ASSEMBLY |
| 15 | 2YR-058-01 | ROTOR ASSEMBLY |
| 20 | 2R4-108-01 | BAIL TRIP COVER SPACER |
| 24 | 2R5-105-01 | BAIL TRIP LEVER |
| 35 | 2YL-094-01 | BAIL ASSEMBLY |
| 56 | 2G2-073-01 | PINION GEAR |
| 60 | 2YB-130-02 | BODY ASSEMBLY |
| 64 | 2G3-047-01 | OSCILLATING GEAR |
| 77 | 2G1-056-01 | DRIVE GEAR |
| 82 | 2YH-068-01 | HANDLE TOTAL ASSEMBLY |

**SA3000HBH SPECIAL PARTS**

| Key NO. | Parts No. | Parts name |
|---|---|---|
| 2-6 | 2YT-117-05 | SPOOL TOTAL ASSEMBLY |
| 6 | 2YS-055-05 | SPOOL ASSEMBLY |
| 15 | 2YR-058-01 | ROTOR ASSEMBLY |
| 20 | 2R4-108-01 | BAIL TRIP COVER SPACER |
| 24 | 2R5-105-01 | BAIL TRIP LEVER |
| 35 | 2YL-094-01 | BAIL ASSEMBLY |
| 56 | 2G2-073-01 | PINION GEAR |
| 60 | 2YB-130-02 | BODY ASSEMBLY |
| 64 | 2G3-047-01 | OSCILLATING GEAR |
| 77 | 2G1-056-01 | DRIVE GEAR |
| 82 | 2YH-068-01 | HANDLE TOTAL ASSEMBLY |