www.reelschematic.com

# QUANTUM CABO CNW20PTS & CNW30PTS

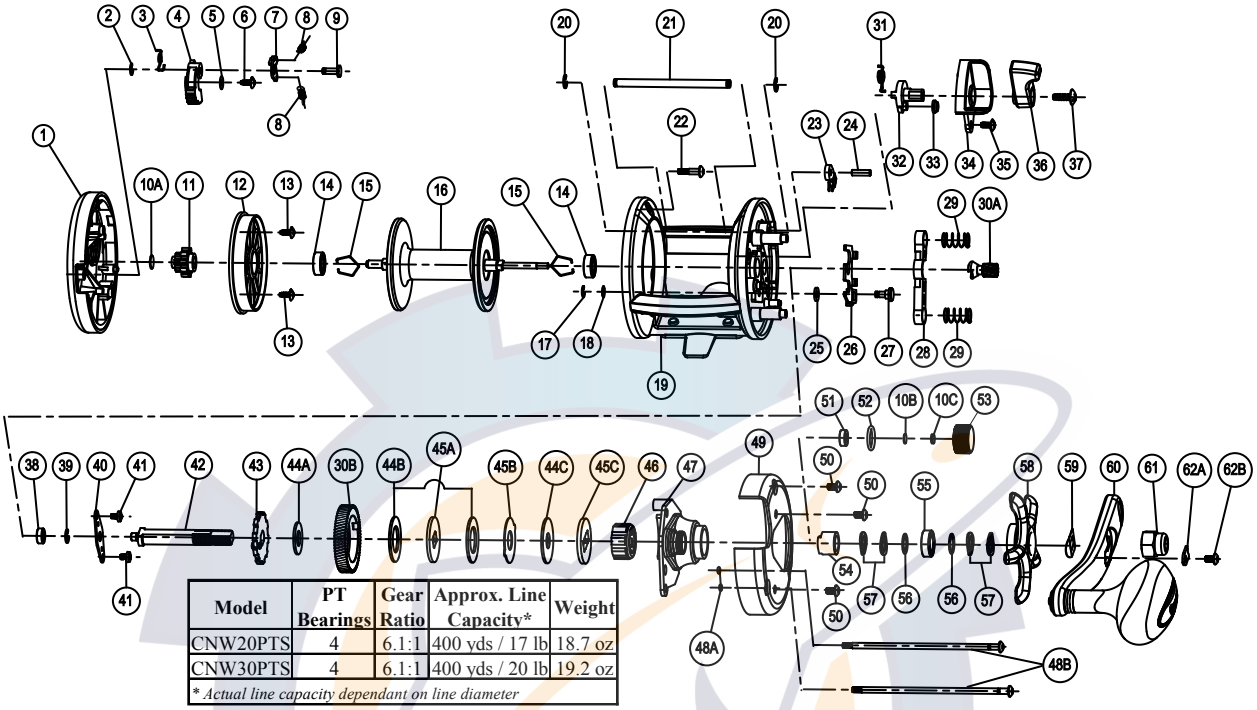

| Model | PT Bearings | Gear Ratio | Approx. Line Capacity* | Weight |
|---|---|---|---|---|
| CNW20PTS | 4 | 6.1:1 | 400 yds / 17 lb | 18.7 oz |
| CNW30PTS | 4 | 6.1:1 | 400 yds / 20 lb | 19.2 oz |

** Actual line capacity dependant on line diameter*

| Key # | Description | Part No. CNW20PTS | Part No. CNW30PTS |
|---|---|---|---|
| 1 | Left Side Cover Assembly | KV323-03 | ⇦ |
| 2 | Click Pawl Post E-Clip | NX092-01 | ⇦ |
| 3 | Bait Click Lever Spring | KV022-01 | ⇦ |
| 4 | Bait Click Lever | LV109-01 | ⇦ |
| 5 | Bait Click Lever Washer | KV038-01 | ⇦ |
| 6 | Bait Click Lever Screw | AV125-01 | ⇦ |
| 7 | Bait Click Pawl | KV114-01 | ⇦ |
| 8 | Bait Click Spring | KV110-01 | ⇦ |
| 9 | Bait Click Pawl Post | KV098-01 | ⇦ |
| 10 | Spool Tension Washer Kit includes<br>10A-Spool Shaft Washer<br>10B-Spool Tension Washer<br>10C-CushionWasher | XX4038-01 | ⇦ |
| 11 | Oscillate Drive Gear | KV112-01 | ⇦ |
| 12 | Spool Cover | KV051-01 | ⇦ |
| 13 | Spool Cover Screw | AV125-01 | ⇦ |
| 14 | Spool Shaft Bearing | CW017-02 | ⇦ |
| 15 | Clip Ring | KV080-01 | ⇦ |
| 16 | Spool Assembly | KV321-02 | LV321-02 |
| 17 | Kick Lever Guide Post E-Clip | NX092-01 | ⇦ |
| 18 | Kick Lever Guide Post Washer | XX035-01 | ⇦ |
| 19 | Frame Assembly | NV301-03 | PV301-03 |
| 20 | Line Guard E-Clip | QW120-01 | ⇦ |
| 21 | Line Guard | NV061-01 | PV061-01 |
| 22 | Left Side Cover Screw | NV123-01 | ⇦ |
| 23 | Anti Reverse Pawl Assembly | KV363-01 | ⇦ |
| 24 | Anti Reverse Pawl Post | JX098-01 | ⇦ |
| 25 | Release Slider Spacer | KV111-01 | ⇦ |
| 26 | Release Slider | KV039-01 | ⇦ |
| 27 | Kick Lever Guide Post | JX102-01 | ⇦ |
| 28 | Pinion Yoke | KV025-01 | ⇦ |
| 29 | Pinion Yoke Spring | JX040-01 | ⇦ |
| 30 | Gear Set includes<br>30A-Pinion Gear<br>30B-Drive Gear | LV4012-01 | ⇦ |
| 31 | Release Slider Cam Spring | KV104-01 | ⇦ |
| 32 | Release Slider Cam | KV141-01 | ⇦ |
| 33 | Release Slider Guide Bushing | JX068-01 | ⇦ |
| 34 | Release Lever Cover | LV143-01 | ⇦ |
| 35 | Release Slider Screw | XX050-01 | ⇦ |
| 36 | Release Lever | LV142-01 | ⇦ |
| 37 | Release Lever Screw | KV053-01 | ⇦ |
| 38 | Crank Shaft Bushing(L) | JX017-01 | ⇦ |
| 39 | Crank Shaft Retainer E-Clip | QW120-01 | ⇦ |
| 40 | Crank Shaft Retainer | JX002-01 | ⇦ |

| Key # | Description | Part No. CNW20PTS | Part No. CNW30PTS |
|---|---|---|---|
| 41 | Crank Shaft Retainer Screw | JX107-01 | ⇦ |
| 42 | Crank Shaft | NV008-02 | ⇦ |
| 43 | Ratchet | KV083-01 | ⇦ |
| 44 | Drag Disc Kit includes<br>44A-Ratchet Washer<br>44B-Drag Disc~A~<br>44C-Drag Disc~B~ | AV4059-01 | ⇦ |
| 45 | Drag Washer Kit includes<br>45A-Drag ~D~ Washer (U)<br>45B-Drag Key Washer<br>45C-Drag ~D~ Washer (U) | LV4045-01 | ⇦ |
| 46 | One Way Bearing | LV063-01 | ⇦ |
| 47 | Crank Shaft Guide Assembly | LV366-01 | ⇦ |
| 48 | Side Cover Screw & O-ring<br>48A-O-ring (1 pc.)<br>48B-Button Head Cap Screw (1 pc.) | LV4124-02 | LV4124-01 |
| 49 | Right Side Cover | KV024-10 | KV024-12 |
| 50 | Right Side Cover Screw | KV154-01 | ⇦ |
| 51 | Bushing - Tension Knob | JX117-01 | ⇦ |
| 52 | Tension Knob O Ring | QW101-01 | ⇦ |
| 53 | Spool Tension Knob Kit includes<br>53-Spool Tension Knob<br>10-Spool Tension Washer Kit | KV4033-01 | ⇦ |
| 54 | One Way Bearing Sleeve | PV052-01 | ⇦ |
| 55 | Crank Shaft Bearing | BL157-01 | ⇦ |
| 56 | Crank Shaft Washer | JX038-01 | ⇦ |
| 57 | Spring "D" Washer | JX046-01 | ⇦ |
| 58 | Star Drag | LV055-01 | ⇦ |
| 59 | Handle Washer | NX054-01 | ⇦ |
| 60 | Handle Assembly | LV318-01 | ⇦ |
| 61 | Handle Nut | LV003-01 | ⇦ |
| 62 | Handle Nut Retainer Kit includes<br>62A-Handle Nut Retainer<br>62B-Handle Nut Retainer Screw | LV4034-01 | ⇦ |

10-28-2003