

TiborLight® Spring Creek CL & Tail Water CL Models



MAINTENANCE


Tibor Light® reels require virtually no maintenance. Occasionally, a few drops of TiborLube™ should be applied to the ConstaLube™ Felt. If sand or dirt gets into the reel, simply remove the Spool, flush with fresh water and reinstall the Spool. Aside from the Drag Felt, there is nothing on the reel to lubricate.

CONVERSION FROM LEFT TO RIGHT HAND RETRIEVE

Tibor Light reels are shipped from the factory with left hand retrieve unless specified. An authorized dealer can easily convert your Tibor Light CL reel from left to right hand retrieve for you. You may also convert the reel yourself in three easy steps by rotating the Clutch Pins on the Brake Drum.


Please refer to the numbered parts list on the reverse side.

1. Begin by tightening the Drag Adjustment Screw (part #7); then loosen the Retainer Knob (part #17) and remove the Spool (part #14).
2. Using a small screwdriver, simply press and rotate both Clutch Pins (part #12) 180° so that the “slope” of the Pins faces the opposite direction.
3. Replace the Spool and tighten the Retainer Knob.

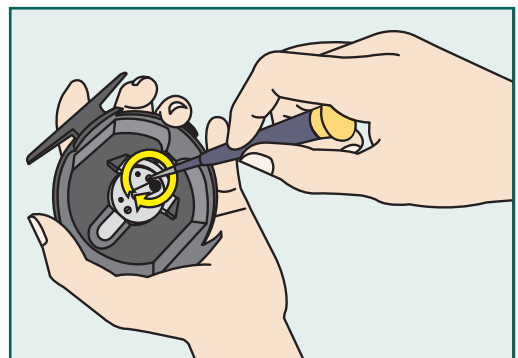

T **TIBOR**
The World's Finest Fly Reels

TiborLight® Spring Creek CL & Tail Water CL Models

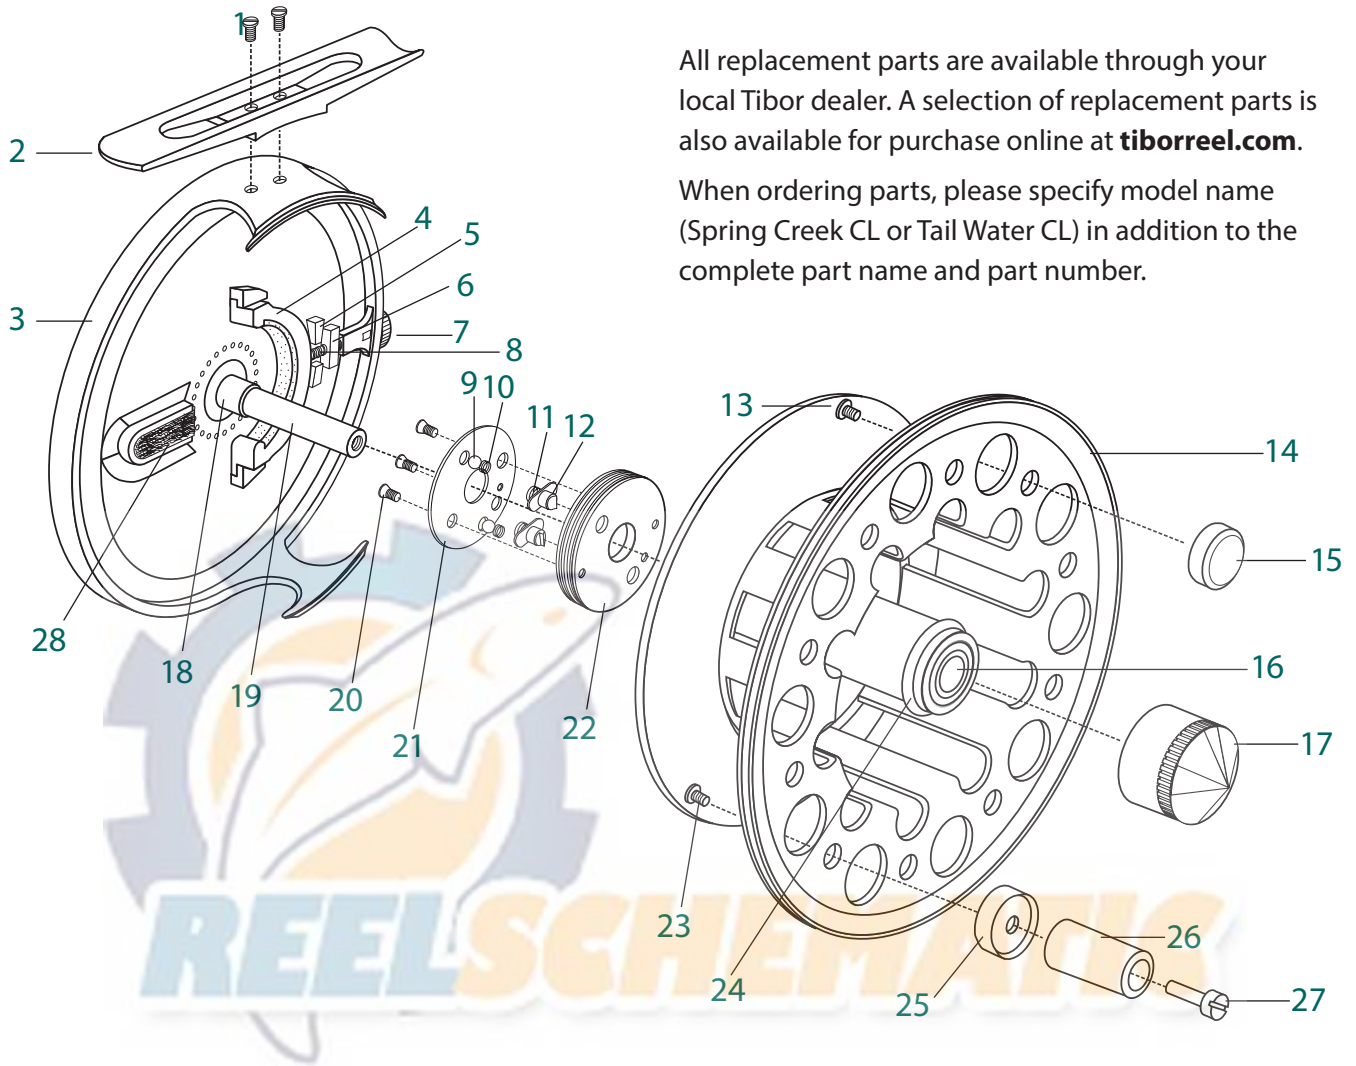

All replacement parts are available through your local Tibor dealer. A selection of replacement parts is also available for purchase online at tiborreel.com.

When ordering parts, please specify model name (Spring Creek CL or Tail Water CL) in addition to the complete part name and part number.

Ref.#	Part Name	Part#	Ref.#	Part Name	Part#
1	Reel Stand Screw	LCP-1	15	Counter Weight	TL-15
2	Reel Stand	XX-2	16	Two Ball Bearings	LCP-16
3	Frame	XX-3	17	Retainer Knob	TL-17
4	Drag Brake Caliper	TL-4	18	Main Shaft Screw	LCP-18
5	Drag Adjustment Block	TL-5	19	Main Shaft	TL-19
6	Stop Nut	TL-6	20	Retainer Plate Screws	LCP-20
7	Drag Adjustment Screw	XX-7	21	Brake Drum Cover	TL-21
8	Drag Spring	XX-8	22	Brake Drum	TL-22
9	Out-Going Clicker Ball	LCP-9	23	Handle Knob Screw	LCP-23
10	Out-Going Clicker Spring	LCP-10	24	O-Ring	LCP-24
11	Clutch Spring	LCP-11	25	Handle Knob Seat	TL-25
12	Easy Change Clutch Pin	TL-12	26	Handle Knob	TL-26
13	Counter Weight Screw	LCP-13	27	Handle Knob Shoulder Screw	TL-27
14	Spool	XX-14	28	Constalube Felt	TL-32

