

# FURUNO

## INSTALLATION MANUAL

MODEL 1824C-BB MARINE RADAR  
MODEL 1834C-BB MARINE RADAR  
MODEL 1934C-BB MARINE RADAR  
MODEL 1944C-BB MARINE RADAR  
MODEL 1954C-BB MARINE RADAR  
MODEL 1964C-BB MARINE RADAR  
GD-1920C-BB COLOR VIDEO PLOTTER



**FURUNO ELECTRIC CO., LTD.**  
NISHINOMIYA, JAPAN



(Elemental Chlorine Free)

The paper used in this manual  
is elemental chlorine free.

© **FURUNO ELECTRIC CO., LTD.**

9-52 Ashihara-cho,  
Nishinomiya 662-8580, JAPAN

Telephone : 0798-65-2111

Fax : 0798-65-4200

FURUNO Authorized Distributor/Dealer

All rights reserved.

Printed in Japan

FIRST EDITION : FEB. 2005

E : DEC. 18, 2006

Pub. No. IME-35490-E

( DAMI ) M1804C-BB\_GD1920C-BB



\* 0 0 0 1 5 1 8 0 6 1 4 \*



\* I M E 3 5 4 9 0 E 0 0 \*

# ⚠ SAFETY INSTRUCTIONS

## ⚠ WARNING



**Do not open the equipment unless totally familiar with electrical circuits and service manual.**

**ELECTRICAL SHOCK HAZARD**

Only qualified personnel should work inside the equipment.



**Wear a safety belt and hard hat when working on the antenna unit.**

Serious injury or death can result if someone falls from the radar mast.

**Construct a suitable service platform from which to install the antenna unit.**

Serious injury or death can result if someone falls from the radar mast.

**Turn off the power at the mains switchboard before beginning the installation.**

Fire, electrical shock or serious injury can result if the power is left on or is applied while the equipment is being installed.

## ⚠ CAUTION

**Observe the following compass safe distances to prevent deviation of a magnetic compass.**

	Standard	Steering
Processor unit	1.40 m	0.90 m
Control unit	0.45 m	0.30 m
MODEL1824C-BB antenna unit	1.25 m	0.85 m
MODEL1834C-BB antenna unit	0.90 m	0.70 m
MODEL1934C-BB antenna unit	1.00 m	0.80 m
MODEL1944C-BB antenna unit	1.00 m	0.80 m
MODEL1954C-BB antenna unit	1.00 m	0.75 m
MODEL1964C-BB antenna unit	1.65 m	1.25 m
Power supply unit PSU-005*1	1.40 m	0.95 m
Power supply unit PSU-008*2	0.80 m	0.50 m

\*1 For MODEL 1954C-BB \*2 For MODEL1964C-BB

## ⚠ WARNING

### Radio Frequency Radiation Hazard

The radar antenna emits electromagnetic radio frequency (RF) energy which can be harmful, particularly to your eyes. Never look directly into the antenna aperture from a close distance while the radar is in operation or expose yourself to the transmitting antenna at a close distance.

Distances at which RF radiation levels of 100 and 10 W/m<sup>2</sup> exist are given in the table below.

**Note:** If the antenna unit is installed at a close distance in front of the wheel house, your administration may require halt of transmission within a certain sector of antenna revolution. This is possible - Ask your FURUNO representative or dealer to provide this feature.

MODEL	Distance to 100 W/m <sup>2</sup> point	Distance to 10 W/m <sup>2</sup> point
MODEL 1824C-BB	Nil	Worst case 0.70 m
MODEL 1834C-BB	Nil	Worst case 1.50 m
MODEL 1934C-BB	Worst case 0.10 m	Worst case 1.70 m
MODEL 1944C-BB	Nil	Worst case 1.20 m
MODEL 1954C-BB	XN-12A	Worst case 0.20 m Worst case 2.00 m
	XN-13A	Nil Worst case 1.40 m
MODEL 1964C-BB	XN-12A	Worst case 0.50 m Worst case 5.40 m
	XN-13A	Worst case 0.40 m Worst case 3.60 m

# TABLE OF CONTENTS

---

<b>EQUIPMENT LISTS .....</b>	<b>iii</b>
<b>SYSTEM CONFIGURATIONS .....</b>	<b>v</b>
<b>1. MOUNTING .....</b>	<b>1-1</b>
1.1 Mounting the Control Unit.....	1-1
1.2 Mounting the Processor Unit .....	1-4
1.3 Mounting the Antenna Unit of MODEL1824C-BB.....	1-5
1.4 Mounting the Antenna Unit of MODEL1834C-BB.....	1-13
1.5 Mounting the Antenna Unit of MODEL1934C-BB/1944C-BB/1954C-BB/1964C-BB.	1-18
1.6 Mounting the Power Supply Unit (MODEL 1954C-BB/1964C-BB) .....	1-27
<b>2. WIRING.....</b>	<b>2-1</b>
2.1 Standard Wiring.....	2-1
2.2 Wiring the Power Supply Unit (MODEL 1954C-BB/1964C-BB).....	2-4
<b>3. SETTING UP THE EQUIPMENT .....</b>	<b>3-1</b>
3.1 Setting up with the Installation Wizard .....	3-1
3.2 Checking Magnetron Heater Voltage .....	3-16
<b>4. OPTIONAL EQUIPMENT .....</b>	<b>4-1</b>
4.1 External Buzzer .....	4-1
4.2 ARP Kit ARP-11.....	4-2
<b>PACKING LISTS .....</b>	<b>A-1</b>
<b>OUTLINE DRAWINGS .....</b>	<b>D-1</b>
<b>INTERCONNECTION DIAGRAMS .....</b>	<b>S-1</b>

# EQUIPMENT LISTS

## Standard supply

Name	Type	Code No.	Qty	Remarks
Control unit	RCU-017	-	1	
Processor unit	RPU-015	-	1	
Antenna unit	RSB-0094-0075	-	1	MODEL1824C-BB
	RSB-0071-057	-		MODEL1834C-BB
	XN10A-RSB-0070-064	-		MODEL1934C-BB, 24 rpm
	XN10A-RSB-0073-064	-		MODEL1934C-BB, 48 rpm
	XN12A-RSB-0070-059	-		MODEL1944C-BB, 24 rpm
	XN12A-RSB-0073-059	-		MODEL1944C-BB, 48 rpm
	XN12A-RSB-0072-060	-		MODEL1954C-BB, 4ft, 24 rpm
	XN12A-RSB-0073-060	-		MODEL1954C-BB, 4ft, 48 rpm
	XN13A-RSB-0072-060	-		MODEL1954C-BB, 6ft, 24 rpm
	XN12A-RSB-0072-061	-		MODEL1964C-BB, 4ft, 24 rpm
	XN12A-RSB-0073-061	-		MODEL1964C-BB, 4ft, 48 rpm
	XN13A-RSB-0072-061	-		MODEL1964C-BB, 6ft, 24 rpm
Power supply unit	PSU-005	-	1	For MODEL 1954C-BB
Power supply unit	PSU-008	-	1	For MODEL 1964C-BB
Installation materials	CP03-25401	008-443-160	1set	For ant. unit of Model 1824C-BB
	CP03-16901	008-478-750	1set	For ant. unit of Model 1834C-BB
	CP03-18401	008-503-360	1set	For ant. unit of Model 19xxC-BB
	CP03-26000	000-080-535	1set	MJ-A7SPF0006-050
	CP03-26100	000-080-536		MJ-A7SPF0006-100
	CP03-25900	000-080-542	1	For Processor unit: MJ-A3SPF0018-050Z, CP03-25901
	CP03-21800	000-080-014	1	For MODEL1824C-BB/1834C-BB 10 m cable MJ-B24LPF-0002-100
	CP03-21810	000-080-015		For MODEL1824C-BB/1834C-BB 15m cable MJ-B24LPF-0002-150
	CP03-21820	000-080-016		For MODEL1824C-BB/1834C-BB 20m cable MJ-B24LPF-0002-200
	CP03-21830	000-080-017		For MODEL1824C-BB/1834C-BB 30m cable MJ-B24LPF-0002-300
	CP03-22000	000-080-021	1	For 1934C-BB/1944C-BB/1954C-BB 10m cable MJ-B24LPF-0005-100
	CP03-22010	000-080-022		For 1934C-BB/1944C-BB/1954C-BB 15m cable MJ-B24LPF-0005-150
	CP03-22020	000-080-023		For 1934C-BB/1944C-BB/1954C-BB 20m cable MJ-B24LPF-0005-200
	CP03-22030	000-080-024		For 1934C-BB/1944C-BB/1954C-BB 30m cable MJ-B24LPF-0005-300
	CP03-30500	000-083-620	1	For 1964C-BB, 10m RW-9771 cable
	CP03-30510	000-083-621		For 1964C-BB, 15m RW-9771 cable
	CP03-30520	000-083-622		For 1964C-BB, 20m RW-9771 cable
	CP03-30530	000-083-623		For 1964C-BB, 30m RW-9771 cable
	CP03-24500	000-080-191	1	For power supply unit of 1954C-BB cable VL3P-VV-S2X2C-AA050 cable MJ-B24LPF0009-050 Inst. Mat. CP03-24501

Installation materials	CP03-30600	000-084-769	1	For power supply unit of 1964C-BB cable VL3P-VV-S2X2C-AA050 cable MJ-B24LPF0011-050 Inst. Mat. CP03-30601
Accessories	FP03-10000	000-081-860	1	For RCU-017. FP03-10001, hard cover
Spare parts	SP03-14501	008-444-420	1set	Fuses for 1964C-BB's power supply unit
	SP03-14001	000-080-018	1set	Fuses for 1954C-BB's power supply unit
	SP03-14501	008-444-420	1set	Fuses for processor unit

### Optional supply

Name	Type	Code No.	Qty	Remarks
Rectifier	PR-62	000-013-484	1	For GD-1920C-BB, 100 VAC
		000-013-485		For GD-1920C-BB, 110 VAC
		000-013-486		For GD-1920C-BB, 220 VAC
		000-013-487		For GD-1920C-BB, 230 VAC
	RU-3423	000-030-443	1	For MODEL series
External buzzer	XH3-BZ-L970	000-146-422	1	
Cable assy.	MJ-A6SPF0014-010C	000-154-027-10	1	For NavNet, 1 m
	MJ-A6SPF0014-050C	000-154-049-10	1	For NavNet, 5 m
	MJ-A6SPF0014-100C	000-154-050-10	1	For NavNet, 10 m
	MJ-A6SPF0014-200C	000-154-051-10	1	For NavNet, 20 m
	MJ-A6SPF0014-300C	000-154-052-10	1	For NavNet, 30 m
	MJ-A6SPF0012-050C	000-154-053-10	1	For navaid, 5 m, 6P-6P cross
	MJ-A6SPF0012-100C	000-154-037-10	1	For navaid, 10 m, 6P-6P cross
	MJ-A6SPF0003-050C	000-154-054-10	1	w/6P connector, 5 m
	MJ-A6SPF0009-100C	000-125-236	1	w/6P connector, 10 m
	MJ-A6SPF0007-100	000-125-237	1	For compass, 10 m, 6P-6P straight
	MJ-A7SPF0007-050	000-144-418	1	w/7P connector, 5 m
	MJ-A6SRMD/TM11AP8-005	000-144-463	1	Adapter cable for HUB
	3COX-2P-6C 5M	000-146-500	1	For monitor D-sub 15
	3COX-2P-6C 10M	000-146-501	1	
	MJ-B24LPF0010-100	000-147-880	1	For remote display, 10 m
MJ-B24LPF0010-200	000-147-881	1	For remote display, 20 m	
MJ-B24LPF0010-300	000-147-882	1	For remote display, 30 m	
ARP kit	ARP-11	008-523-050	1	ARP Board, for radar
Mounting bracket (1)	OP03-92	008-445-070	1	For MODEL1834C-BB
Mounting bracket (2)	OP03-93	008-445-080	1	For MODEL1824C-BB
Chart card	-	-	-	Specify when ordering.
EMI core	CP03-24801	008-481-410	1	For remote display cable connection
Ring unit	MU3721	000-144-645	1	For trackball of control unit
Desktop mounting kit	FP03-09901	008-443-540	1	For control unit RCU-017
Cable assy.	MJA7SPF0006-050	000-147-879	1	Cable between processor unit and control unit
	MJA7SPF0006-100	000-147-578		Cable between processor unit and control unit
Control unit	RCU-017-E-5-CS	-	1	w/5 m cable
	RCU-017-E-5-CS	-	1	w/10 m cable
AIS interface	IF-1500AIS	-	1	For connection of AIS FA-100


# SYSTEM CONFIGURATIONS

All NavNet products incorporate a "network circuit board" to integrate each NavNet product on board through an optional LAN cable (Ethernet 10BASE-T). Each NavNet product is assigned an IP address to enable transfer of images between other NavNet products. For example, video plotter pictures can be transferred to a radar and vice versa. Pictures received via the NavNet may be adjusted at the receiving end.


The number of processor units which may be installed depends on the number of network sounders connected. For a system incorporating three or more NavNet products, a "hub" is required to process data.

For one network sounder: one radar and three plotters, or four plotters

For two network sounders: one radar and two plotters, or four plotters

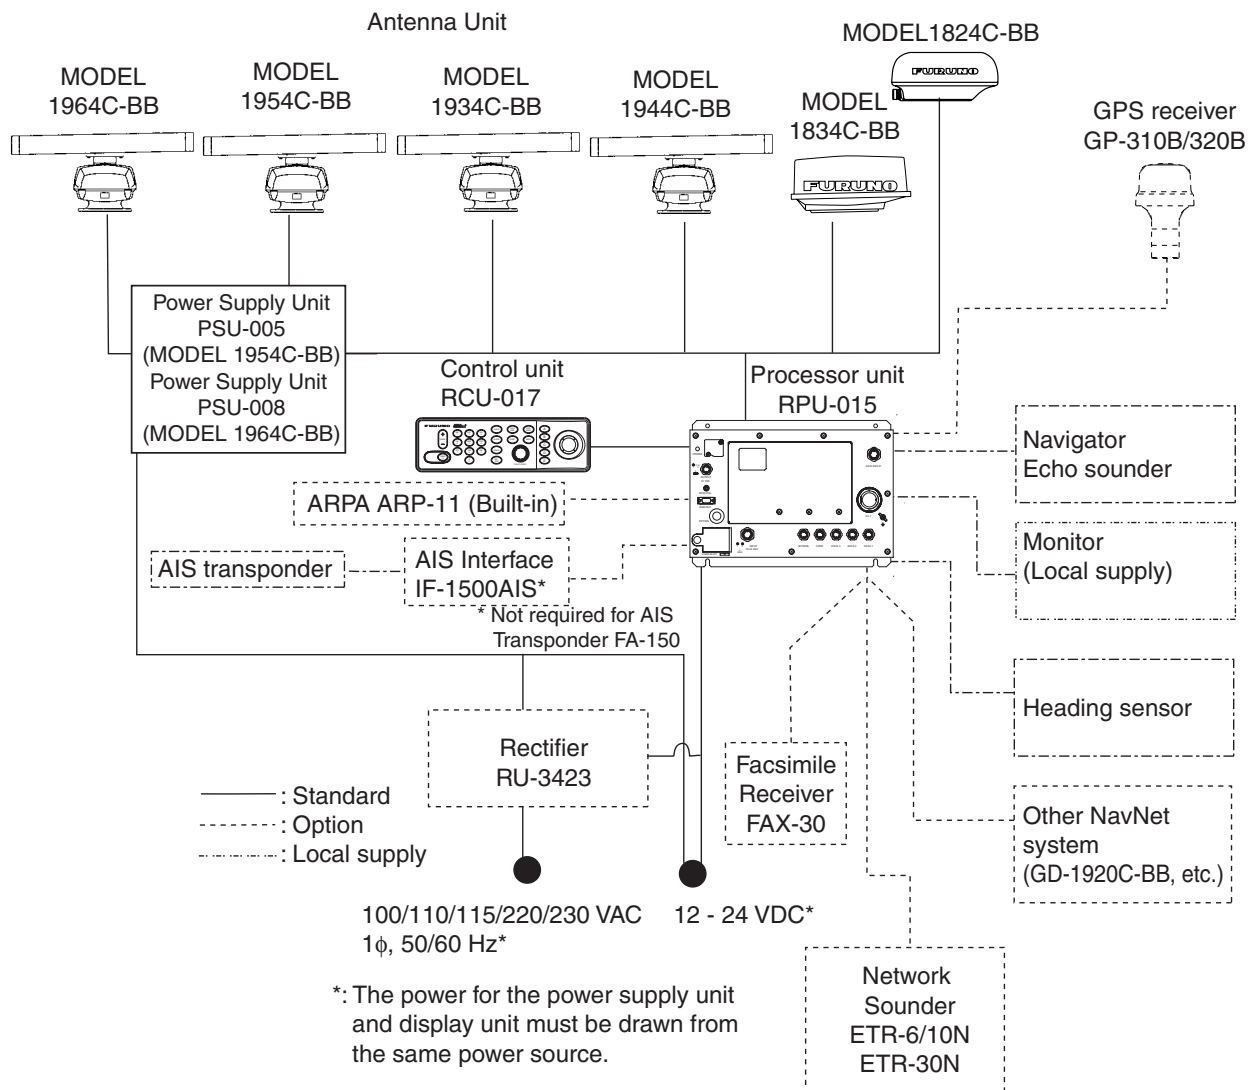

NavNet system: Model 1824C-BB/1834C-BB/1934C-BB/1944C-BB/1954C-BB/1964C-BB

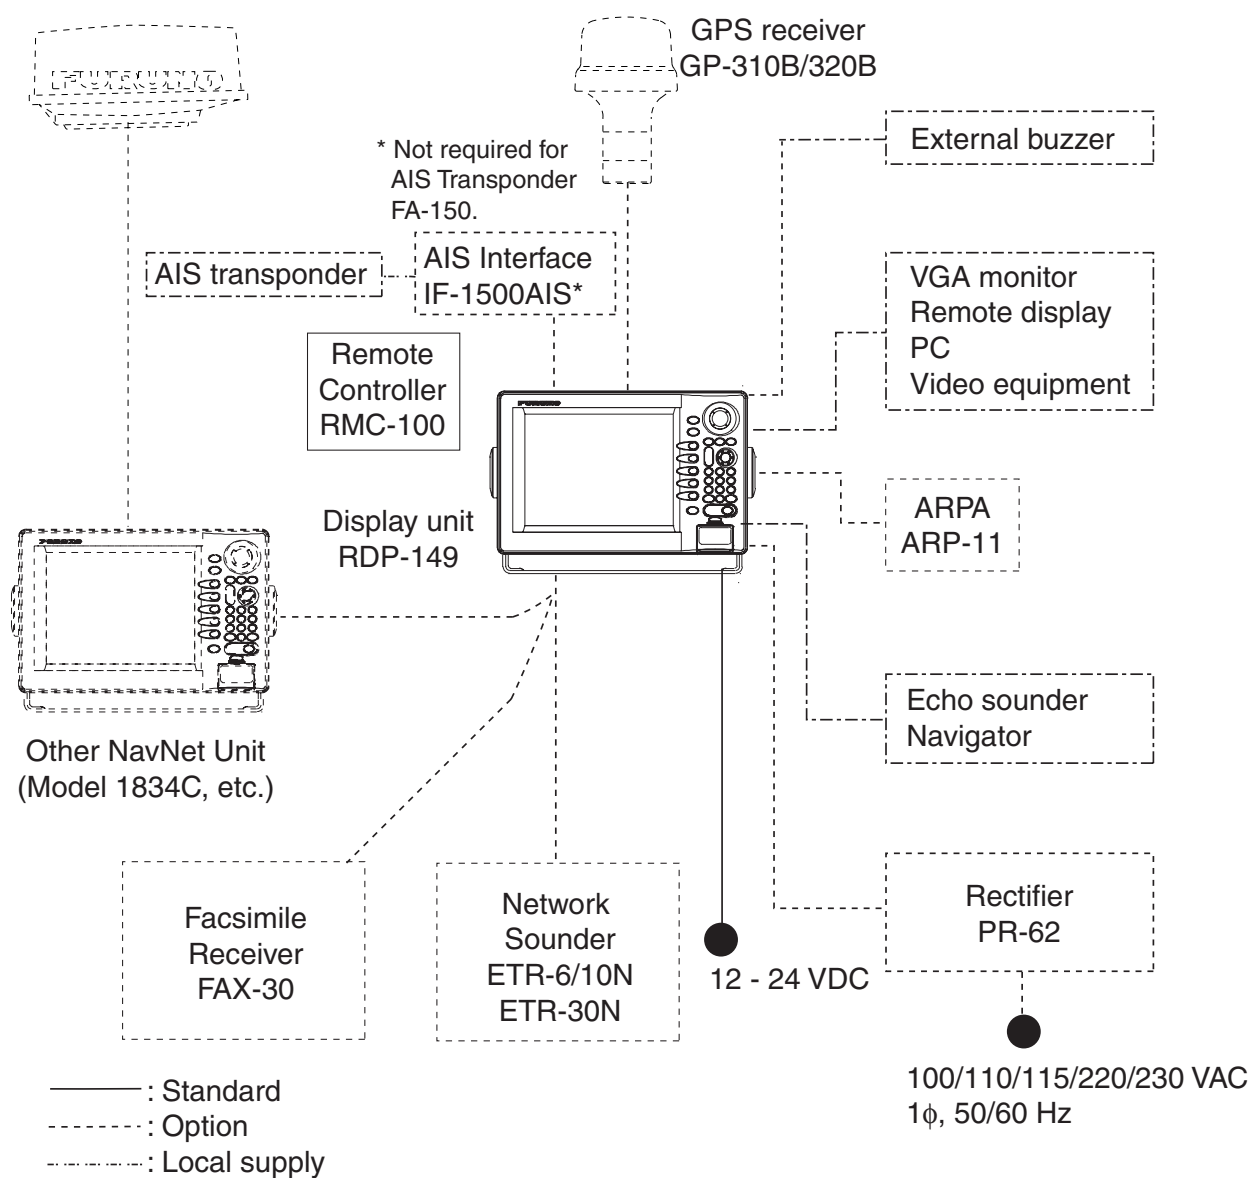

NavNet system: GD-1920C-BB


**Note:** The output signal from the processor unit for a monitor is as follows.

RGB signal: Analog 0.7 Vpp, Output impedance 75 Ω  
 Synchro signal: H 31.5 kHz, V 60Hz (Separate), TLL level  
 (VGA signal)

Choose a monitor whose aspect ratio is 4:3, for example, VGA, SVGA, XGA, SXGAX, VXGA, QXGA, etc




**Three-or-more-unit NavNet system**

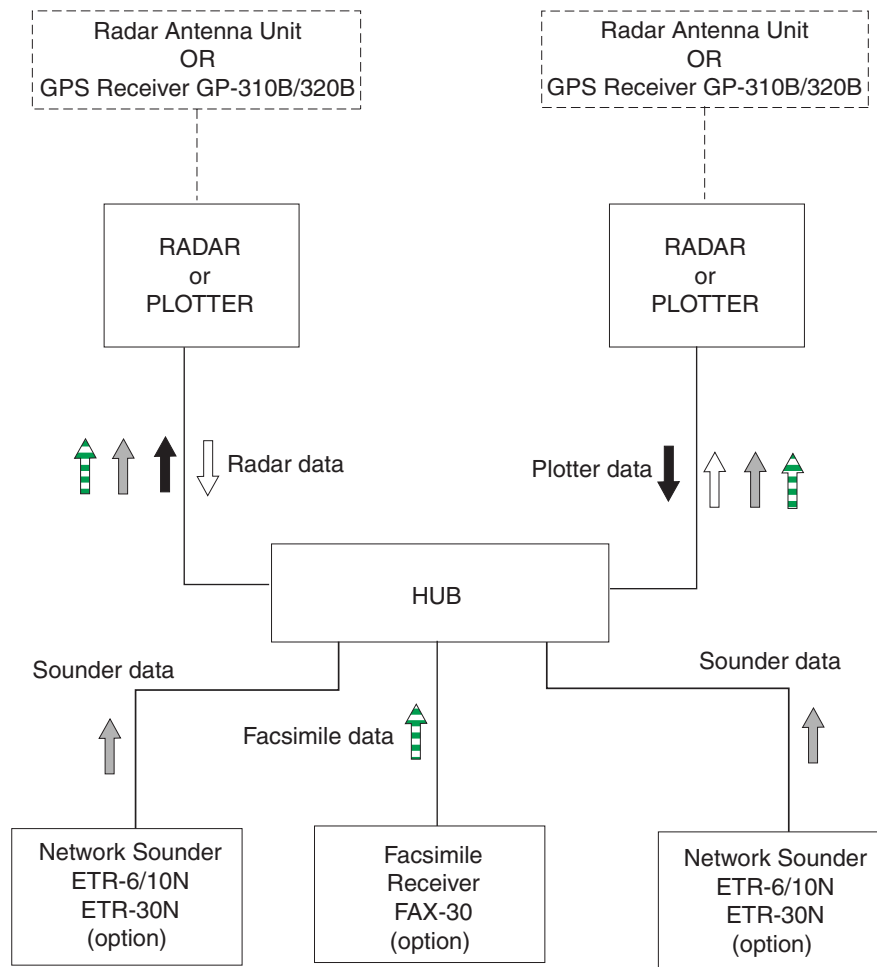

*Three-or-more-unit NavNet system*

**Two-unit NavNet system**

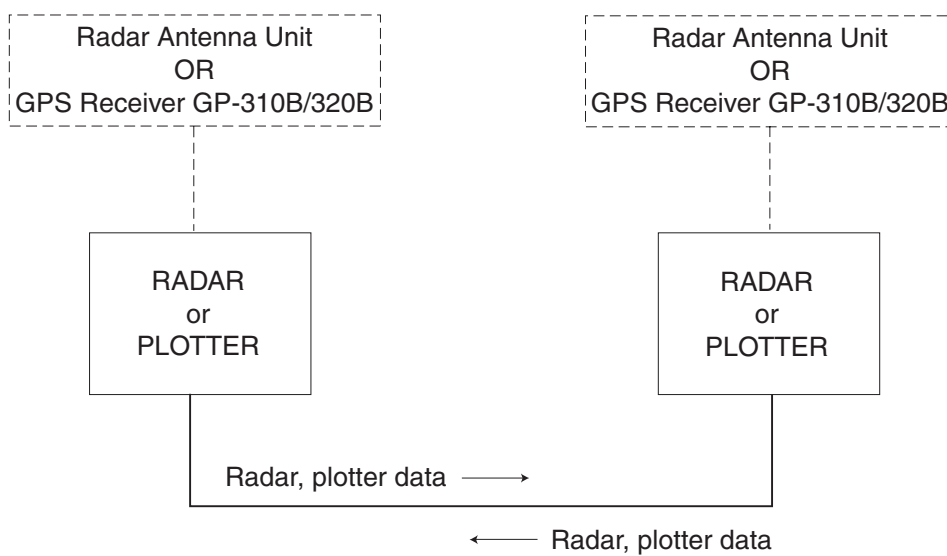

*Two-unit NavNet system*

This page intentionally left blank.

# 1. MOUNTING

---

## 1.1 Mounting the Control Unit

### 1.1.1 Mounting considerations

The control unit can be mounted on a desktop or flush mounted in a console or panel. For flush mounting, the optional flush mount kit is required.

When selecting a mounting location for the control unit keep the following in mind:


- Keep the control unit out of direct sunlight.
- The temperature and humidity at the mounting location should be moderate and stable.
- Locate the unit away from exhaust pipes and vents.
- The mounting location should be well ventilated.
- Mount the unit where shock and vibration are minimal.
- Keep the unit away from electromagnetic field generating equipment such as motors and generators.
- For maintenance and checking purposes, leave sufficient space at the sides and rear of the unit and leave slack in cables. Minimum recommended space is shown in the outline drawing for the control unit.
- A magnetic compass will be affected if the control unit is placed too close to it. Observe the compass safe distances shown in the SAFETY INSTRUCTIONS to prevent disturbance to the magnetic compass.

## 1.1.2 Mounting procedure

### Flush mounting

Follow the procedure below to mount the control unit in a panel, using accessories FP03-10001.

1. Prepare a cutout in the mounting location, referring to the outline drawing at the end of this manual.
2. Set the control unit to the cutout.
3. Attach the mounting plate to the control unit with four screws M4 x 10 from the rear side.
4. Screw four wing bolts into wing nuts.
5. Fasten the control unit to the mounting location with four wing bolts and wing nuts assembled at step 4.

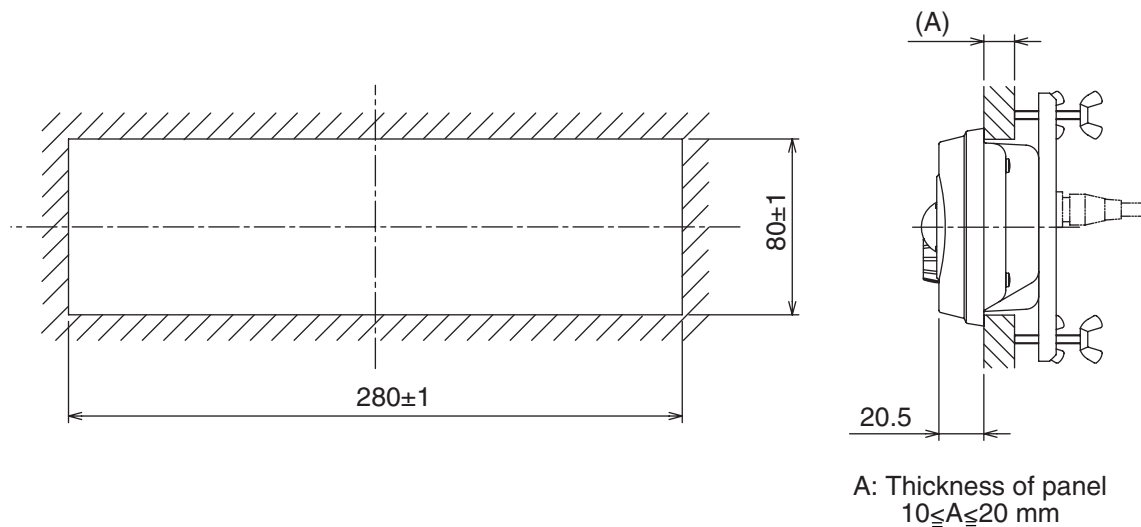


### *Flush mounting the control unit*

6. Attach hard cover to protect the control unit.

#### How to remove the hard cover

Place your thumbs at the locations shown with circles in the illustration at right, and then lift the cover while pressing it with your thumbs.

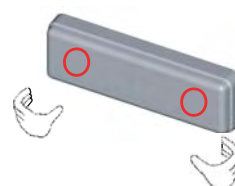


**Desktop mounting**

Use the optional desktop mount kit FP03-09901 (Code number 008-443-540).

No.	Name	Type	Code No.	Qty
1	Hanger fixture	19-023-1061	100-307-941	1
2	Hanger fixture	19-023-1062	100-307-951	1
3	Tapping screw	5 x 20	000-802-081	4
4	Hex bolt	M5 x 10	000-802-288	2

1. Fix the hanger fixture 19-023-1062 on a desktop with four tapping screws (5x20).
2. Fix the hanger fixture 19-023-1061 to the rear panel of the control unit with four M4x10 (supplied as accessories).
3. Set the control unit to the hanger fixture 19-023-1062 fixed at step 1 and fit it with two hex bolts.

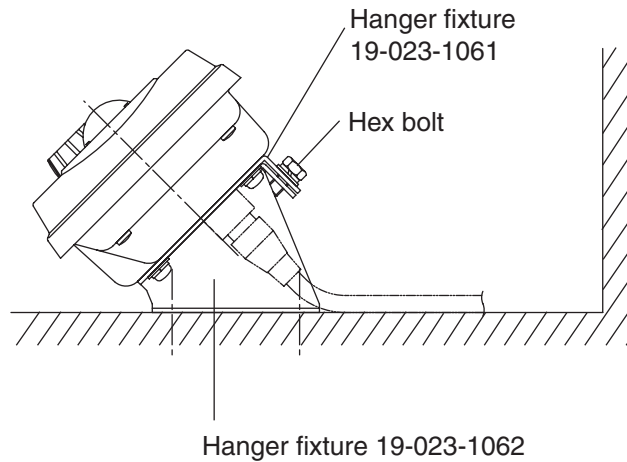

*Desktop mounting of display unit*

4. Attach hard cover to protect the control unit.


## 1.2 Mounting the Processor Unit

The unit can be mounted on the deck, a desktop or on a bulkhead. Select a mounting location considering the points below.

- Locate the unit out of direct sunlight.
- Select a location where temperature and humidity are moderate and stable.
- Consider the length of the cable connected among the processor unit, antenna unit (or power supply unit) and control unit.
- For mounting on a bulkhead, be sure the mounting location is strong enough to support the unit (4.1kg) under the pitching and rolling normally encountered on the vessel.
- Leave sufficient space around the unit for maintenance and servicing. Recommended maintenance space appears in the outline drawing at the back of this manual.
- A magnetic compass will be affected if the processor unit is placed too close to the magnetic compass. Observe the compass safe distances in the SAFETY INSTRUCTIONS to prevent disturbance to the magnetic compass.

**Tabletop or deck mounting:** Fasten with four tapping screws.

**Bulkhead mounting:** Mark four fixing hole positions on the bulkhead. Screw in two tapping screws at lower fixing positions, leaving 5 mm protruding. Set the processor unit to the screws and screw in two tapping screws at upper positions. Tighten all screws.

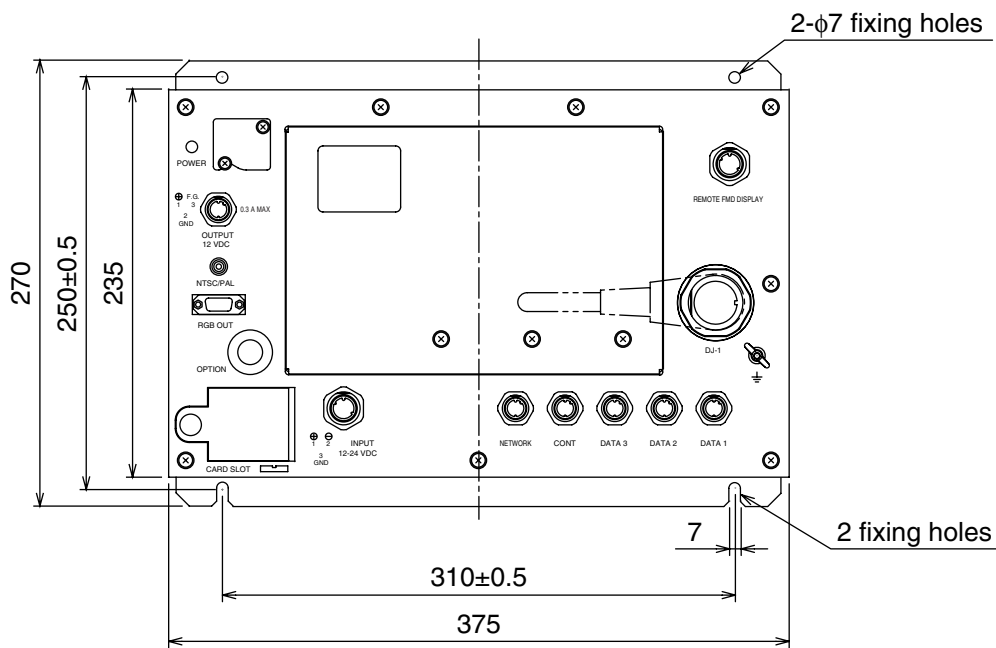


*Processor unit, mounting dimensions*

## 1.3 Mounting the Antenna Unit of MODEL 1824C-BB

### 1.3.1 Mounting considerations

When selecting a mounting location for the antenna unit, keep in mind the following points.

- Install the antenna unit on the hardtop, radar arch or on a mast on an appropriate platform. (For sailboats, a mounting bracket is optionally available.) It should be placed where there is a good all-round view with, as far as possible, no part of the ship's superstructure or rigging intercepting the scanning beam. Any obstruction will cause shadow and blind sectors. A mast, for instance, with a diameter considerably less than the width of the antenna unit, will cause only a small blind sector. However, a horizontal spreader or crosstrees in the same horizontal plane would be a much more serious obstruction; place the antenna unit well above or below it.

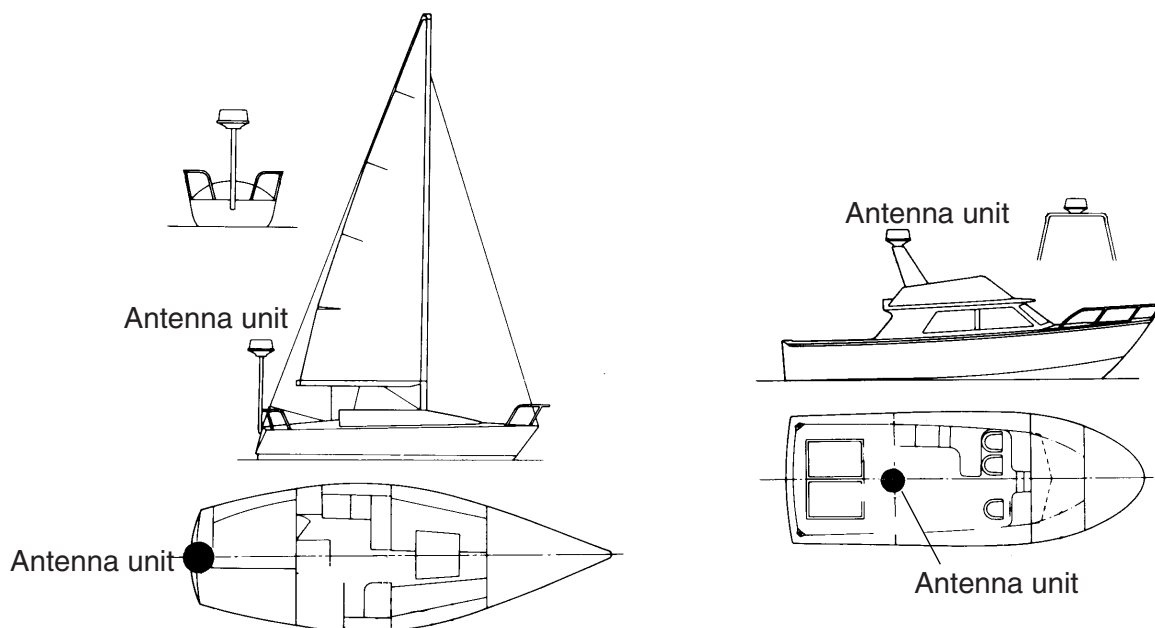


*Typical antenna unit placement on sailboat and powerboat*

- In order to minimize the chance of picking up electrical interference, avoid where possible routing the antenna cable near other electrical equipment onboard. Also avoid running the cable in parallel with power cables.
- Observe the compass safe distances mentioned in the SAFETY INSTRUCTIONS to prevent interference to a magnetic compass.

### 1.3.2 Mounting procedure

1. Remove the mounting hardware from the bottom of the antenna unit: four each of hex bolts (M10X20), spring washers and flat washers. Save the mounting hardware to use it to fix the antenna unit to the mounting platform later on.

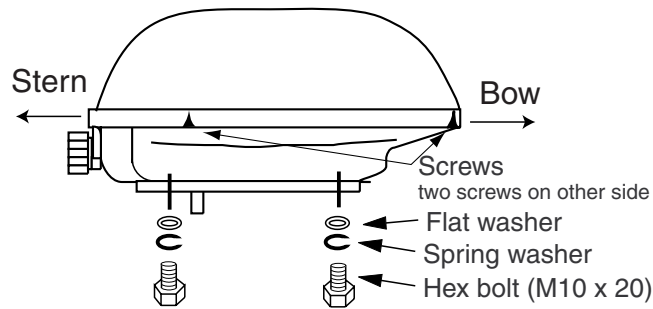

*Antenna unit, showing location of mounting hardware*


2. Construct a platform (wood, steel\*, or aluminum) of 5-10 mm (recommended dimension) in thickness referring to the outline drawing at back of this manual. Fasten the platform to the mounting location. Next, position the mounting base on the platform so the cable entrance faces the stern direction.

\*: For steel platform take appropriate measures to prevent corrosion.

**Note:** When drilling holes in the platform, be sure they are parallel with the fore and aft line.

3. Using the hex bolts, flat washers and spring washers removed at step 1, fasten the mounting base to the platform. **The torque should be between 19.6-24.5 N•m.**

**Note:** Longer hex bolts (M10X25) are supplied with the installation materials. Use them instead of the hex bolts removed earlier if the mounting platform thickness is 5–10 mm.

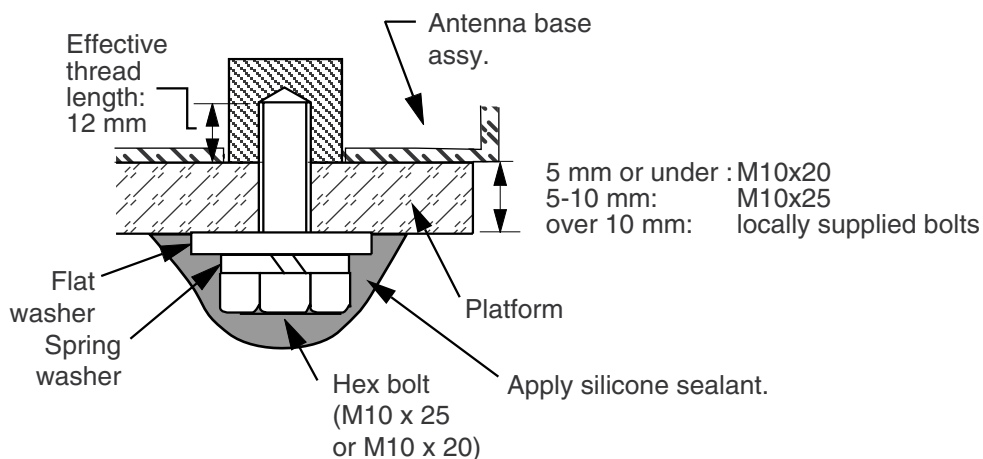


*How to fasten the mounting base to platform*




4. The mounting base is fitted with a snap holder, which may be used to hang the cover after removal. Use the hole next to a screw hole inside the cover to hang it.
  - a) Unfasten the snap assy. with the string attached at the holder in the mounting base.
  - b) Unwind the string.
  - c) Attach the snap to a screw hole on the inside of the cover.

**Note:** Do not hang any other objects with the snap.

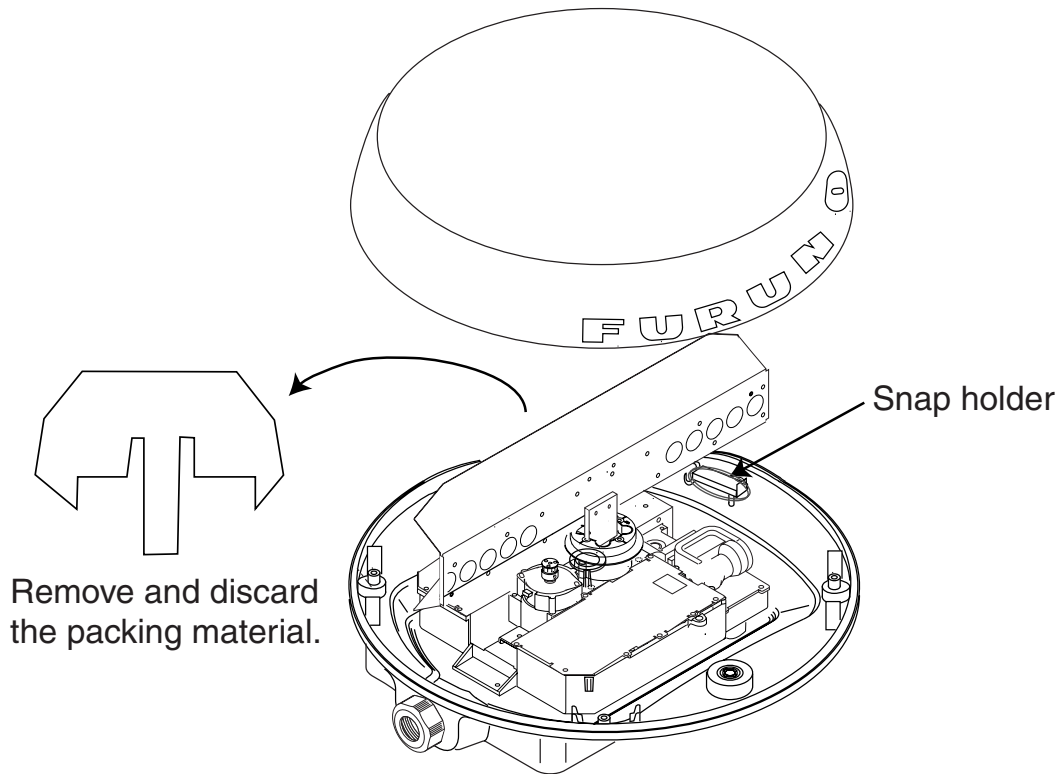

*Antenna unit, inside view*

5. Unfasten the rotation detector cable from the cable clamps, referring to the figure on page 1-11
6. Unfasten 16 screws (①, ② and ③ in the figure below) to dismount the shield plate, core case and core case cover.

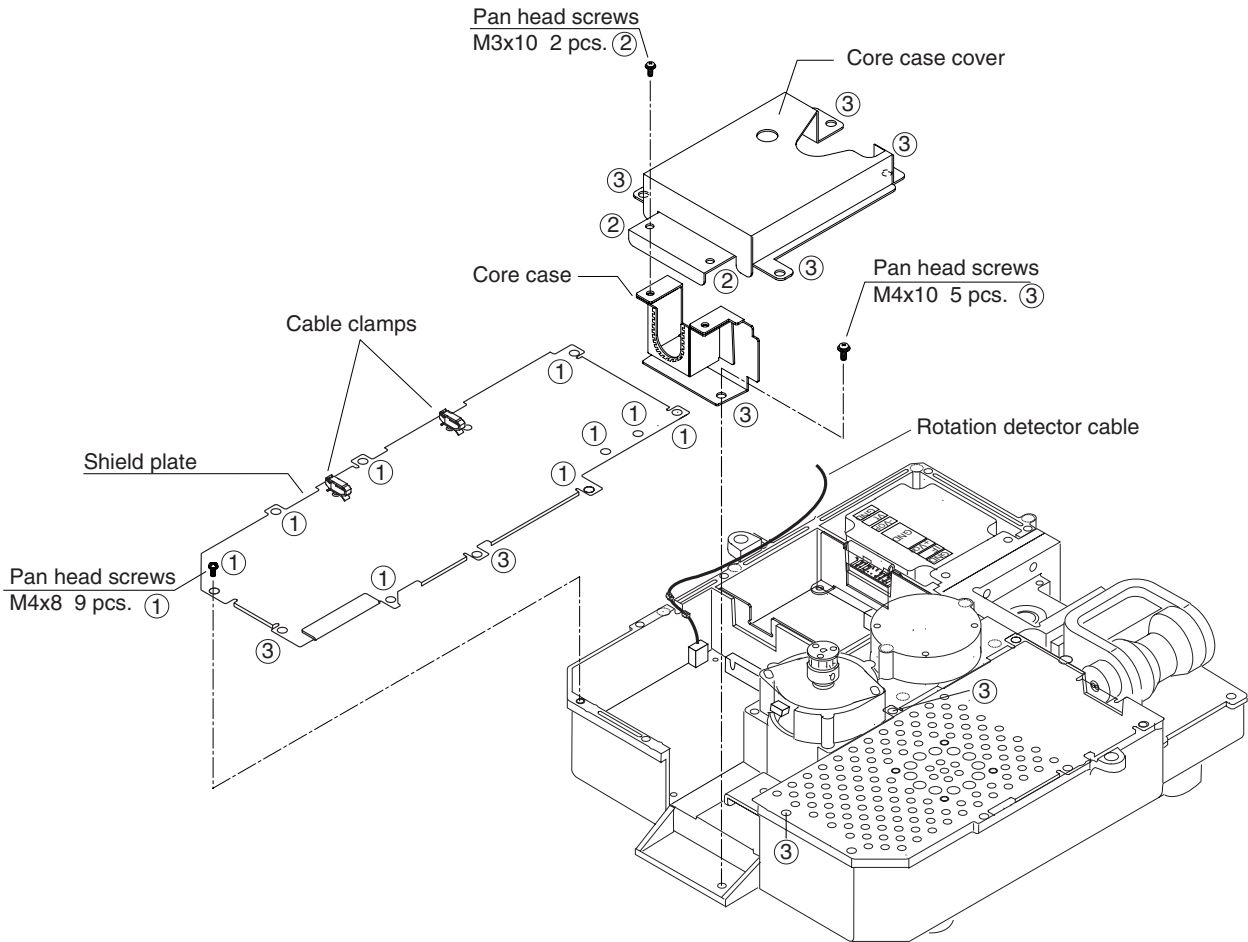


**Caution:** Be careful not to pinch the rotation detector cable when remounting the shield plate.

- Pass the antenna cable with connector through the cable gland, gasket and cable entrance of the antenna unit, and then tighten cable gland.


**Note 1:** Be sure the shrink tube on the antenna cable does not contact the gasket.

**Note 2:** Pinch the gasket tightly and insert it into the cable entrance. Confirm that the slit in the gasket is completely closed after inserting it into the cable entrance.

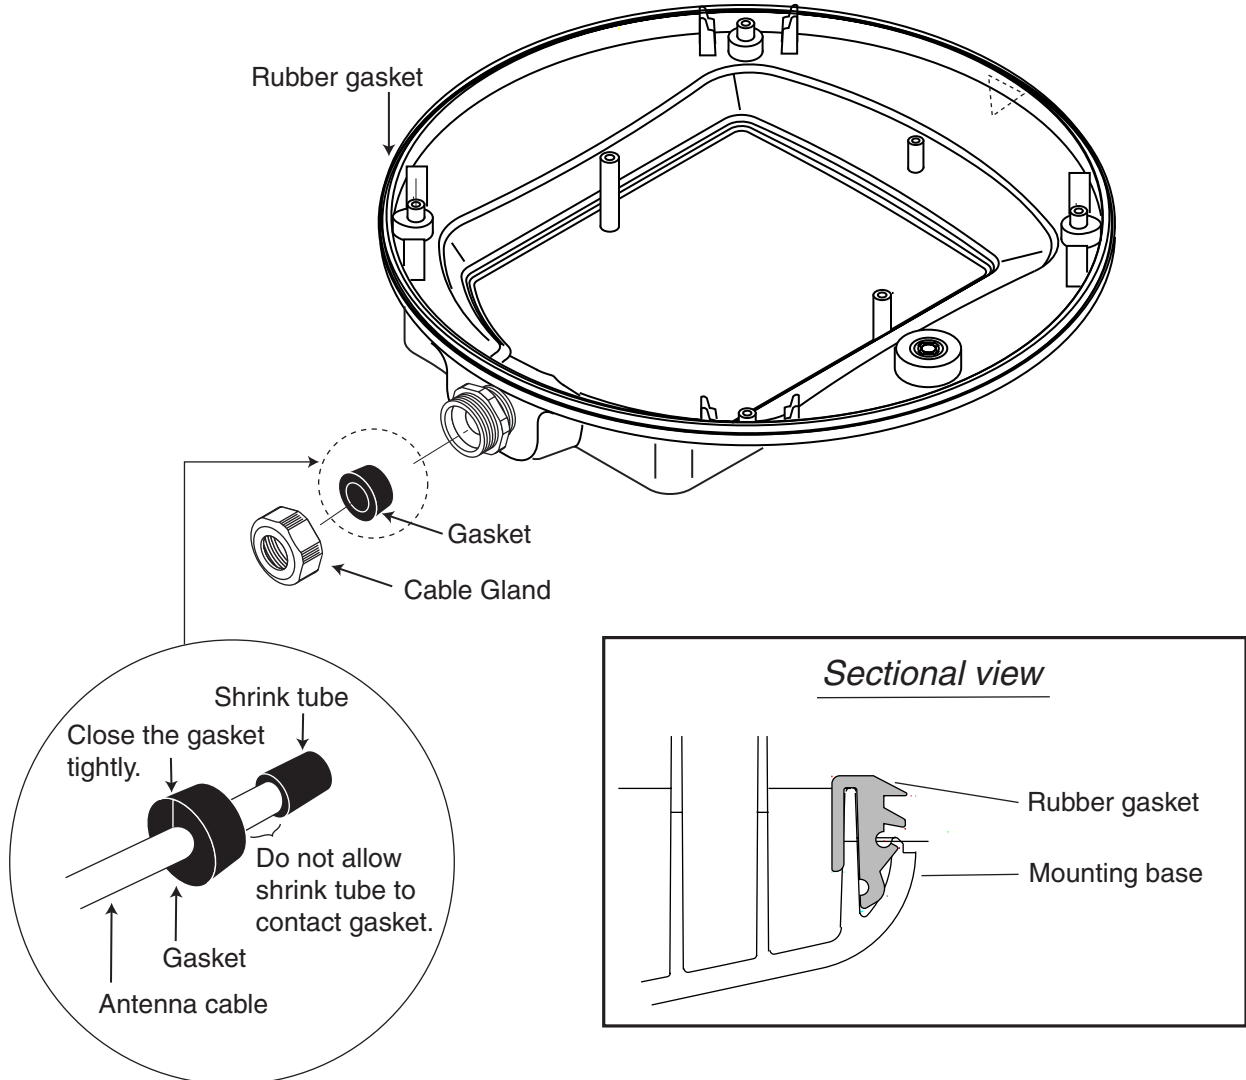


*Antenna unit, inside view*

- Twist antenna connector cables at the position between the shrink tube and the cable tie, and then attach EMI core (supplied) to cables as shown below. After attachment, shift EMI core slightly to confirm that it does not pinch cables.

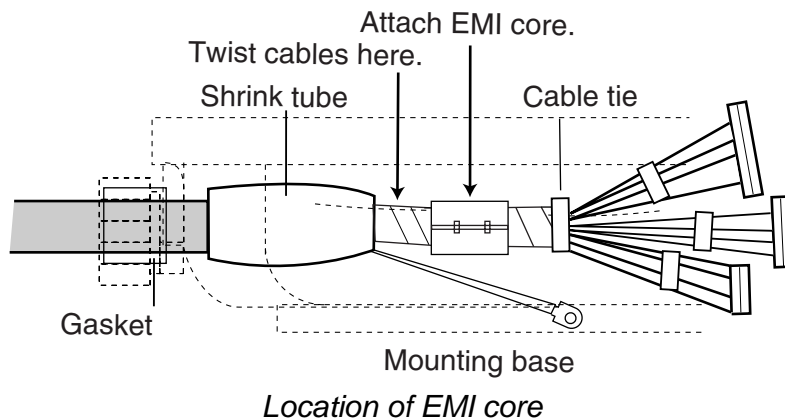


9. Attach connectors of the antenna cable to the locations shown in the figure below, and then fasten a pan head screw M4x10 to fix shield cable and core case (removed at step 6.)

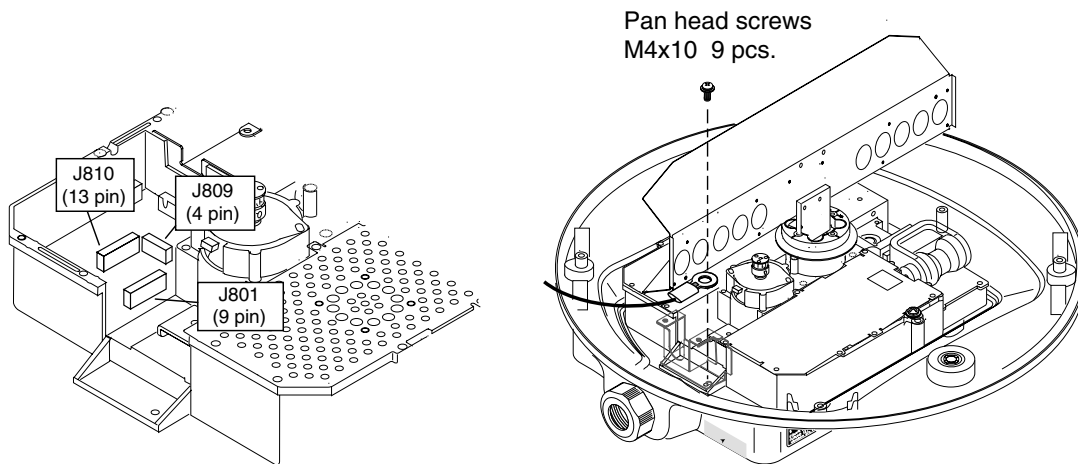


*Antenna unit, connector location and fixing the shield cable w/core case*

10. Put the EMI core on the antenna cable into the core case attached at step 9, with the flat side of the core facing downward.

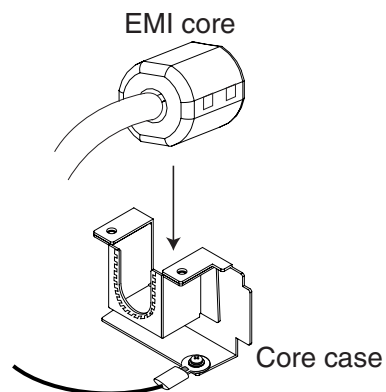


*EMI core, putting into core case*

11. Refasten the shield plate and core case cover with 15 screws. Be sure that the cable from the rotation detector passes through the notch between the two cable ties.

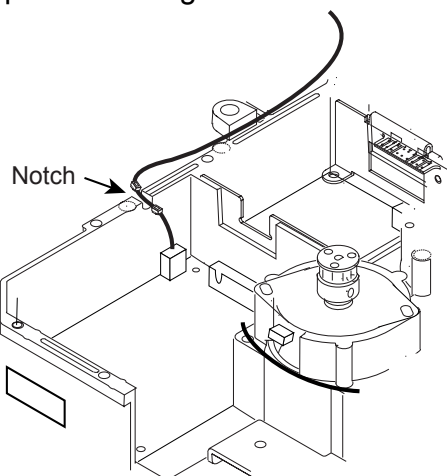

*How to pass the rotation detector cable*

12. Pass the cable from the rotation detector through two cable clamps.

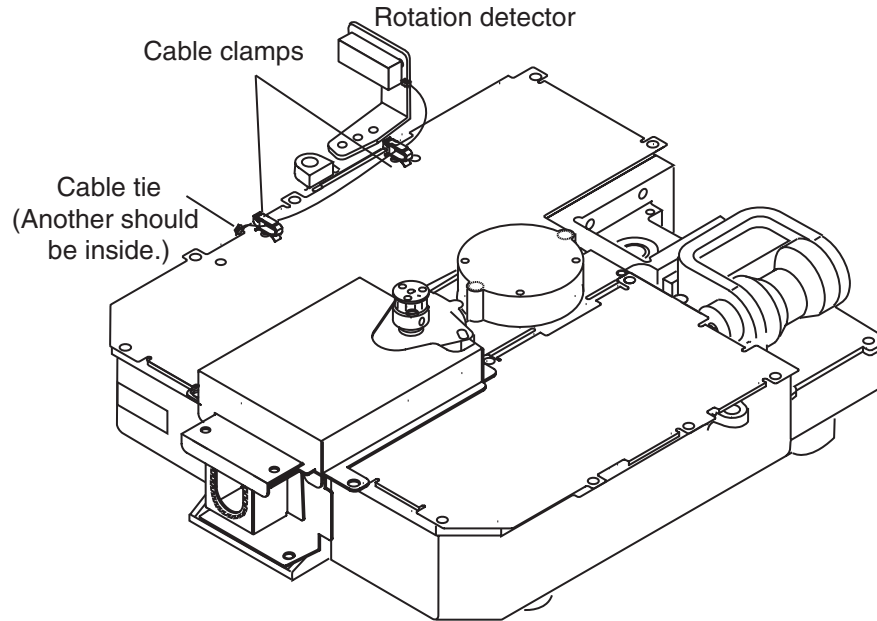

*Antenna unit, clamping the rotation detector cable*

13. Follow the instructions on the label inside the mounting base to secure the snap assy.

14. Confirm that the rubber gasket is properly positioned and that the triangle mark on the radome cover is aligned with the triangle mark on the mounting base, then tighten the fixing screws for the cover. See the sectional view on page 1-9 for how to position the rubber gasket.


**Mounting the optional mounting bracket**

A mounting bracket for fastening the antenna unit to a mast on a sailboat is optionally available.


*Contents of mounting bracket 2 kit Type: OP03-93, Code No.: 008-445-080*

Part	Type	Code No.	Qty
Hex. bolt	M4x12	000-804-725	4
Hex. bolt	M8x20	000-805-707	8
Mounting plate	03-018-9001-0	100-206-740	1
Support plate (1)	03-018-9005-0	100-206-780	1
Support plate (2)	03-018-9006-0	100-206-790	1
Bracket (1)	03-028-9101-0	100-206-810	1
Bracket (2)	03-028-9102-0	100-206-820	1
Fixing plate	03-028-9103-0	100-206-830	2

Assemble the mounting bracket and fasten it to a mast. Fasten the antenna unit to the bracket. For details, see the figure on the next page.

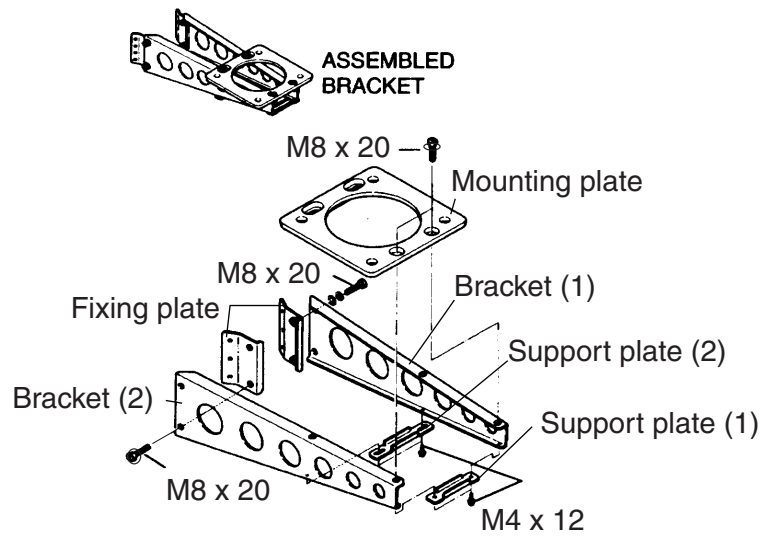

**(A) Assembling the mounting bracket**

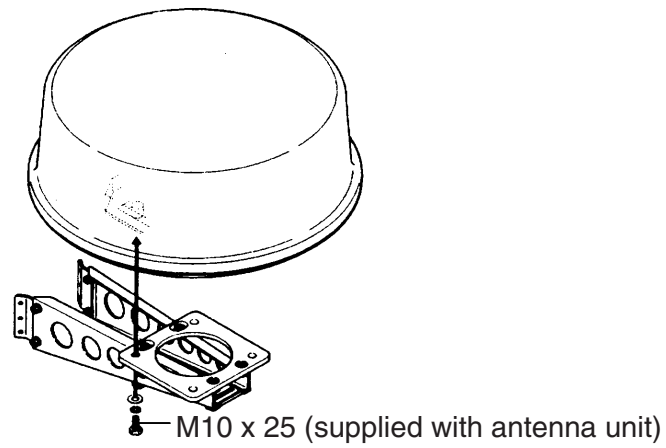

**(B) Fastening antenna to mounting bracket**

*How to assemble and mount the optional mounting bracket*


## 1.4 Mounting the Antenna Unit of MODEL1834C-BB

### 1.4.1 Mounting considerations

- See the mounting considerations for the MODEL1824C-BB on page 1-5.

### 1.4.2 Mounting procedure

1. Open the antenna unit packing box carefully.
2. Unbolt the four bolts at the base of the radome cover to remove the cover.

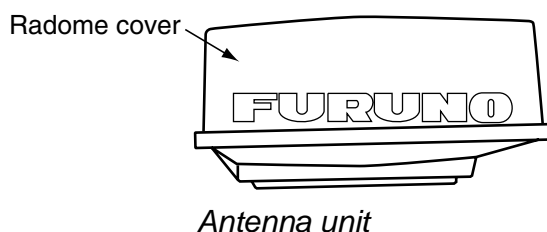


The mounting surface must be parallel with the waterline and provided with five holes (four fixing holes and one cable entry) whose dimensions are shown in the outline drawing at the back of this manual.

The unit is adjusted so a target echo returned from the bow direction will be shown on the zero degree (heading line) position on the screen. When drilling holes, be sure they are parallel with the fore and aft line.


3. Prepare a platform (wood, steel\*, or aluminum) of 5 to 10 millimeters in thickness for the antenna unit.

A mounting bracket for mounting the antenna unit on a sailboat mast is optionally available. (Refer to page 1-17.) Find the cable entry on the radome base. Next, position the radome base so the cable entry faces the stern direction. This alignment must be as accurate as possible.

\*: For steel platform, take appropriate measures to prevent corrosion.

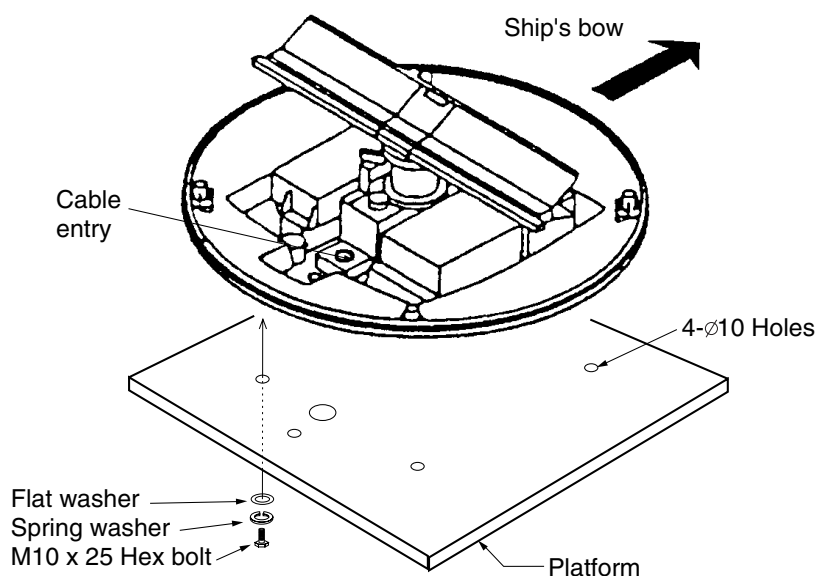


Antenna unit, cover removed

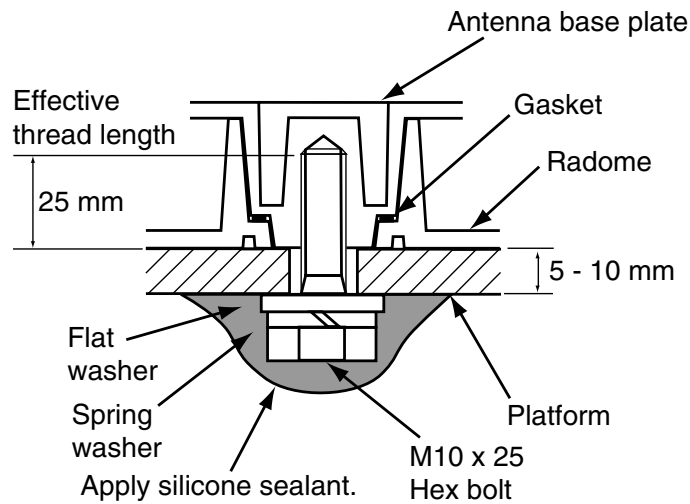

*How to fasten the radome base to the mounting platform*

**Wiring and final preparations**

4. Drill a hole of approx. 16 mm diameter through the deck or bulkhead to run the signal cable between the antenna unit and the display unit. (To prevent electrical interference avoid running the signal cable near other electrical equipment and in parallel with power cables.) Pass the cable through the hole. Then, seal the hole with sealing compound for waterproofing.
5. Remove two shield covers in the radome.
6. Remove the cable clamping plate by unfastening four screws and removing a gasket.

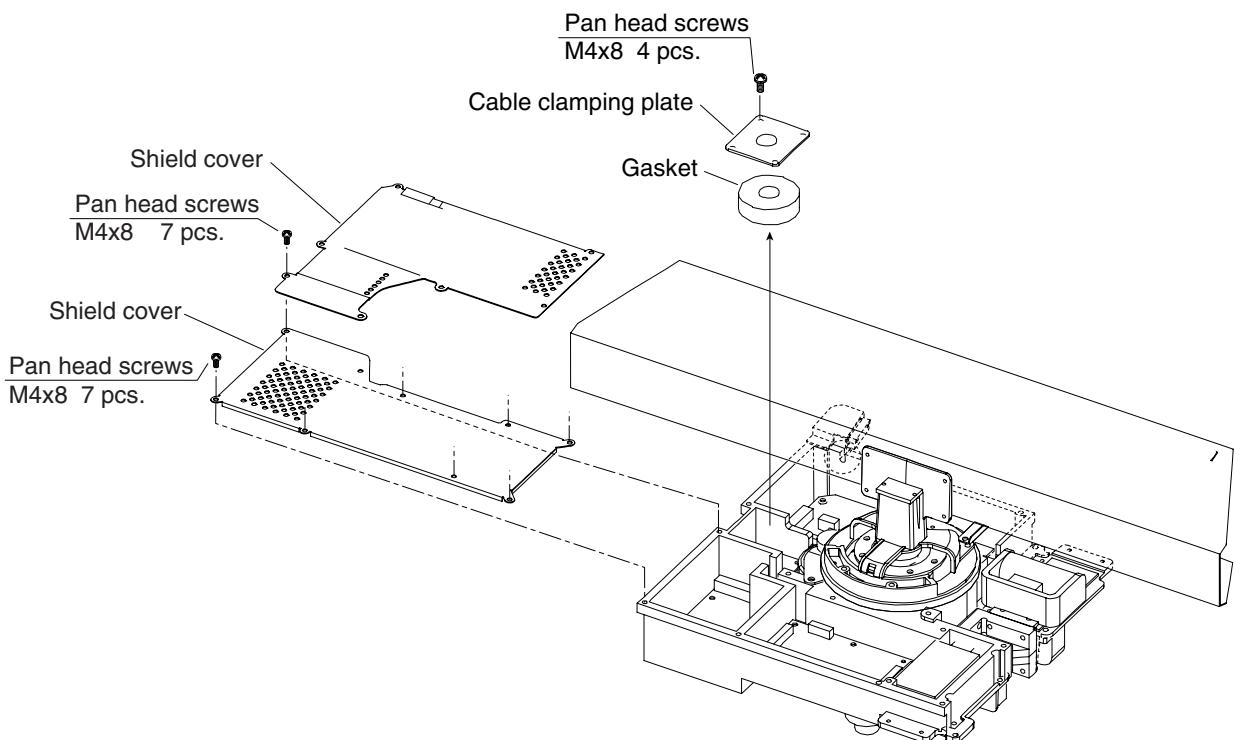


*Antenna unit, inside view*


7. Pass the cable through the hole at the bottom of the radome base.
8. Secure the cable with the cable clamping plate and gasket. Ground the shield wire by one of the screws of the cable clamping plate.




9. Attach three connectors of the signal cable to respective receptacles as shown below.

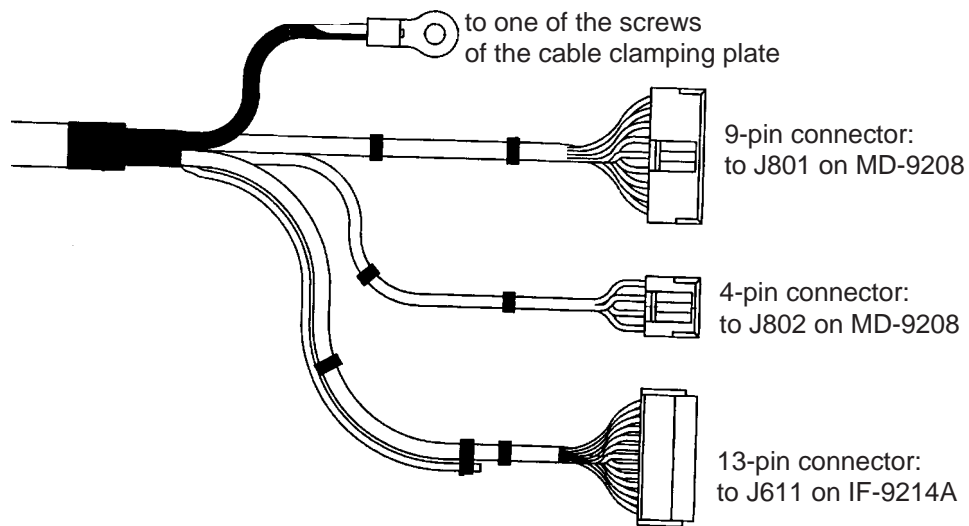

*Signal cable, antenna unit side*

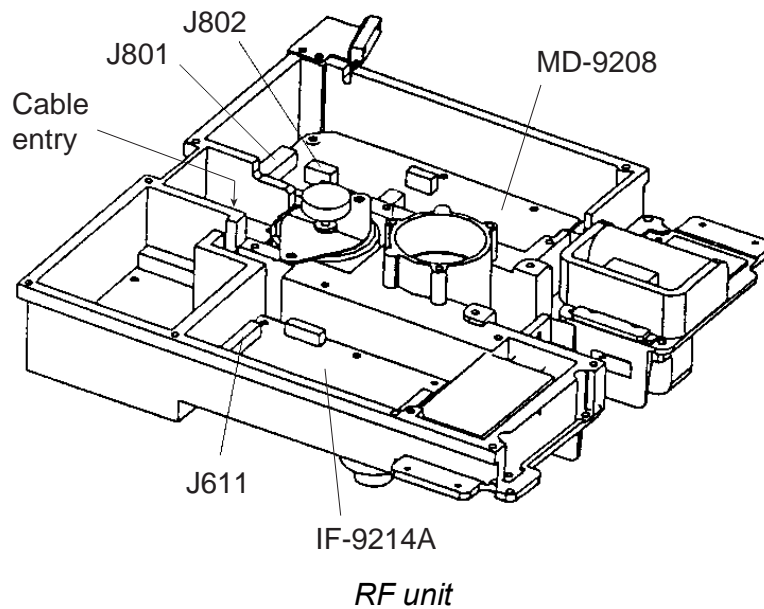


10. Bundle the cables with the EMI core (supplied) as shown below.

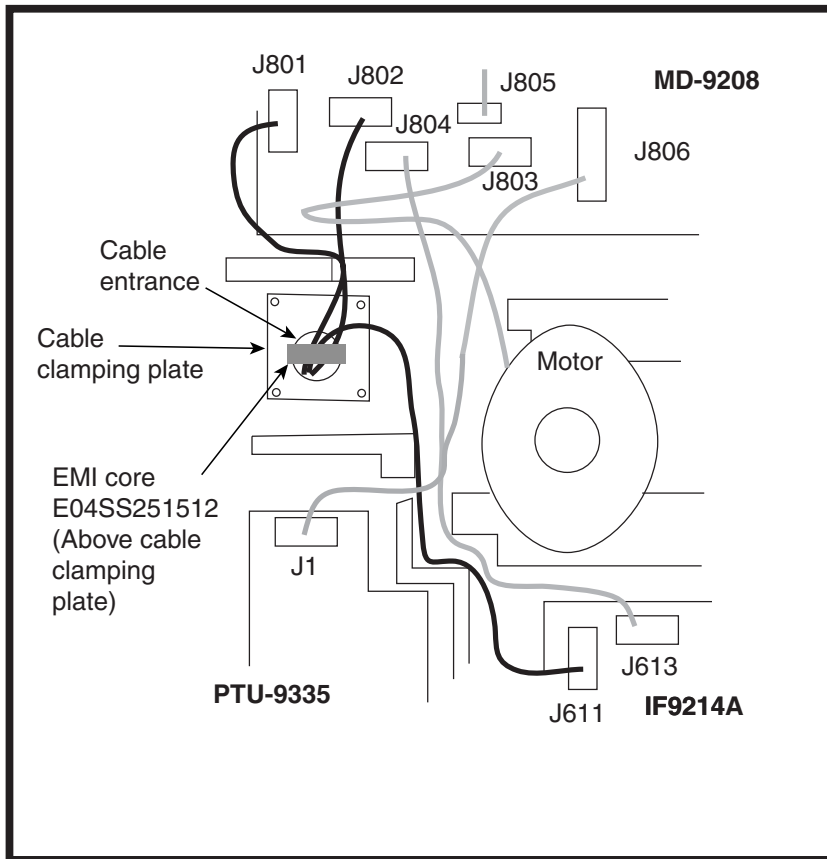

*EMI core*

11. Fix the shield cover. Do not pinch the cable.

12. Attach the radome cover, aligning triangle mark on radome cover with that on radome base.

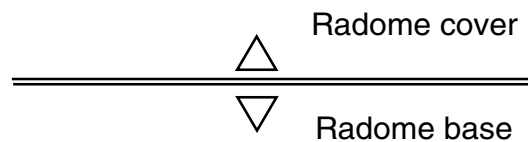

*How to position the radome cover*

13. Loosely fasten the radome fixing bolts. You will tighten them after confirming magnetron heater voltage.

**Mounting the optional mounting bracket**

A mounting bracket for fastening the antenna unit for the MODEL 1834C-BB to a mast on a sailboat is optionally available.

Contents of mounting bracket 1 (Type: OP03-92, Code No.: 008-445-070)

<b>Part</b>	<b>Type</b>	<b>Code No.</b>	<b>Qty</b>
Hex. bolt	M4X12	000-804-725	4
Hex. bolt	M8X20	000-805-707	8
Mounting plate	03-018-9001-0	100-206-740	1
Support plate (1)	03-018-9005-0	100-206-780	1
Support plate (2)	03-018-9006-0	100-206-790	1
Bracket (1)	03-018-9002-1	100-206-751	1
Bracket (2)	03-018-9003-1	100-206-761	1
Fixing plate	03-018-9004-1	100-206-771	2


Assemble the mounting bracket and fasten it to a mast. Fasten the antenna unit to the bracket. For details, see the figure on page 1-11.

## 1.5 Mounting the Antenna Unit of MODEL 1934C-BB/1944C-BB/1954C-BB/1964C-BB


### 1.5.1 Mounting considerations

- The antenna unit is generally installed either on top of the wheelhouse or on the radar mast on a suitable platform. Locate the antenna unit where there is a good all-round view. Any obstruction will cause shadow and blind sectors. A mast for instance, with a diameter considerably less than the horizontal beamwidth of the radiator, will cause only a small blind sector, but a horizontal spreader or crosstrees in the same horizontal plane as the antenna unit would be a much more serious obstruction; you would need to place the antenna unit well above or below it.
- It is rarely possible to place the antenna unit where a completely clear view in all directions is available. Thus, you should determine the angular width and relative bearing of any shadow sectors for their influence on the radar at the first opportunity after fitting.
- To lessen the chance of picking up electrical interference, avoid where possible routing the signal cable near other onboard electrical equipment. Also avoid running the cable in parallel with power cables.
- A magnetic compass will be affected if the antenna unit is placed too close to it. Observe the compass safe distances mentioned in the SAFETY INSTRUCTIONS to prevent interference to a magnetic compass.
- Do not paint the radiator aperture, to ensure proper emission of the radar waves.
- When this radar is to be installed on larger vessels, consider the following points:
  - The signal cable run between the antenna and the display units comes in lengths of 10 m, 15 m, 20 m and 30 m.
  - Deposits and fumes from a funnel or other exhaust vent can adversely affect the aerial performance and hot gases may distort the radiator portion. The antenna unit must not be mounted where the temperature is more than 70°C.


As shown in the figure below, the antenna unit may be installed on the bridge, on a common mast or on the radar mast.

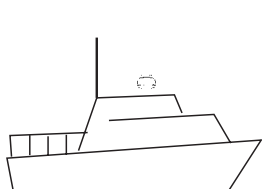

(a) On bridge

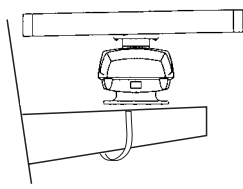

(b) Common mast

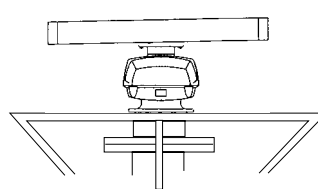

(c) Radar mast

*Mounting methods*


## 1.5.2 Mounting procedure

Referring to the outline drawing at the back of this manual, drill five holes in the mounting platform: four holes of 15 mm diameter for fixing the antenna unit and one hole of 25-30 mm diameter for the signal cable.

### Fastening the radiator to the radiator bracket


For your reference, the antenna installation materials list appears in the packing list for this unit at the back of this manual.

1. Remove the radiator cap from the radiator bracket.
2. Coat contacting surface between the antenna radiator and the radiator bracket with silicone sealant as shown in the figure below.

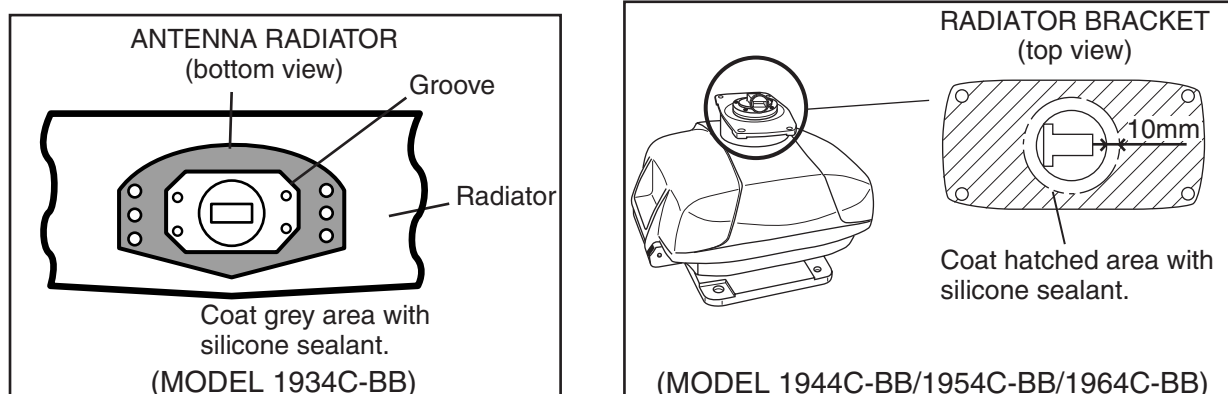

#### *Coating the antenna with silicone sealant*

3. Coat threaded holes on the antenna radiator with silicone sealant.
4. Grease the O-ring and set it to the radiator bracket.
5. Lay the antenna radiator on the radiator bracket.
6. Coat the radiator fixing bolts (4 pcs.) with silicone sealant. Fasten the antenna radiator to the radiator bracket with the radiator fixing bolts, flat washers and spring washers.

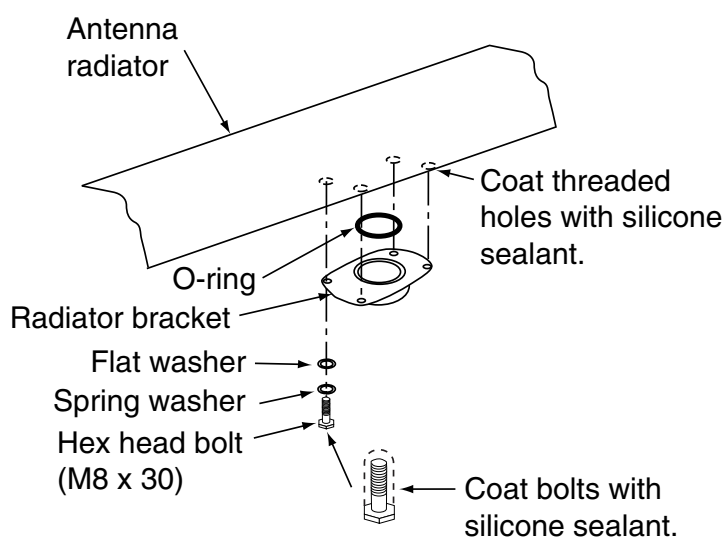

#### *Fastening the radiator bracket to the antenna unit chassis*


### Mounting the antenna unit

The antenna unit can be mounted using the fixing holes on the outside (200 x 200 mm) or inside (140 x 150 mm) the antenna unit.

#### **Using outside fixing holes of the antenna housing**


Use the hex head bolts (supplied) to mount the antenna unit as below.

1. Lay the corrosion-proof rubber mat (supplied) on the mounting platform.

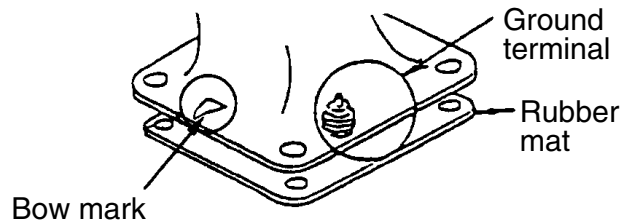

*Location of rubber mat*

2. Lay the antenna unit on the mounting platform, orienting it as shown in below.

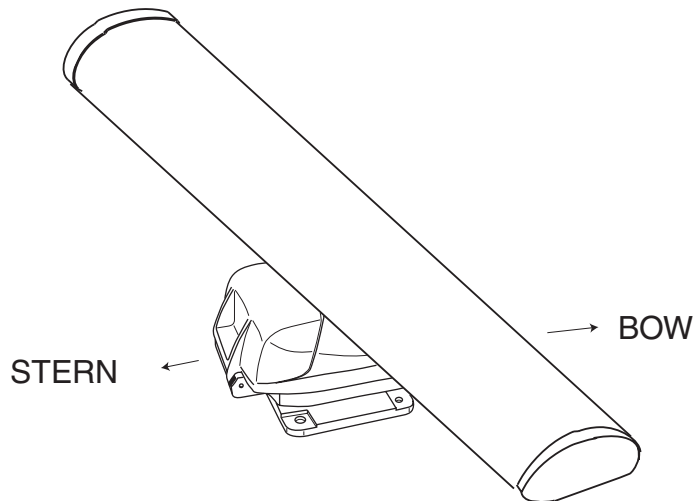

*Antenna unit*




### **CAUTION**

**Do not lift the Antenna unit by the radiator; lift it by the housing.**


The radiator may be damaged.

3. Insert four hex bolts (M12x60, supplied) and seal washers (Φ30, supplied) from the top of the antenna housing, as shown below.

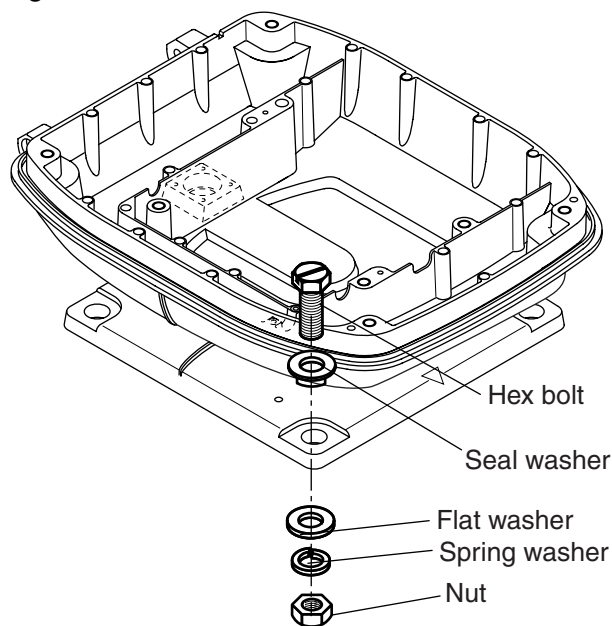

*Fixing the antenna unit chassis*



4. Pass flat washers (M12, supplied), spring washers (M12, supplied) and nuts (M12, supplied) onto hex bolts. Fasten by tightening nuts. Do not fasten by tightening the hex bolts; seal washers may be damaged.

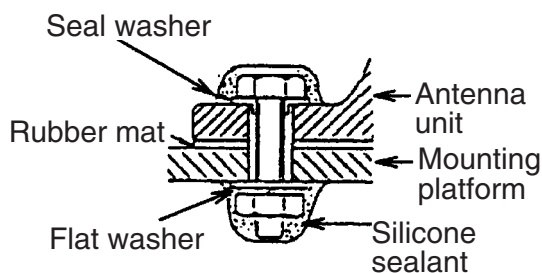

*How to fasten antenna unit to mounting platform*

5. Coat flat washers, spring washers, nuts and exposed parts of bolts with anticorrosive sealant.
6. Prepare ground point in mounting platform (within 300 mm of ground terminal on antenna unit) using M6 x 25 bolt, nut and flat washer (supplied).
7. Run the ground wire (RW-4747, 340 mm, supplied) between the ground terminal and ground point.

8. Coat ground terminal and ground point with silicone sealant as shown below.

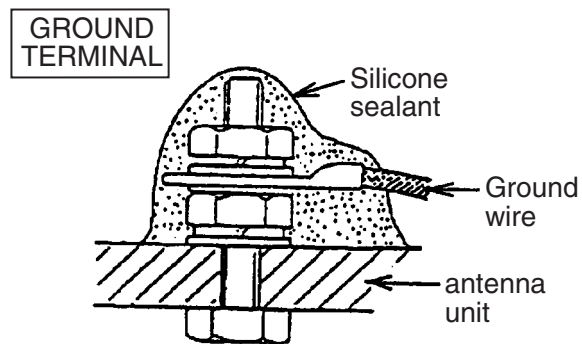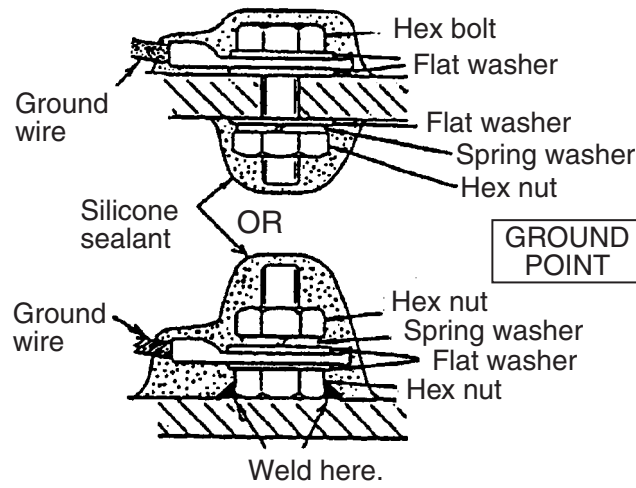


*How to coat ground point and ground terminal with silicone sealant*



### Using inside fixing holes of the antenna housing

This method requires removal of the RF unit in the antenna unit to access inside fixing holes. Use hex head bolts, flat washers, spring washers and nuts (local supply) to mount the antenna unit, confirming length of bolts.

1. Unfasten four scanner bolts on the cover to open the antenna unit.
2. Unplug connector connected between upper and lower chassis.
3. Separate upper chassis from lower chassis by removing two hex head bolts (M8x25).
4. Remove the board cover by unfastening four pan head screws.
5. Remove connector from RF unit.
6. Remove RF unit by unfastening four hex head bolts.

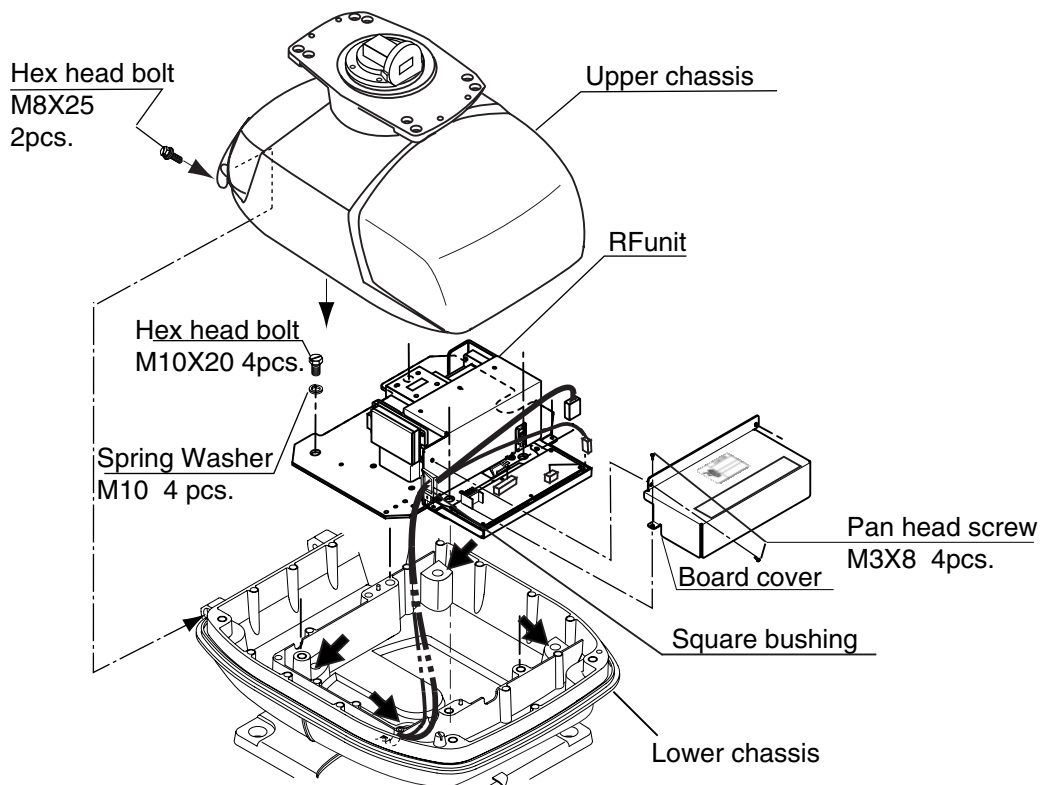


*Antenna unit chassis, upper chassis separated*

7. Lay the corrosion-proof rubber mat (supplied) on the mounting platform.
8. Fasten the lower chassis to the mounting platform with hex head bolts, spring washers, flat washers and nuts (local supply), and then coat flat washers, nuts and exposed parts of bolts with silicone sealant. Cut a slit in the rubber bushing and insert bolt into the bushing. Do not use seal washers.
9. Reassemble RF unit, cover and chassis.
10. Set four knob caps (supplied) into outside fixing holes.
11. Do steps 6-8 in "Outside fixing holes".

### Connecting the signal cable


Only the signal cable runs from the display unit (power supply unit in case of 1954C-BB/1964C-BB) to the antenna unit. In order to minimize the chance of picking up electrical interference, avoid where possible routing the signal cable near other onboard electrical equipment. Also, avoid running the cable in parallel with power cables. Pass the cable through the hole and apply sealing compound around the hole for waterproofing.

1. Open the antenna cover by loosening four bolts, and then fix the stay.

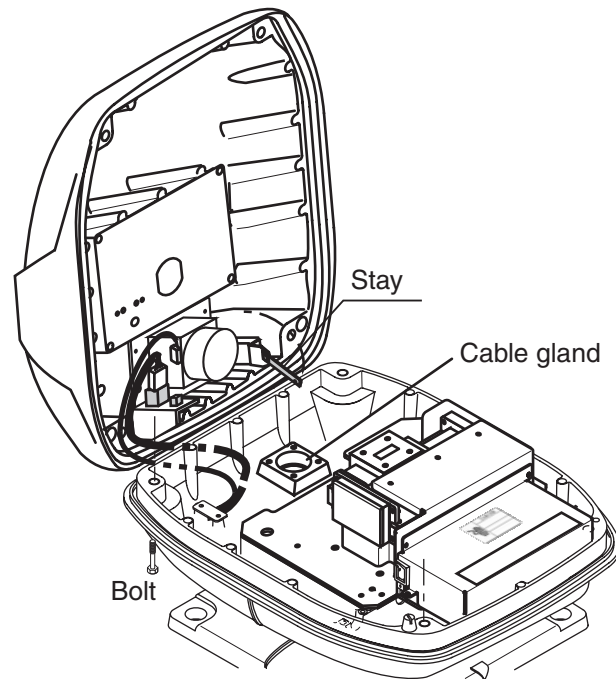

*Antenna unit chassis, cover opened*


2. Unfasten the cable gland assembly (plate, gasket, flat washer).
3. Pass the signal cable with connector through the bottom of the antenna unit chassis. Pass the cable through the gland assembly as shown below.

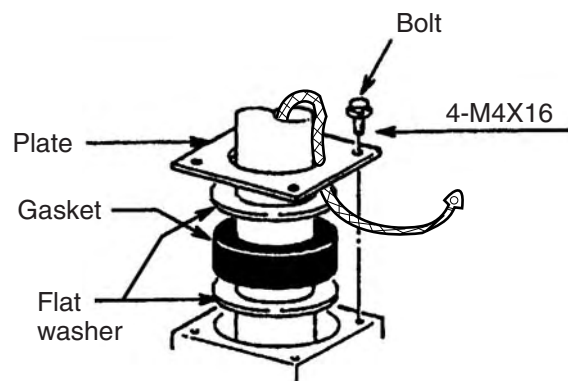

*Passing the signal cable through the cable gland assembly*


4. Fasten the crimp-on lug on the shield to one of the fixing bolts of the cable gland assembly.

5. Position the signal cable so that no more than 4 cm of the sheath is exposed as shown in the figure below. Tighten fixing bolts.

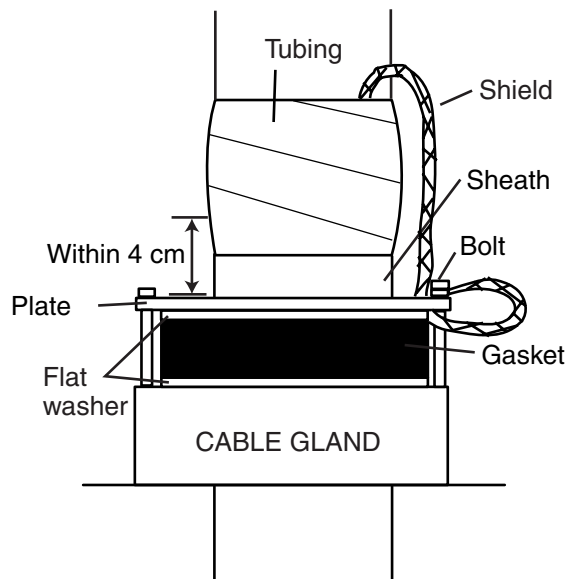


*How to fix signal cable in cable gland*

6. Unfasten four screws shown in the figure below.

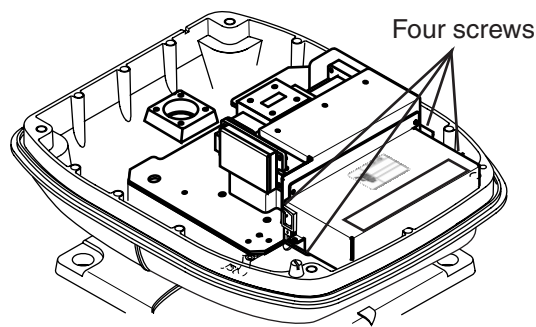


*Antenna unit chassis, cover opened*

7. Pass the signal cable through the cable protector.

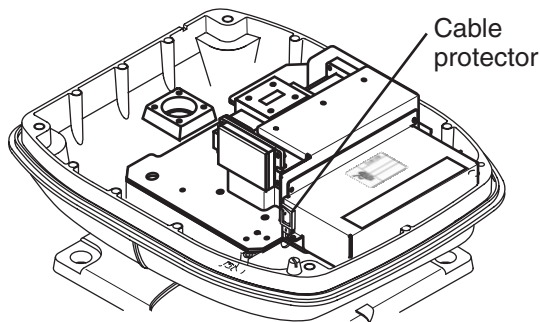

*Antenna unit chassis, cover opened*


8. Connect the signal cable to the RTB Board (03P9249 or 03P9250), referring to the interconnection diagram and the figure below.
9. Attach three EMI cores to the signal cable as shown below.

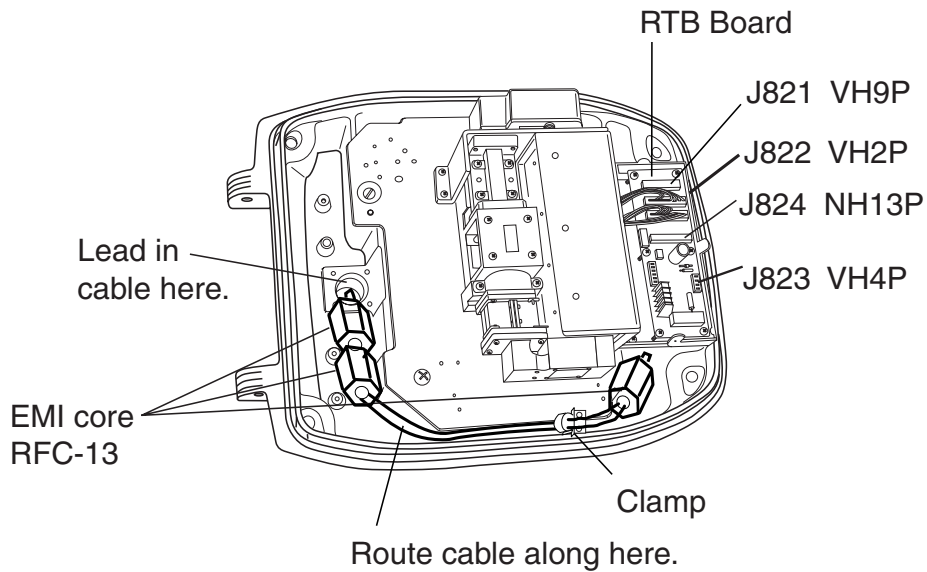

*Antenna unit chassis, cover opened*

10. Fix the signal cable with the cable clamp.
11. Release the stay and close the cover. Loosely fasten the scanner bolts; you will have to make some adjustments inside after completion of wiring.

**Note:** When closing the cover, set the gaskets to grooves in the bottom chassis, then tighten bolts.

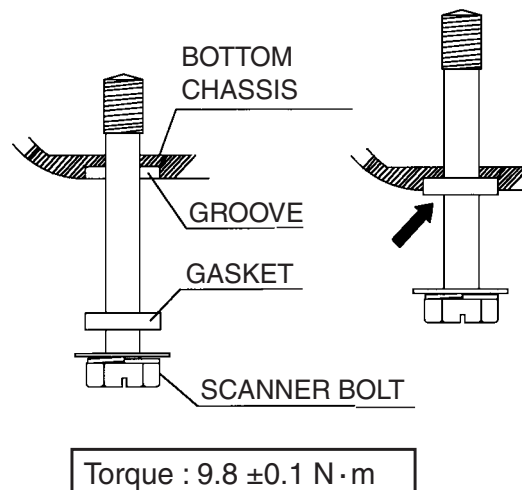


## 1.6 Mounting the Power Supply Unit

### 1.6.1 Power supply unit PSU-005 (for MODEL1954C-BB)

A power supply unit is shipped with the MODEL1954C-BB, because of its high power consumption.

The power supply unit can be installed almost anywhere provided the location is dry, well-ventilated, sufficient maintenance space is provided and is installed within 5 m (cable length) from the display unit.

**Note:** Do not install the power supply unit on the overhead; install it on the deck or bulkhead.

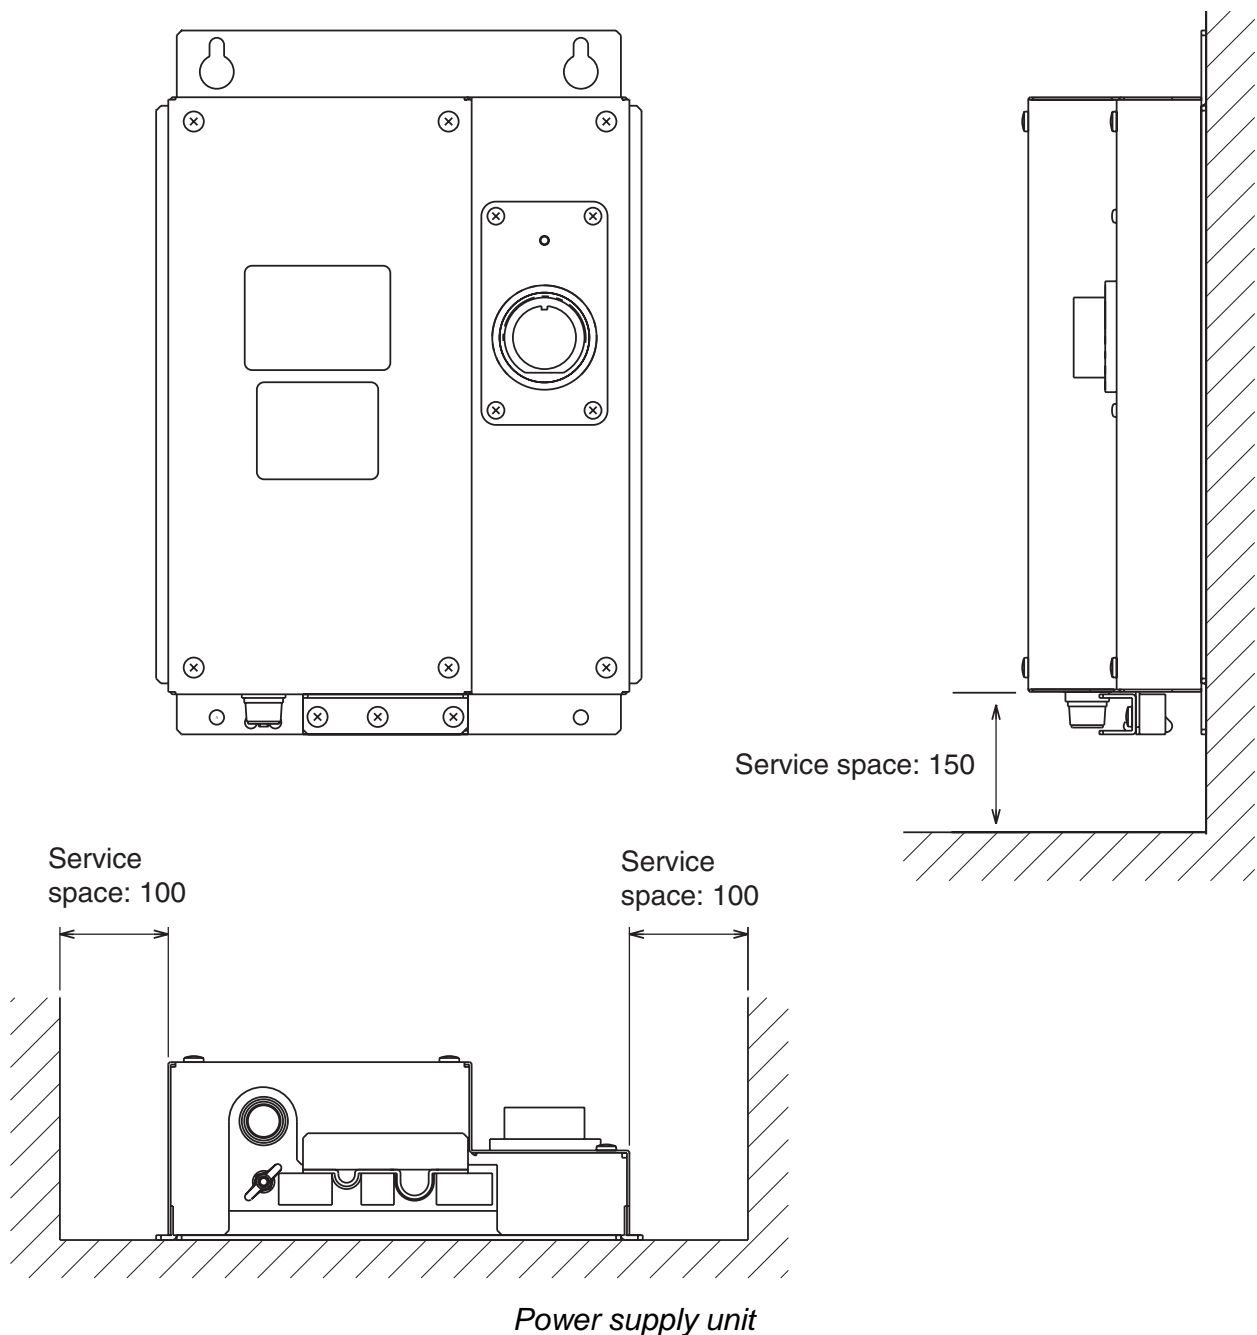


### 1.6.2 Power supply unit PSU-008 (for MODEL1964C-BB)

A power supply unit is shipped with the MODEL1964C-BB, because of its high power consumption.

The power supply unit can be installed almost anywhere provided the location is dry, well-ventilated, sufficient maintenance space is provided and is installed within 5 m (cable length) from the display unit.

**Note:** Do not install the power supply unit on the overhead; install it on the deck or bulkhead.

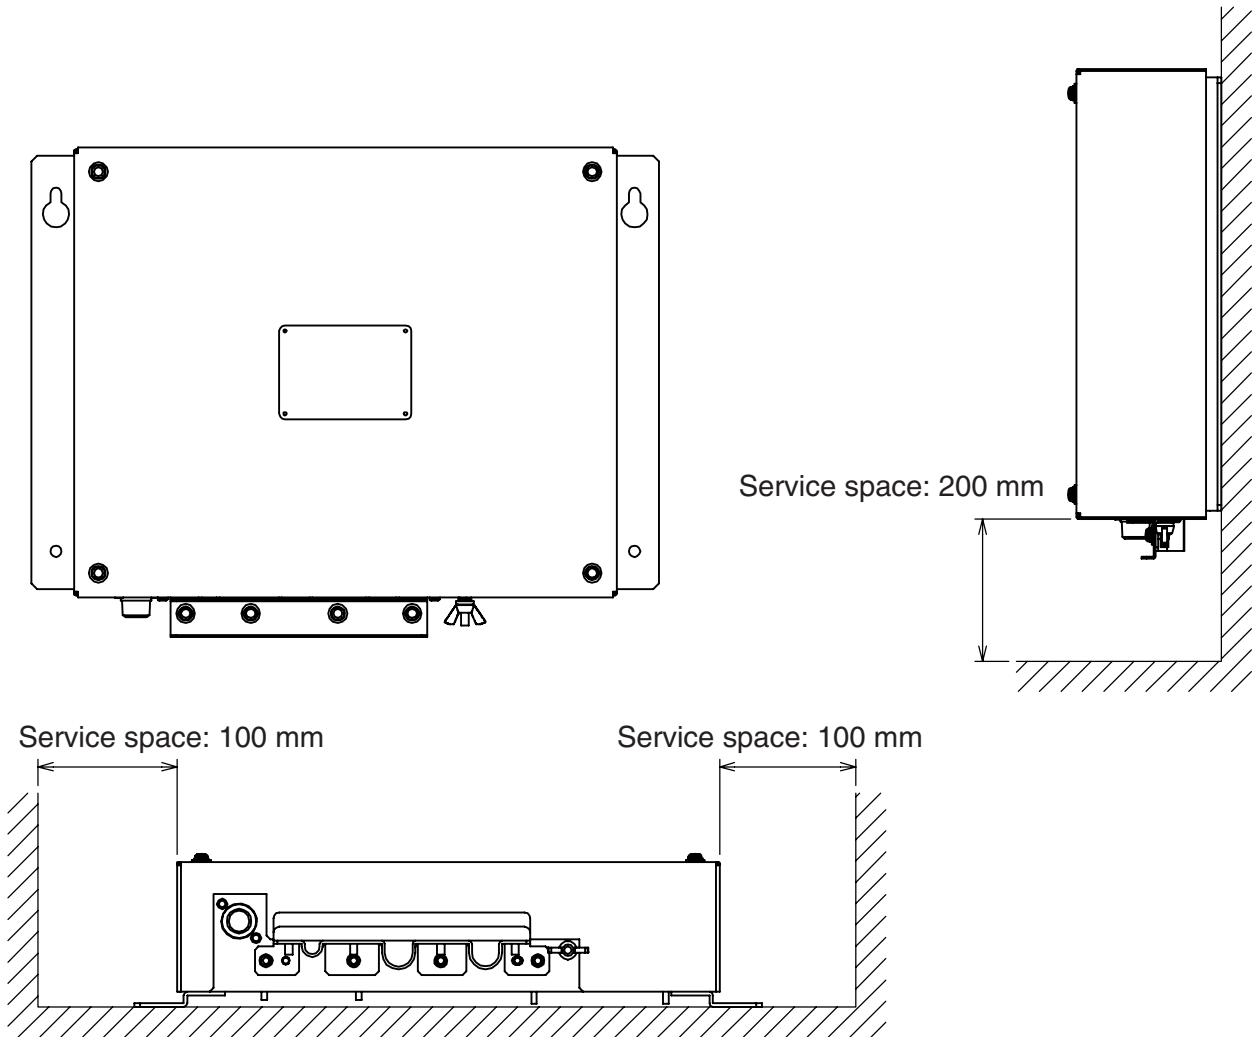


## 2. WIRING

### 2.1 Standard Wiring

All wiring is terminated at the rear of the processor unit.

Antenna unit

RSB-0094-0075    RSB-0071-057    XN10A-RSB-0070-064    XN12A-RSB-0070-059    XN12A-RSB-0072-060  
 XN10A-RSB-0073-064    XN12A-RSB-0073-059    XN12A-RSB-0073-060  
 XN13A-RSB-0072-060

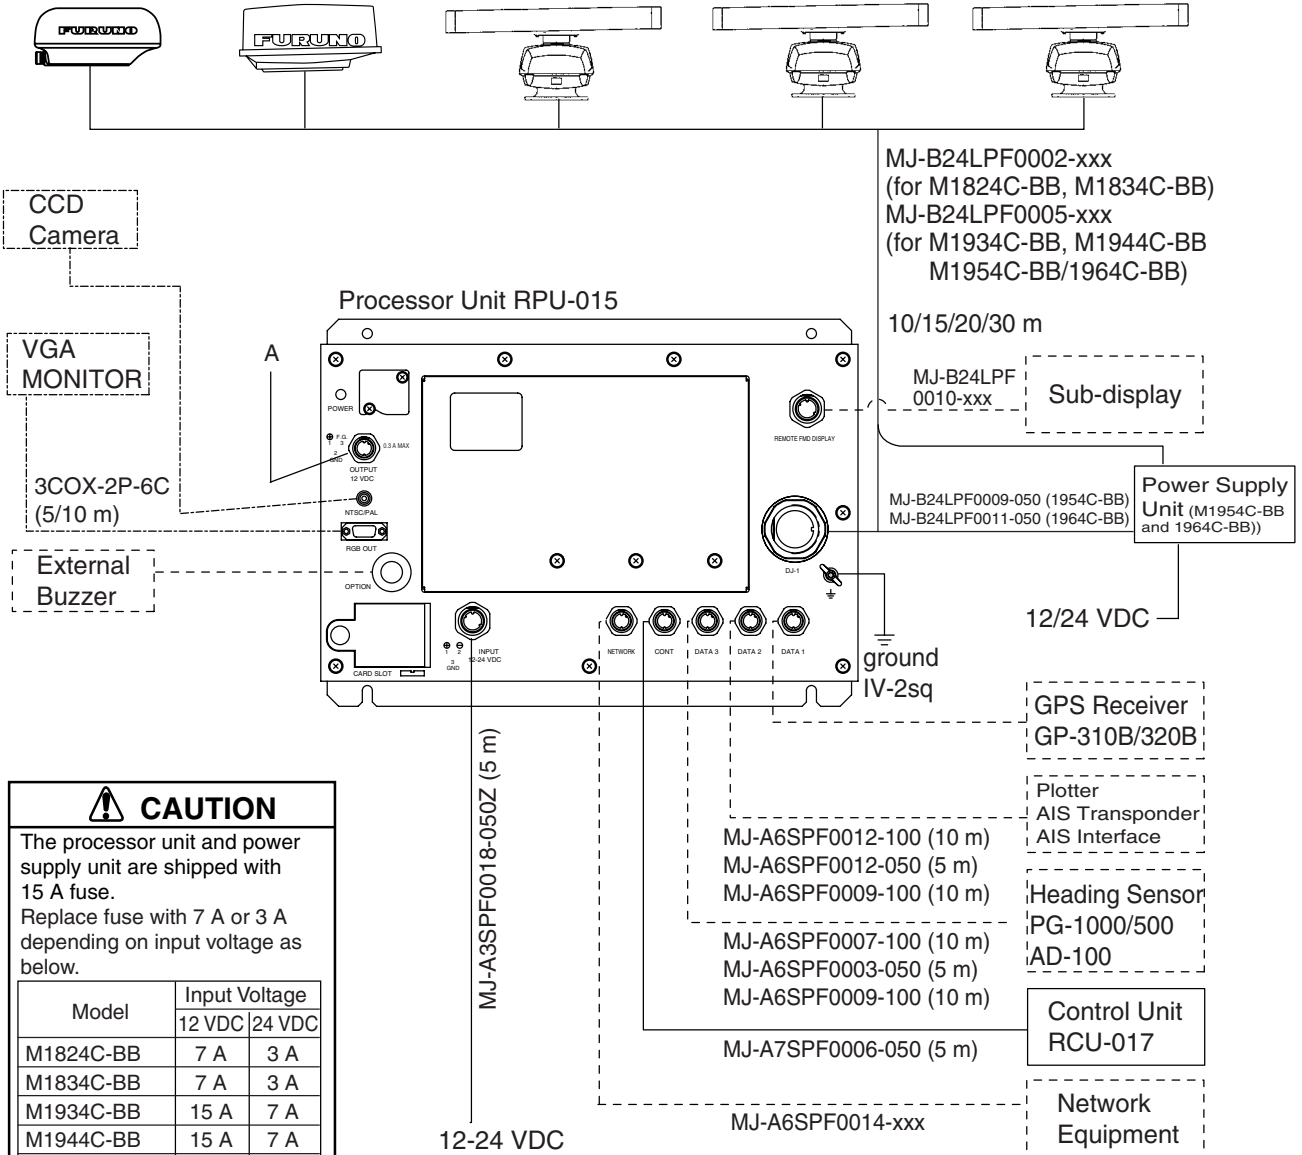

**CAUTION**

The processor unit and power supply unit are shipped with 15 A fuse. Replace fuse with 7 A or 3 A depending on input voltage as below.

Model	Input Voltage	
	12 VDC	24 VDC
M1824C-BB	7 A	3 A
M1834C-BB	7 A	3 A
M1934C-BB	15 A	7 A
M1944C-BB	15 A	7 A
M1954C-BB/ M1964C-BB	3 A	3 A
GD-1920C-BB	3 A	3 A
Power supply unit	15 A	7 A

Attach appropriate label (supplied) to the fuse cover on the power cable. Use of wrong fuse can result in damage to the equipment.


————— : Standard supply  
 - - - - - : Optional supply  
 ········ : Local supply

Wiring

## DJ-1

For MODEL 1824C-BB/1834C-BB/1934C-BB/1944C-BB/1954C-BB/1964C-BB, remove the waterproofing cap from the DJ-1 port on the processor unit and discard it.

GD-1920C-BB: Do not remove the waterproofing cap. Wrap the connector nut and cap with vinyl tape as shown below.

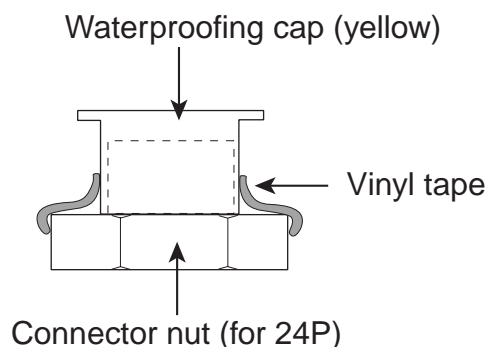

*Waterproofing cap and connector nut, sectional view*

## DATA1 to DATA3

Other equipment can be connected to DATA1-DATA3 as shown below.

DATA1 (7P)	DATA2 (6P)	DATA3 (6P)
GPS receiver GP-310B/320B	NMEA sentence (ex. navaid)	Heading sensor (ex. SC-50/110) (MODEL series only)

This equipment can receive the following NMEA 0183 format sentence from external equipment. You will need the optional NMEA cable to connect with external equipment.


- Own ship's position: GGA>RMC>RMA>GLL
- Time: ZDA>RMC
- Ship's speed: RMC>RMA>VTG>VHW
- Other ship's information: TTM
- Wind speed and angle: MWV>VWT/VWR
- Heading (True): HDT>HDG>HDM>VHW
- Heading (Magnetic): HDM>HDG>HDT>VHW
- Course: RMC>RMA>VTG
- Depth: DPT>DBT>DBS>DBK
- Destination waypoint: RMB
- Water temperature: MTW
- Target data: TLL (output from VHF radiotelephone FM-2721)
- DSC information: DSC>DSE (output from VHF marine transceiver FM-3000)



**Connecting GP-310B/320B to DATA 2 port**

GPS receiver GP-310B/320B can be connected to DATA 2 port as shown below when port 1 is not available.

You need a junction box and optional cable MJ-A6SPF0003-050 or MJ-A6SPF0009-100.

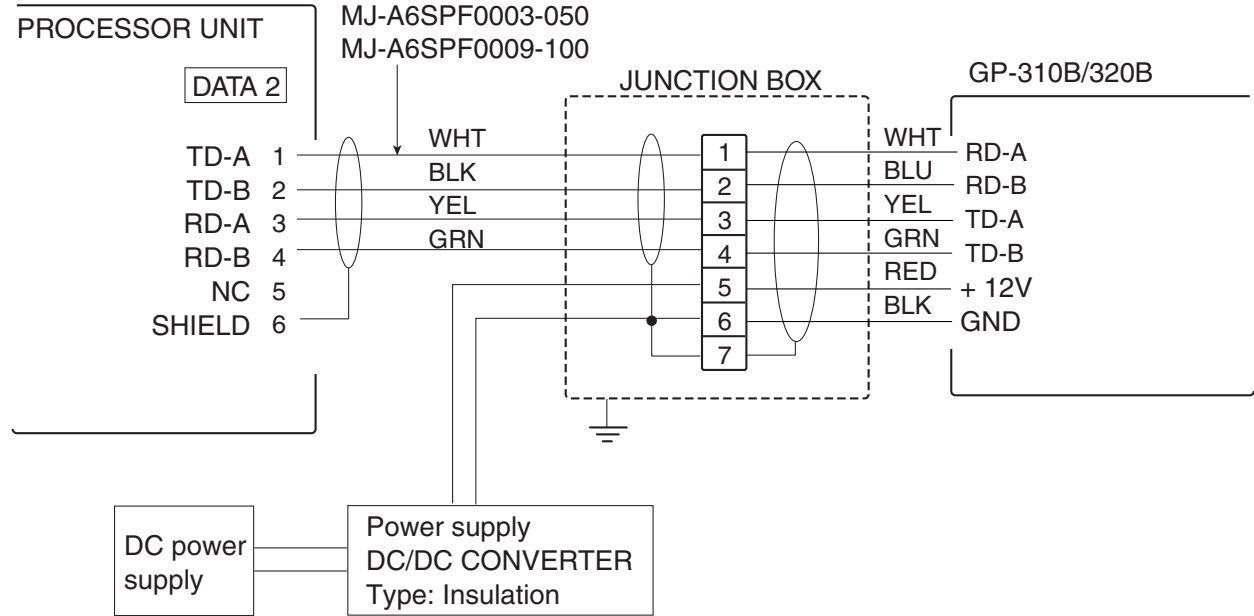

Connecting GP-310B/320B to DATA 2 port

**NETWORK port**


Other NavNet equipment should be connected to this port with the optional MJ-A6SPF0014 cable. Available equipments are shown below.

Radar	Plotter	Network sounder	Other
1824C-BB/1834C-BB/ 1934C-BB/1944C-BB/ 1834C-BB/1954C-BB 1964C-BB Or other FURUNO NavNet radar.	GD-1920C-BB	ETR-6/10N ETR-30N	HUB (used when more than two NavNet units are connected.)

## 2.2 Wiring the Power Supply Unit (MODEL 1954C-BB/1964C-BB)

### 2.2.1 Power supply unit PSU-005 (MODEL 1954C-BB)

1. Unfasten three M4 screws to remove the cable clamp.
2. Unfasten six M4 screws to remove the cover.
3. Attach the VL connector of the power supply cable VL3P-VV-S2X2C-AA050 (supplied as installation materials) to J1 on the POWER Board.
4. Attach the VH and NH connectors of MJ-B24LPF0009-050 cable (supplied as installation materials) to these locations: VH9, J3; VH4, J4, NH13, J5.

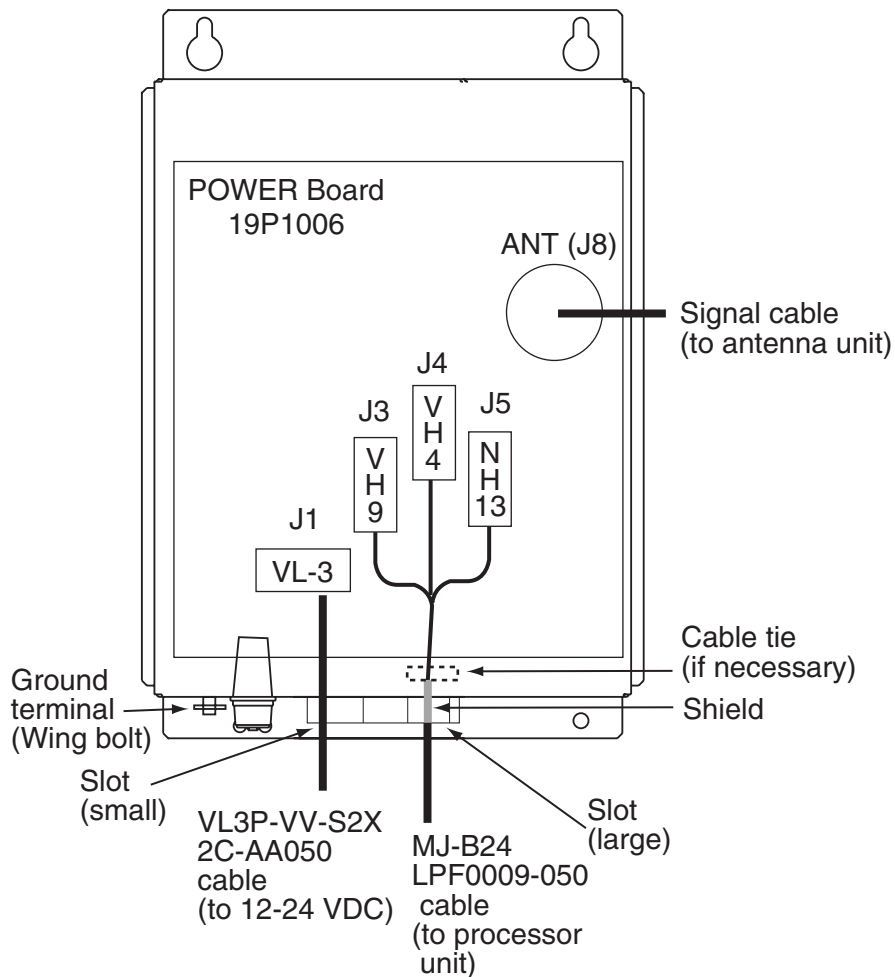


*Power supply unit, cover removed*

5. Lay two cables on the slots referring to the figure above.  
To prevent strain to the cable MJ-B24LPF0009-050, fasten a cable tie (local supply) at the position shown above.
6. Reattach the cover (removed at step 2).
7. Reattach the cable clamp.
8. Connect the antenna cable to the ANT port on the power supply unit.
9. Connect a ground wire (local supply, IV-2sq) between the ground terminal and ship's ground.

## 2.2.2 Power supply unit PSU-008 (MODEL1964C-BB)

### Cabling

1. Unfasten four screws to remove the cable clamp.
2. Unfasten four screws to remove the cover.
3. Attach the VL connector of the power supply cable VL3P-VV-S2X2C-AA050 (supplied as installation materials) to J1 on the POWER Board.
4. Attach the VH and NH connectors of MJ-B24LPF0009-050 cable (supplied as installation materials) to these locations: VH9, J3; VH4, J4, NH13, J5.

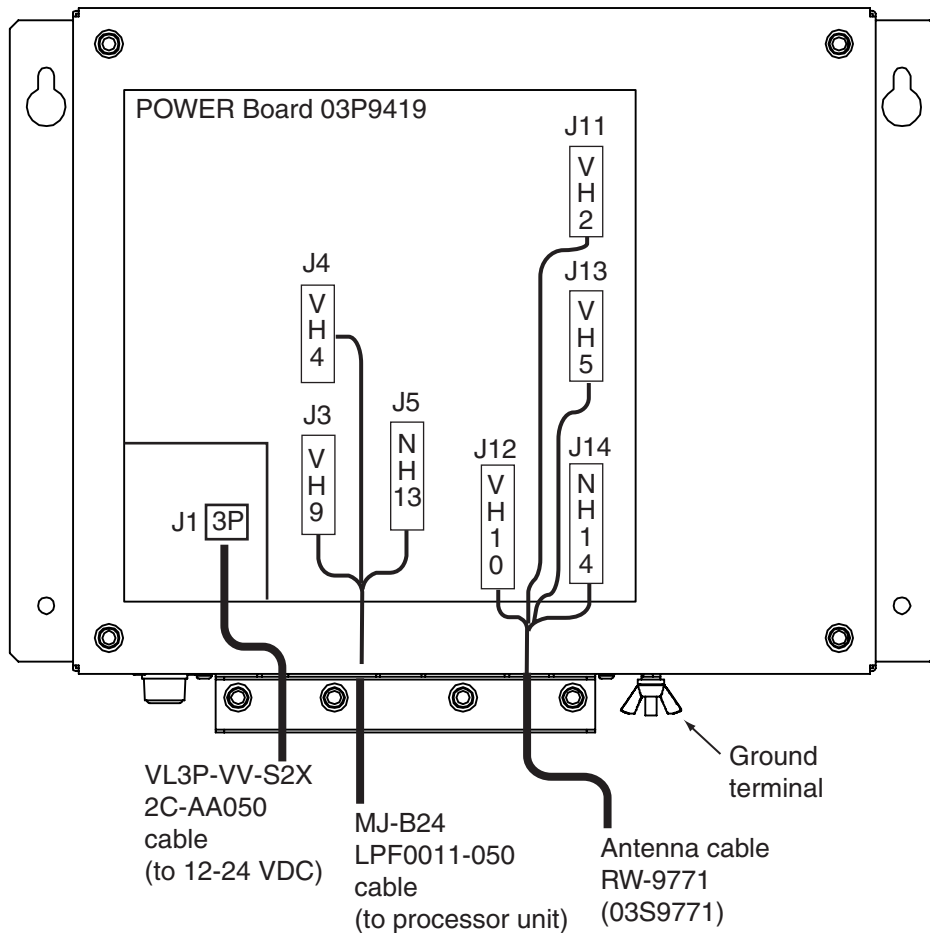

5. Connect the antenna cable to these locations: VH2, J11, VH10, J12; VH5, J13, NH14, J14.
6. Lay three cables in respective slots referring to the figure above.
7. Reattach the cover (removed at step 2).
8. Reattach the cable clamp.
9. Connect a ground wire (local supply, IV-2sq) between the ground terminal and ship's ground.


**Jumper block, slide switch setting**

The jumper block JP1 and slide switch S112 on the PWR board (03P9419) must be set according to radar model. Open the unit, locate JP1 and S112 and set them as below.



Jumper block JP1  
("open" for this radar;  
leave the dummy  
connector attached)

Slide switch S112  
(Downward position  
for this radar)

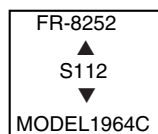


*Power supply unit, inside view*

Jumper block, slide switch	Function	Setting
JP1	Enables/disables motor slow start circuit.	Open (enable)
S112	TUNE voltage selector (0-12 V, 0-32 V)	Downward position (0-32 V)

## 2.2.3 Power requirement, replacement of fuses

### Power requirement

The power for the power supply unit and display unit must be drawn from the same power switch on the power terminal board.

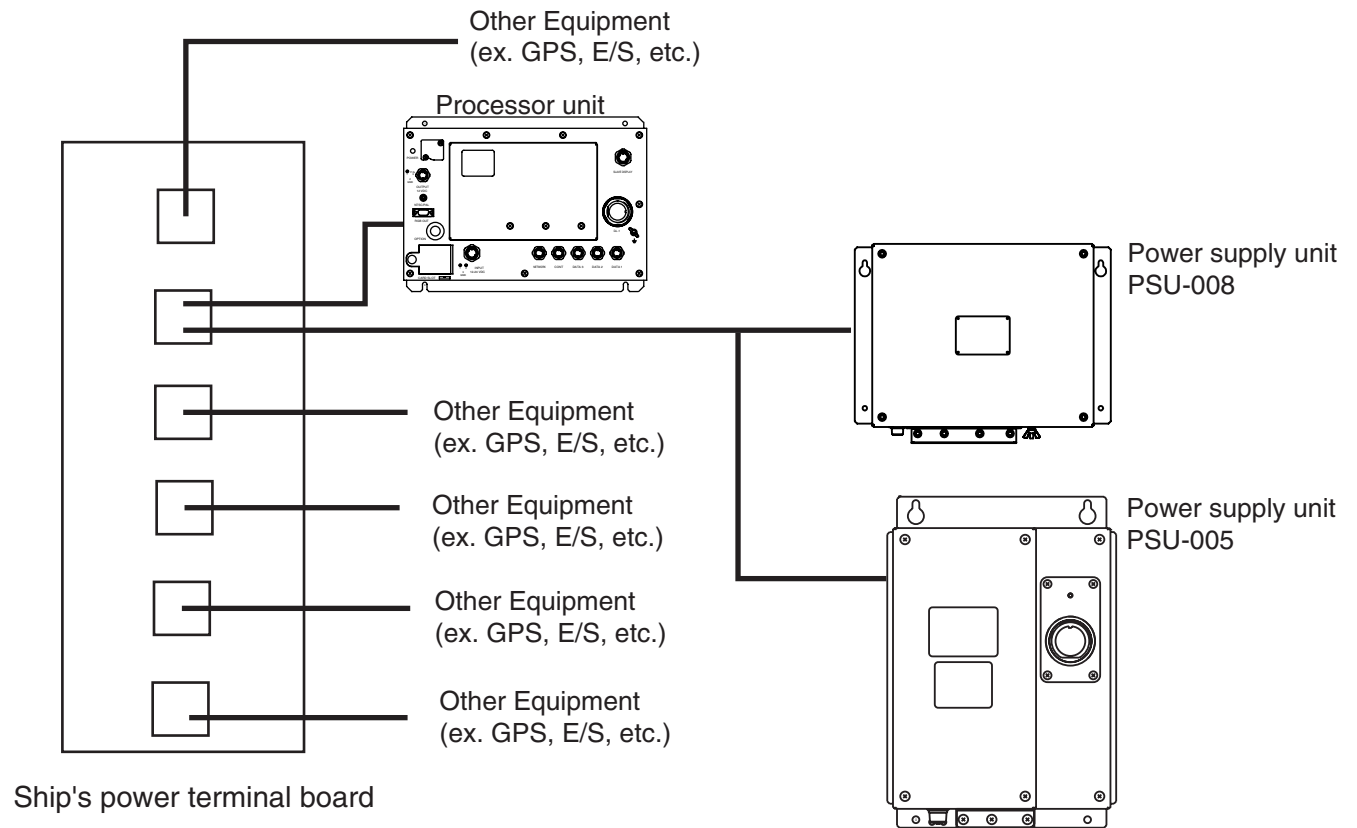

*Wiring processor unit and power supply board to power terminal board*

### Replacement of the fuse

The power supply unit is shipped with a 15 A fuse. Replace the 15 A fuse with a 7 A fuse (supplied) when the ship's battery is 24 VDC. The fuse in the processor unit is also 15 A. Replace it with a 3A fuse.


This page intentionally left blank.

## 3. SETTING UP THE EQUIPMENT

### 3.1 Setting up with the Installation Wizard


After you have installed the equipment, set up the equipment with the installation wizard. The wizard allows you to easily set up the NavNet network (choose source of radar, sounder and auxiliary), GPS, ports, etc.

1. Press the **POWER/TX** key to turn on the power, and the following screen appears.

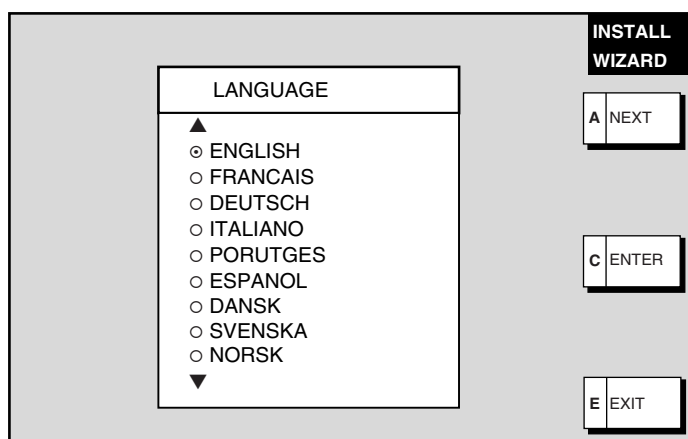

*Installation wizard, language selection window*

2. Rotate the **ENTER** knob to choose the appropriate language and then push the C: ENTER soft key.
3. A dialog box asks you if you want to start the simulation mode, which provides simulated operation of the equipment.
4. Press the **CLEAR** key to skip the simulation mode. Then, the SELECT MODE window appears. When confirming connections only, the simple check mode is useful.

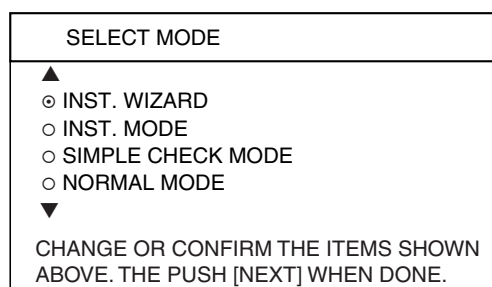

5. Confirm that INST. WIZARD is selected, and then push the A: ENTER soft key. A diagnostic test is conducted and then the chart disclaimer message appears.
6. You are then asked "LOAD SETTING DATA FROM CARD?". This allows you to use the set up this NavNet unit with the settings of another NavNet unit, thereby shortening the time required to set up the equipment. To use the settings of another NavNet unit, insert the appropriate SD card in the slot and push the **ENTER** knob. If not, hit the **CLEAR** key. If you loaded settings, the message "LOADING COMPLETED. REMOVE THE CARD AND PRESS ANY KEY TO RESTART" appears if loading was successful. Remove the card and press any key to restart the equipment; installation is completed. To set up manually, go to step 7.

**CAUTION:** Ensure that the settings to be loaded are compatible with this NavNet unit. Improper setting will damage the equipment.

7. The screen for set up of units of measurement appears.

▶ RANGE UNIT	nm, kt
DEPTH UNIT	ft
TEMPERATURE UNIT	°F
WIND UNIT	kt
LOCAL TIME OFFSET	+00:00

*Installation wizard, units of measurement*

8. Choose an item and then press the C: EDIT soft key. One of the following windows appears.

RANGE/SPEED UNIT

▲

nm, kt

km, km/h

sm, mph

nm & yd, kt

nm & m, kt

km & m, km/h

sm & yd, mph

▼

DEPTH UNIT

▲

m

ft

fa

PB

▼

TEMPERATURE UNIT

▲

°C

°F

▼

WIND UNIT

▲

kt

km/h

MPH

m/s

▼

LOCAL TIME OFFSET

+ 00:00

9. Choose unit of measurement desired and then press the C: ENTER soft key. LOCAL TIME OFFSET allows you to use local time (instead of UTC time). Set the time difference between local time and UTC time.

10. After you have chosen units of measurement, press the NEXT soft key, and the NETWORK SETUP menu appears. This is where you set up your NavNet network. See the illustration on the next page for typical network setup. **If you have no other NavNet devices installed, press the NEXT key and go to step 13.**

▶ DEVICE NUMBER	1
(HOST NAME	NAVNET-1)
(IP ADDRESS	172.031.003.003)
RADAR SOURCE	1
SOUNDER SOURCE	ETR0
AUX SOURCE	AUX1
FOR FURTHER DETAILS, PLEASE REFER TO THE INSTALLATION MANUAL	


*Installation wizard, network setup*



11. Choose appropriate item and then press the C: EDIT soft key. One of the following displays appears depending on your selection.

<p style="text-align: center;"><b>DEVICE NUMBER</b></p> <p>▲</p> <ul style="list-style-type: none"> <li><input type="radio"/> 1 (IP:172.031.003.001)</li> <li><input checked="" type="radio"/> 2 (IP:172.031.003.002)</li> <li><input type="radio"/> 3 (IP:172.031.003.003)</li> <li><input type="radio"/> 4 (IP:172.031.003.004)</li> </ul> <p>▼</p>	<p style="text-align: center;"><b>RADAR SOURCE</b></p> <p>▲</p> <ul style="list-style-type: none"> <li><input type="radio"/> 1 (IP:172.031.003.001)</li> <li><input checked="" type="radio"/> 2 (IP:172.031.003.002)</li> <li><input type="radio"/> 3 (IP:172.031.003.003)</li> <li><input type="radio"/> 4 (IP:172.031.003.004)</li> <li><input type="radio"/> NO CONNECT</li> </ul> <p>▼</p>
<p style="text-align: center;"><b>SOUNDER SOURCE</b></p> <p>▲</p> <ul style="list-style-type: none"> <li><input type="radio"/> ETR0 (IP:172.031.092.001)</li> <li><input checked="" type="radio"/> ETR1 (IP:172.031.092.011)</li> <li><input type="radio"/> ETR2 (IP:172.031.092.012)</li> <li><input type="radio"/> ETR3 (IP:172.031.092.013)</li> <li><input type="radio"/> ETR4 (IP:172.031.092.014)</li> <li><input type="radio"/> ETR5 (IP:172.031.092.015)</li> <li><input type="radio"/> ETR6 (IP:172.031.092.016)</li> <li><input type="radio"/> ETR7 (IP:172.031.092.017)</li> <li><input type="radio"/> ETR8 (IP:172.031.092.018)</li> <li><input type="radio"/> ETR9 (IP:172.031.092.019)</li> <li><input type="radio"/> OFF</li> </ul> <p>▼</p>	<p style="text-align: center;"><b>AUX SOURCE</b></p> <p>▲</p> <ul style="list-style-type: none"> <li><input checked="" type="radio"/> AUX1 (IP:172.031.008.001)</li> <li><input type="radio"/> AUX2 (IP:172.031.008.002)</li> <li><input type="radio"/> AUX3 (IP:172.031.008.003)</li> <li><input type="radio"/> AUX4 (IP:172.031.008.004)</li> <li><input type="radio"/> OFF</li> </ul> <p>▼</p>

12. Choose appropriate setting and then press the C: ENTER soft key.  
 If you set DEVICE NO. or RADAR SERVICE, turn the power on and off again at the completion of the installation wizard.

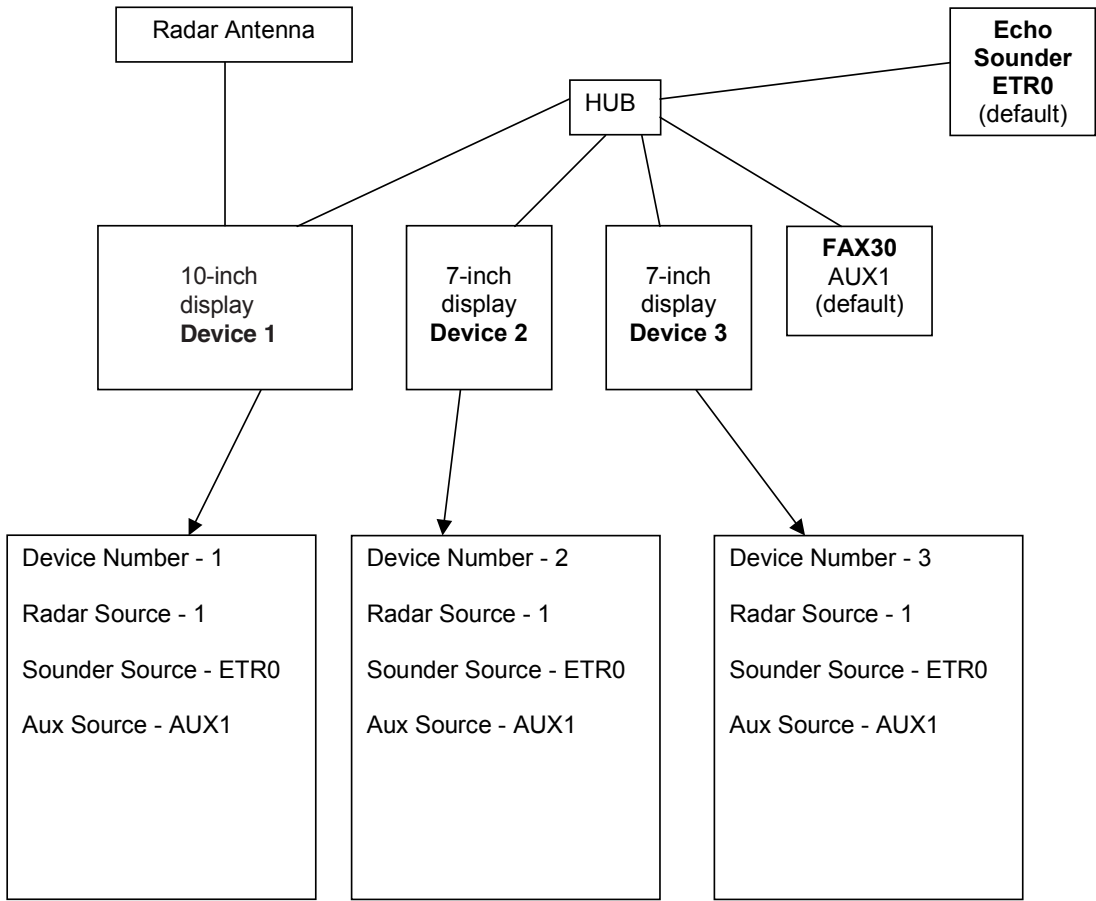

13. After choosing ALL sources, press the A: NEXT soft key, and the RADAR SETUP menu appears. **If you do not have a radar installed, go to step 33.**

14. Choose appropriate item and then press the C: EDIT soft key. One of the following displays appears depending on your selection.

<p style="text-align: center;">DEVICE NUMBER</p> <p>▲</p> <ul style="list-style-type: none"> <li><input type="radio"/> 1 (IP:172.031.003.001)</li> <li><input checked="" type="radio"/> 2 (IP:172.031.003.002)</li> <li><input type="radio"/> 3 (IP:172.031.003.003)</li> <li><input type="radio"/> 4 (IP:172.031.003.004)</li> </ul> <p>▼</p>	<p style="text-align: center;">RADAR SOURCE</p> <p>▲</p> <ul style="list-style-type: none"> <li><input type="radio"/> 1 (IP:172.031.003.001)</li> <li><input checked="" type="radio"/> 2 (IP:172.031.003.002)</li> <li><input type="radio"/> 3 (IP:172.031.003.003)</li> <li><input type="radio"/> 4 (IP:172.031.003.004)</li> <li><input type="radio"/> NO CONNECT</li> </ul> <p>▼</p>
<p style="text-align: center;">SOUNDER SOURCE</p> <p>▲</p> <ul style="list-style-type: none"> <li><input type="radio"/> ETR0 (IP:172.031.092.001)</li> <li><input checked="" type="radio"/> ETR1 (IP:172.031.092.011)</li> <li><input type="radio"/> ETR2 (IP:172.031.092.012)</li> <li><input type="radio"/> ETR3 (IP:172.031.092.013)</li> <li><input type="radio"/> ETR4 (IP:172.031.092.014)</li> <li><input type="radio"/> ETR5 (IP:172.031.092.015)</li> <li><input type="radio"/> ETR6 (IP:172.031.092.016)</li> <li><input type="radio"/> ETR7 (IP:172.031.092.017)</li> <li><input type="radio"/> ETR8 (IP:172.031.092.018)</li> <li><input type="radio"/> ETR9 (IP:172.031.092.019)</li> <li><input type="radio"/> OFF</li> </ul> <p>▼</p>	<p style="text-align: center;">AUX SOURCE</p> <p>▲</p> <ul style="list-style-type: none"> <li><input checked="" type="radio"/> AUX1 (IP:172.031.008.001)</li> <li><input type="radio"/> AUX2 (IP:172.031.008.002)</li> <li><input type="radio"/> AUX3 (IP:172.031.008.003)</li> <li><input type="radio"/> AUX4 (IP:172.031.008.004)</li> <li><input type="radio"/> OFF</li> </ul> <p>▼</p>

15. Choose appropriate setting and then press the C: ENTER soft key. If you set DEVICE NO. or RADAR SERVICE, turn the power on and off again at the completion of the installation wizard.

16. After choosing ALL sources, press the A: NEXT soft key, and the RADAR SETUP menu appears. **If you do not have a radar installed, go to step 33.**

▶ ANTENNA TYPE	A
HEADING DATA	MAGNETIC
ANTENNA ROTATION	ROTATE
RADAR OPTIMIZATION	OFF
TIMING ADJUST	OFF
M. B. SUPPRESSION	OFF
RADAR ANTENNA HEIGHT	MEDIUM (3-10m, 10-33ft)
STC CURVE	MEDIUM
MONITOR MODE	OFF
HEADING ADJUST	OFF

*Installation wizard, radar setup*

17. Choose ANTENNA TYPE and then press the C: EDIT soft key.

ANTENNA TYPE
▲
<ul style="list-style-type: none"> <li><input type="radio"/> A (MODEL 1824C-BB)</li> <li><input checked="" type="radio"/> B (MODEL 1834C-BB)</li> <li><input type="radio"/> C (MODEL 1934C-BB)</li> <li><input type="radio"/> D (MODEL 1944C-BB)</li> <li><input type="radio"/> E (MODEL 1954C-BB)</li> <li><input type="radio"/> F (MODEL 1964C-BB)</li> </ul>
▼

18. Choose the appropriate antenna type and then press the C: ENTER soft key.

19. Choose HEADING DATA and then press the C: EDIT soft key.

HEADING DATA
▲ ○ MAGNETIC ○ TRUE ▼

20. Choose the appropriate heading data format and then press the C: ENTER soft key.  
Select MAGNETIC when connecting with a magnetic compass, or select TRUE when connecting with a gyrocompass or satellite compass

21. Choose ANTENNA ROTATION and then press the C: EDIT soft key.


ANTENNA ROTATION
▲ ○ ROTATE ○ STOP ▼

22. Choose ROTATE (other than MODEL 1954C-BB or 1964C-BB) or STOP (MODEL 1954C-BB or 1964C-BB) and then press the C: ENTER soft key.

**For the MODEL 1954C-BB or 1964C-BB**, follow the procedure in the illustration at the top of the next page. For other models, go to step 23.


### Tuning Power Supply Unit for MODEL 1954C-BB

1. Choose TIMING ADJUST and then press the EDIT soft key.
2. Choose ON and then press the C: ENTER soft key.
3. You are asked if you want to transmit; push the ENTER knob.
4. Use the **RANGE** key to choose the 6nm range.
5. Press the E: RETURN soft key.
6. Open the power supply unit cover and flip switch SW1 on the POWER Board upward (tuning position).
7. Adjust potentiometer R36 clockwise so that CR13 LED lights in the highest brilliance.
8. Flip switch SW1 switch downward (default setting).
9. Set ANTENNA ROTATION to ROTATE.
10. Reassemble the cover of the power supply unit.
11. Go to step 20.

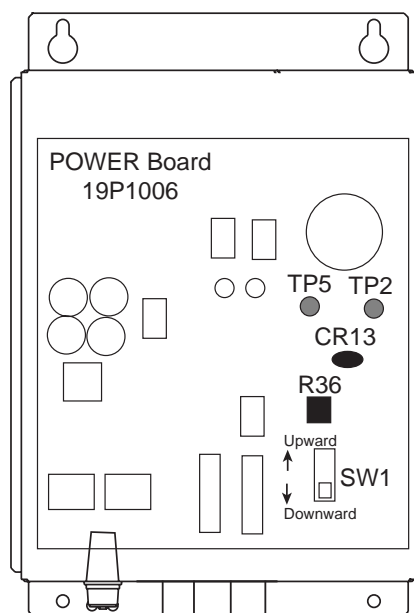


### Tuning Power Supply Unit for MODEL 1964C-BB

1. Follow step 1-5 above.
2. Open the power supply unit cover and flip the switch S111 on the POWER Board to the upward (TUNE ADJ) position.
3. Adjust potentiometer R123 clockwise so that LED CR113 lights in the highest brilliance.
4. Flip the switch S111 to the downward (END ADJ) position.
5. Set ANTENNA ROTATION to ROTATE.
6. Reassemble the cover of the power supply unit.
7. Go to step 20.

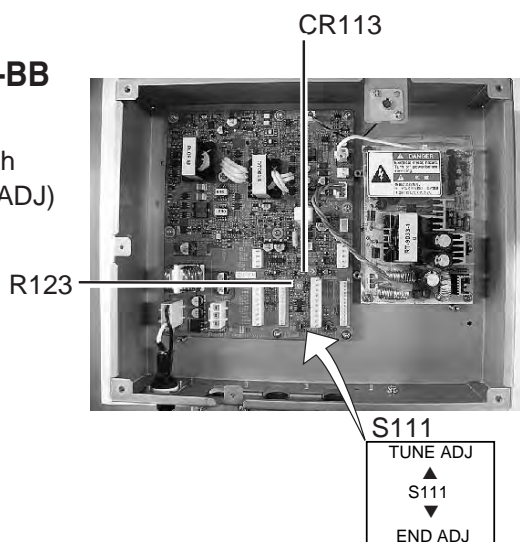


23. Choose RADAR OPTIMIZATION and then press the C: EDIT soft key.

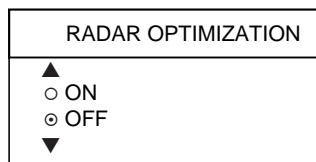


24. Choose ON and then press the C: ENTER soft key. Then, the radar's video and tuning are automatically adjusted.

25. After tuning has been completed, choose TIMING ADJUST and then press the C: EDIT soft key.

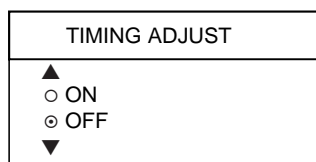

This adjustment ensures proper radar performance, especially on short ranges. The radar measures the time required for a transmitted echo to travel to the target and return to the source. The received echo appears on the display based on this time. Thus, at the instant the transmitter is fired, the sweep should start from the center of the display (sometimes called sweep origin.)


A trigger pulse generated in the display unit goes to the antenna unit through the signal cable to trigger the transmitter (magnetron). The time taken by the signal to travel up to the antenna unit varies, depending largely on the length of signal cable. During this period the display unit should wait before starting the sweep. When the display unit is not adjusted correctly, the echoes from a straight local object (for example, a harbor wall or straight pier) will not appear with straight edges – namely, they will be seen as “pushed out” or “pulled in” near the picture center. The range of objects will also be incorrectly shown.

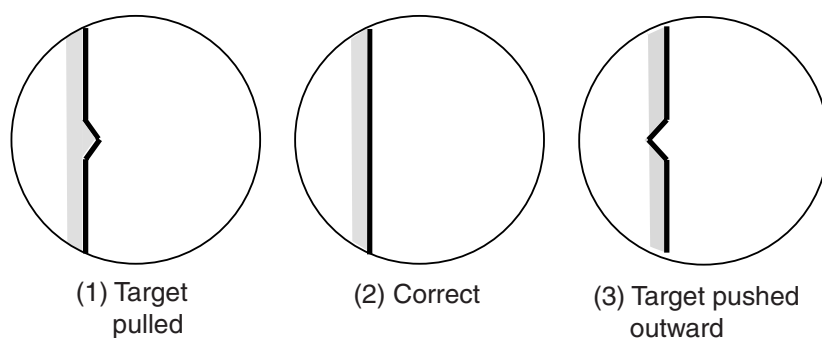

*Examples of improper and correct sweep timing*


- a) Choose ON and then press the C: ENTER soft key.
- b) Transmit on the shortest range and confirm that gain and A/C SEA are properly adjusted.
- c) Visually select a target which forms straight line (harbor wall, straight piers).
- d) Rotate the **ENTER** knob to straighten the target selected at step b), and then press the **ENTER** knob to finish.

26. Choose M. B. SUPPRESSION and press the C: EDIT soft key.

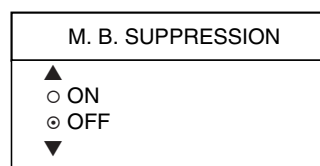

27. Choose ON and then press the C: ENTER soft key. Main bang is the “black hole” which appears at the display center on short ranges. Rotate the ENTER knob to suppress the main bang. After adjusting, press the E: RETURN soft key.

28. Choose RADAR ANTENNA HEIGHT and then press the C: EDIT soft key.

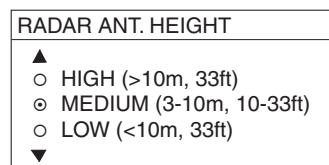

29. Choose the height of the antenna above the water surface and then press the C: ENTER soft key.

30. Choose STC CURVE and then press the C: EDIT soft key.

STC CURVE
▲ <input type="radio"/> NARROW <input checked="" type="radio"/> NORMAL <input type="radio"/> WIDE ▼

31. Choose appropriate STC curve setting and then press the E: RETURN soft key.

NARROW: The effective range of the A/C SEA adjustment is relatively short.

NORMAL: Between NARROW and WIDE.

WIDE: The effective range of the A/C SEA adjustment is relatively long.

32. **If you are going to use the equipment as a remote display**, choose MONITOR MODE and then press the C: EDIT soft key. If not, go to step 34.

MONITOR MODE
▲ <input type="radio"/> ON <input checked="" type="radio"/> OFF ▼

33. Choose ON and then press the C: ENTER soft key.

- TX blanking function is not available when the MONITOR MODE is ON. To set a TX blanking sector, select OFF from MONITOR MODE on the NavNet equipment, and then set the sector same as the main radar. Finally, set MONITOR MODE to ON.
- When the MONITOR MODE is ON, the following functions are not available.
  - Tuning (auto/manual, on the RADAR SETUP menu)
  - Antenna rotation (RADAR SETUP menu)
  - TX sector blanking (RADAR DISPLAY SETUP menu)
  - Watchman (RADAR DISPLAY SETUP menu)
  - Pulse select (Soft key)

34. Choose HEADING ADJUST and then press the C: EDIT soft key.

HEADING ADJUST
▲ <input type="radio"/> ON <input checked="" type="radio"/> OFF ▼

35. Choose ON and then press the C: ENTER soft key.

You have mounted the antenna unit facing straight ahead in the direction of the bow. Therefore, a small but conspicuous target dead ahead visually should appear on the heading line (zero degrees).

In practice, you will probably observe some small error on the display because of the difficulty in achieving accurate initial positioning of the antenna unit. The following adjustment will compensate for this error.

- a) Set ship's heading toward a suitable target (for example, ship or buoy) at a range between 0.125 and 0.25 nautical mile.
- b) Rotate the **ENTER** knob to bisect the target with the EBL and press the A: SET soft key.
- c) Press the E: RETURN soft key.
- d) As a final test, move the boat towards a small buoy and confirm that the buoy shows up dead ahead on the radar when it is visually dead ahead.

36. The next step is to choose navigation data sources and calibrate navigation data. Press the A: NEXT soft key to show the NAV SETUP menu.

► POSITION SOURCE	GP	
SPEED SOURCE	ETR	
TEMPERATURE SOURCE	ETR	
DETPH SOURCE	ETR	
STW CALIBRATION	+00%	
TEMP CALIBRATION	+00.0°F	
DEPTH CALIBRATION	+00ft	
WIND AVERAGING	001 seconds(s)	
WIND DIRECTION OFFSET	S000.0°	
WIND SPEED CALIBRATION	+00%	
STW	TEMP	DEPTH
12.3 kt	56.3°F	99.5ft
WIND SPEED	WIND DIR	
1.2 kt	131°	

*Installation wizard, nav setup*

37. Choose item and press the C: EDIT soft key.

38. Choose appropriate setting and then press the C: ENTER soft key. Refer to the table below for description of each item.

NAV SETUP menu description

Item	Description	Settings (Default in boldface)
Position Source	Chooses source of position data.	FURUNO BB GPS: GPS Receiver GP-310B/320B <b>GP</b> : GPS navigator (via NETWORK or NMEA port) LC: Loran C navigator (via NETWORK or NMEA port) ALL: Multiple navaid connection (via NETWORK or NMEA port)
Speed Source	Chooses source of speed data	<b>ETR</b> (NavNet sounder), NMEA
Temperature Source	Chooses source of water temperature data.	<b>ETR</b> , NMEA. Select ETR to show water temperature data fed from the network sounder.
Depth Source	Chooses source of depth data.	<b>ETR</b> , NMEA. Select ETR to show depth data fed from the network sounder.
STW Calibration	Calibrates NMEA speed data. Enter amount in percentage.	-50 to +50%, <b>00</b>
Temp Calibration	Calibrates NMEA temperature data. Enter offset to correct NMEA temperature data.	-40.0°F to +40.0°F (or equivalent in °F), <b>00.0°F</b>
Depth Calibration	Calibrates NMEA depth data. Enter offset to correct NMEA depth data.	-15 to +90 ft (or equivalent in ft, fathoms or P/B). <b>00 ft</b>
Wind Averaging	Enter a value to smooth wind speed/direction data. Ship's bow is referenced to smooth wind vector movement.	001-600 s, <b>001 s</b>
Wind Direction Offset	Offsets wind direction data.	S180°-P180°, <b>S000.0°</b>
Wind Speed Calibration	Offsets NMEA wind speed data. Enter amount in percentage.	-50 to +50%, <b>00%</b>

39. After setting up navigation equipment, press the A: NEXT soft key, and the GPS SETUP menu appears. This menu sets up the FURUNO GPS receiver GP-310B/320B. **If you do not have this equipment, press the NEXT soft key and go to step 42.**

▶ GEODETIC DATUM	WGS-84
POSITION SMOOTHING	000 second (s)
SPD/CSE SMOOTHING	005 second (s)
LATITUDE OFFSET	0.000°N
LONGITUDE OFFSET	0.000°E
DISABLE SATELLITE	- - - - -
LATITUDE	45°35.000°N
LONGITUDE	125°00.000°W
ANTENNA HEIGHT	005 m
GPS FIX MODE	2D/3D
COLD START	NO

*Installation wizard, GPS setup*

40. Choose an item and press the C: EDIT soft key to show corresponding window.



41. Choose setting and then press the C: ENTER soft key. Refer to the table which follows for description.

GPS SETUP menu description

Item	Description	Settings	Default Setting
Geodetic Datum	Your equipment is preprogrammed with most of the major chart systems of the world. Although the WGS-84 system, the GPS standard, is now widely used other categories of charts still exist. Select the chart system used, not the area where your boat is sailing.	Use the trackball or <b>ENTER</b> knob to select appropriate chart.	WGS-84
Position Smoothing	When the DOP or receiving condition is unfavorable, the GPS fix may change, even if the vessel is dead in water. This change can be reduced by smoothing the raw GPS fixes. A setting between 000 to 999 is available. The higher setting the more smoothed the raw data, however too high a setting shows response time to change in latitude and longitude. This is especially noticeable at high ship' speeds. Increase the setting if the GPS fix changes.	0-999 sec	0 sec (no position smoothing)

*(Continued on next page)*

GPS SETUP menu description (con't from previous page)

Item	Description	Settings	Default Setting
Spd/Cse Smoothing	During position fixing, ship's velocity (speed and course) is directly measured by receiving GPS satellite signals. The raw velocity data may change randomly depending on receiving conditions and other factors. You can reduce this random variation by increasing the smoothing. Like with latitude and longitude smoothing, the higher the speed and course smoothing the more smoothed the raw data. If the setting is too high, however, the response to speed and course change slows. For no smoothing, enter all zeros.	0-999 sec	5 sec
Latitude Offset	Offsets latitude position to further refine position accuracy. Use the N <- - > S soft key to switch coordinate.	9.999'S – 9.999'N	0.0' (no offset)
Longitude Offset	As above but for longitude. Use the W <- - > E soft key to switch coordinate.	9.999'E – 9.999'W	0.0' (no offset)
Disable Satellite	Every GPS satellite is broadcasting abnormal satellite number (s) in its Almanac, which contains general orbital data about all GPS satellites, including those which are malfunctioning. Using this information, the GPS receiver automatically eliminates any malfunctioning satellite from the GPS satellite schedule. However, the Almanac sometimes may not contain this information. If you hear about a malfunctioning satellite from another source, you can disable it manually. Enter satellite number (max. 3 satellites) in two digits and press the ENTER soft key.		None
Latitude	Set initial latitude position after cold start. Use the N <- - > S soft key to switch coordinate.	90°S - 90°N	45°35.000'N
Longitude	Set initial longitude position after cold start. Use the W <- - > E soft key to switch coordinate.	180°E – 180°W	125°00.000W
Antenna Height	Enter the height of the GPS antenna unit above sea surface.	0-99 m	5 m

GPS SETUP menu description (con't from previous page)

Item	Description	Settings	Default Setting
Fix Mode	Choose position fixing method: 2D (three satellites in view), 2D/3D (three or four satellites in view whichever is greater).	2D, 2D/3D	2D/3D
Cold Start	Clears the Almanac to receive the latest Almanac.	No, Yes	No

**WAAS setup**

Press the D: WAAS SETUP soft key at the GPS SETUP menu to show the WAAS SETUP display.

Contents of WAAS SETUP menu

Item	Description	Settings	Default Setting
WAAS Mode	Select ON to use the WAAS mode.	On, Off	Off
WAAS Search	WAAS satellite can be searched automatically or manually. For manual search, enter appropriate WAAS satellite number.	Auto, Manual	Auto
WAAS Alarm	When the WAAS signal is lost, the audible alarm sounds with the visual message "NO WAAS SIGNAL." <b>On:</b> Alarm continues to sound until the WAAS positioning mode is available again or the alarm is recognized by key operation. <b>Off:</b> Alarm sounds three times.	On, Off	Off
Corrections Data	Selects the type of message for WAAS correction. Use "00" (operational status) in North America; "02" in other locations.	00 to 27, 99	02

42. After you have finished setting up the GPS receiver, it's now time to set up external equipment. Press the A: NEXT soft key to show the DATA1 (GPS/NMEA) port setup menu. It is only necessary to set up ports which you are going to use; skip unnecessary steps. **If you do not have external equipment connected to the NavNet, press the NEXT key several times to show the "FINISH AND EXIT INSTALLATION WIZARD" screen and then push the ENTER knob to finish.**

▶ OUTPUT FORMAT	NMEA0183 Ver 2.0
LAT/LON FORMAT	DD'MM.MMM'
XTE FORMAT	X.XX
OUTPUT DESTINATION	NO

*Installation wizard, DATA1 (GPS/NMEA) port setup menu*

43. Choose item and press the C: EDIT soft key. Choose appropriate setting and then press the ENTER soft key. Refer to the table and sentence description on the next page for details.

44. Press the A: NEXT soft key, and the DATA2 (NMEA) port setup menu appears. Set up this port similar to how you set up the DATA1 port.

▶ OUTPUT FORMAT	NMEA0183 Ver 2.0
BAUD RATE	4800bps
LAT/LON FORMAT	DD'MM.MMM'
XTE FORMAT	X. XX
OUTPUT DESTINATION	NO

*Installation wizard, DATA2 (NMEA) port setup menu*

Description of items in “port” menus

Item	Description	Settings	Default Setting
Output Format	Selects NMEA output version for the equipment connected.	NMEA0183 Ver. 1.5, NMEA0183 Ver. 2.0	NMEA0183 Ver. 2.0
Baud Rate	Sets baud rate.	<b>DATA1 port:</b> AUTO* <sup>1</sup> , 4800 and 38400* <sup>2</sup> (bps) <b>DATA2 port:</b> 4800, 9600, 19200 (bps)	4800 bps
Lat/Lon Format	Selects latitude/longitude format to output.	DD°MM.MM', DD°MM.MMM', DD°MM.MMMM'	DD°MM.MMM'
XTE Format	Selects number of XTE digits to output.	X. XX, X. XXX	X. XX
Output Destination	Selects whether to output route (data sentence RTE) and waypoint data (data sentence WPL) when destination is set.	Yes, No	No
PORT MNITR (soft key)	Use this key to view which sentences are being output. See the example below.		

\*<sup>1</sup> Auto detection of baud rate of connected equipment. For use only with device having “AUTO” feature.

\*<sup>2</sup> Choose 38400 bps when connecting an AIS Interface or AIS Transponder to the DATA2 port.

```
$GPGLL,3415.2345,N,13520.5301,E,152500.00
,A*E7<CR><LF>$GPGLL,3415.2345,N,135
20.5301,E,152500.00,A*E7<CR><LF>$GPGLL
,3415.2345,N,13520.5301,E,152500.00,A*
E7<CR><LF>$GPGLL,3415.2345,N,13520.530
1,E,152500.00,A*E7<CR><LF>$GPGLL,3415.
2345,N,13520.5301,E,152500.00,A*E7<CR>
<LF>$GPGLL,3415.2345,N,13520.5301,E,15
2500.00,A*E7<CR><LF>
```

*Installation wizard, port monitor display*

45. Press the A: NEXT soft key, and the NMEA sentence selection window (for network) appears.

▶ AAM	--
APB	--
BOD	--
BWR	--
DPT	--
GGA	--
GLL	--
GTD	--
MTW	--
RMA	--
RMB	--
RMC	--
VHW	--
VTG	--
WPL	--
XTE	--
ZDA	--
HDT	--
HDG	--
MWV	--
ZTG	--

*Installation wizard, NMEA sentence selection window*

46. Choose sentence to process and press the A: ON/OFF soft key to show ON or “-” (OFF) as appropriate.

47. Press the A: NEXT soft key and the message “FINISH AND EXIT INSTALLATION WIZARD. ARE YOU SURE?” appears. Press the **ENTER** knob to finish the installation wizard.

This concludes the Installation Wizard. Turn off the equipment to register settings.

## 3.2 Checking Magnetron Heater Voltage

Magnetron heater voltage is formed on the MD (1824C-BB), PTU (1834C-BB) or RTB (1934C-BB/1944C-BB/1954C-BB/1964C-BB) Board of the antenna unit, and preadjusted at the factory. Therefore, no adjustment is required. However, check magnetron heater voltage for confirmation as shown below. ***This procedure should only be performed by a qualified technician.***

1. Open the antenna unit.
2. Turn on the power. Do not transmit the radar.
3. Connect a multimeter, set to 10VDC range, appropriate position on the MD (1824C-BB), PTU (1834C-BB) or RTB (1934C-BB/1944C-BB/1954C-BB/1964C-BB) Board in the antenna unit. Refer to the table in below.
4. Confirm that the multimeter indication is within the ratings shown below.

	<b>MODEL1824C-BB</b>	<b>MODEL1834C-BB</b>	<b>MODEL1934C-BB/ 1944C-BB/1954C-BB/ 1964C-BB</b>
<b>Check point</b>	TP804#6 (+) and #4 (-) on MD Board	TP802#4 (+) and #6 (-) on PTU Board	J825#4 and #6 (GND) on RTB Board
<b>Multimeter indication</b>	7.9 to 8.1 V	7.4 to 7.6 V	7.4 to 7.6 V
<b>Adjustment point</b>	VR801 on MD Board	R106 on PTU Board	VR801 on MD Board

## 4. OPTIONAL EQUIPMENT


### 4.1 External Buzzer

The external buzzer provides a louder alert when the alarm is violated.

#### External buzzer

Type: XH3-BZ-L970  
Code no.: 000-146-422

1. Unfasten 11 screws and 9 connectors to remove the cover.
2. Use a knife to cut a "cross" in the rubber bushing on the rear cover.
3. Pass the 3P connector of the buzzer assembly through the rubber bushing from the outside of the cover.
4. Connect the 3P connector to J307 on the 19P1013 board. See below.
5. Close the cover.
6. Fix the buzzer within 1 m from the processor unit with two tapping screws.

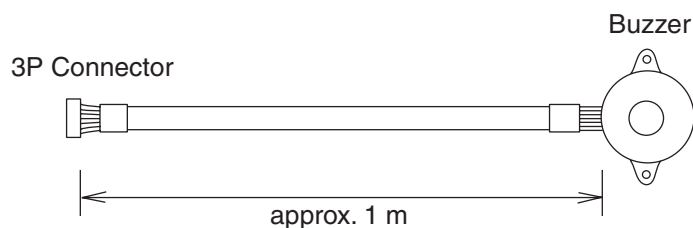

*Processor unit (cover removed)*

## 4.2 ARP Kit ARP-11

### Necessary parts


Name: ARP kit  
 Type: ARP-11  
 Code no.: 008-523-050

### Contents of ARP kit

Name	Type	Code No.	Qty
ARP Board	18P9013	008-521-830	1
Pan head screw	M3x6 C2700W	000-881-403	4
Spacer*	SQ9	000-801-850	1
	SQ15	000-801-779	3
Spring washer*	M3 C5191W	000-864-204	3


\*Not used

1. Unfasten 11 screws and 9 connectors to remove the cover.
2. Disconnect P1361 and P1357 from the 19P1015 board and unfasten six screws to remove the 19P1015 board and shield plate.

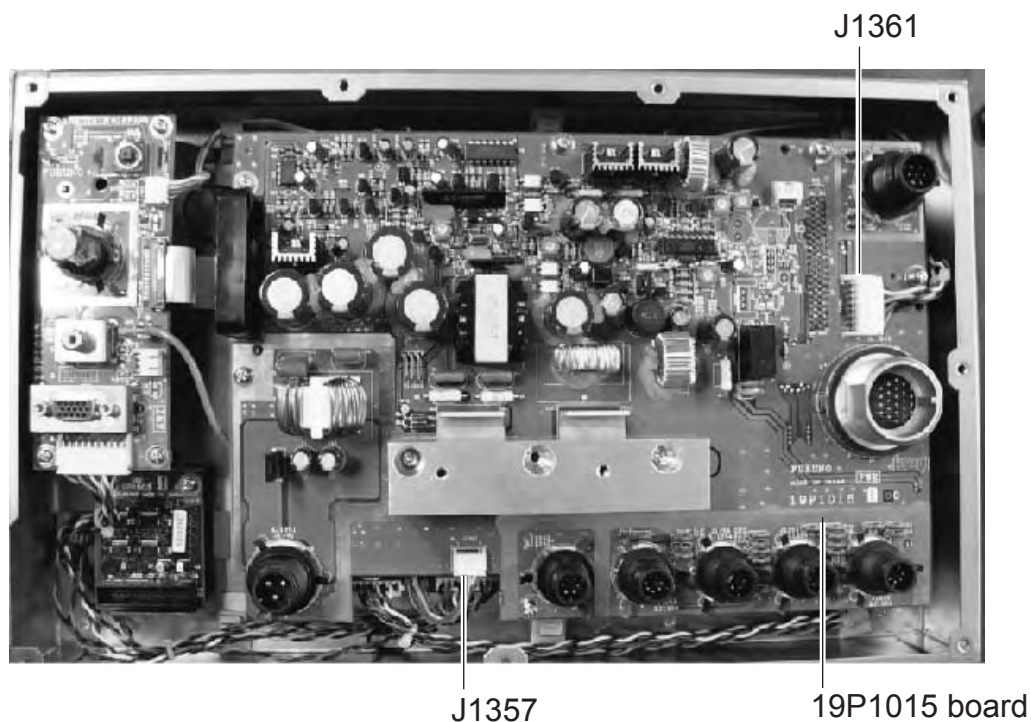



3. Mate P107 on the ARP Board to J112 on the 19P1001 board and fasten the ARP board with four screws.

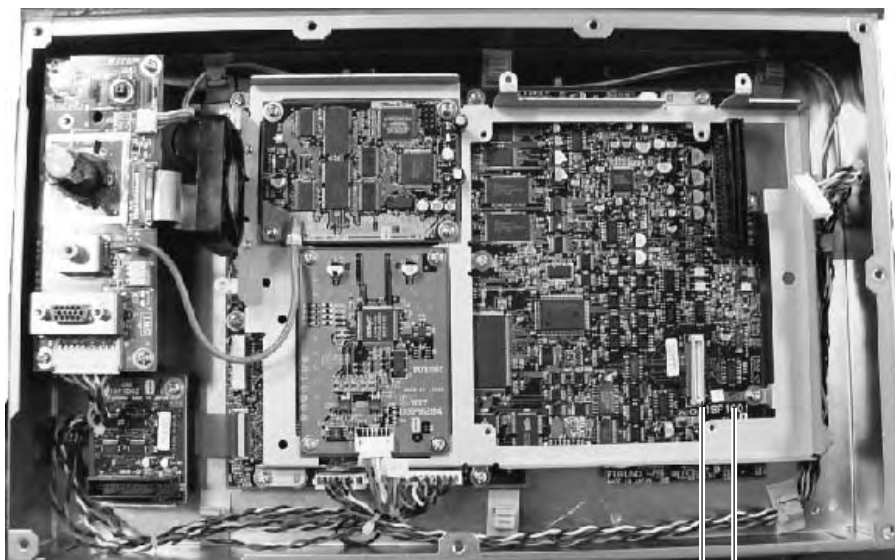









19P1001 board  
J112

4. Mount the shield plate and the 19P1015 board and connect P1361 and P1357 to the 19P1015.
5. Reassemble the processor unit.

## PACKING LIST

19AV-X-9853 -2 1/1

RPU-015-E-\* -CS

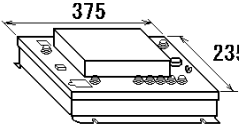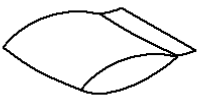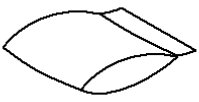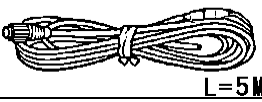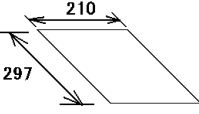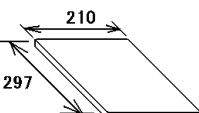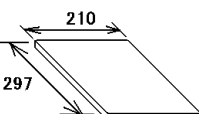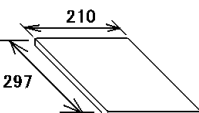

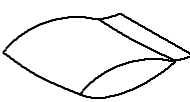
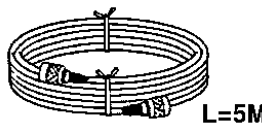
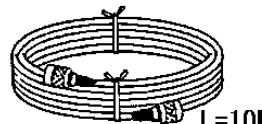
NAME	OUTLINE	DESCRIPTION/CODE	Q'TY
<b>ユニット</b> UNIT			
制御部 PROCESSOR UNIT		RPU-015-E-N 000-088-224 **	1
<b>予備品</b> SPARE PARTS			
予備品 SPARE PARTS		SP03-14501 008-444-420	1
<b>工事材料</b> INSTALLATION MATERIALS		<b>CP03-25900</b>	
工事材料 INSTALLATION MATERIALS		CP03-25901 008-443-690	1
ケーブル組品MJ CABLE ASSY.		MJ-A3SPF0018-050ZC 000-154-025	1
<b>図書</b> DOCUMENT			
ヒューズ 変更のお願い NOTICE FOR FUSE REPLACEMENT		C32-00007-* 000-809-188	1
操作要領書(英) OPERATOR'S GUIDE		OSE-35490-* 000-151-807	1
装備要領書(英) INSTALLATION MANUAL		IME-35490-* 000-151-806	1
取扱説明書(英) OPERATOR'S MANUAL		OME-35490-* 000-151-805	1

コード番号末尾の[\*\*]は、選択品の代表型式/コードを表します。  
CODE NUMBER ENDING WITH "\*\*" INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERIAL.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

19AV-X-9853



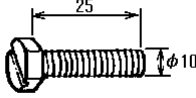


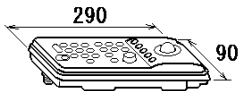RCU-017-E-5-CS/RCU-017-E-10-CS

NAME	OUTLINE	DESCRIPTION/CODE	Q'TY
<b>ユニット</b> UNIT			
操作部 CONTROL UNIT		RCU-017-E 000-080-537-00	1
<b>その他部品</b> OTHER PARTS			
ハードカバー HARD COVER		06-021-2121-1 100-320-101-00	1
<b>付属品</b> ACCESSORIES			
付属品 ACCESSORIES		FP03-10001 008-537-530-00	1
<b>工事材料</b> INSTALLATION MATERIALS			
ケーブル組品MJ CABLE ASSY.	 L=5M	MJ-A7SPF0006-050C MJ-A7SPF0006-050 000-159-679-10 000-147-879-00	1 (* )
ケーブル組品MJ CABLE ASSY.	 L=10M	MJ-A7SPF0006-100C MJ-A7SPF0006-100 000-159-680-10 000-143-578-00	1 (* )

(\*)印のケーブル組品は仕様により決定されます。  
 (\*) MARKED CABLES ARE SELECTABLE.

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。  
 TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.  
 (略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

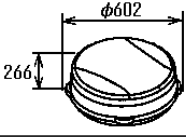RSB-0071-057




NAME	OUTLINE	DESCRIPTION/CODE No.	QTY
ユニット UNIT			
(完) 空中線部 ANTENNA UNIT		RSB-0071-057 000-086-830-00	1
空中線部工材 ANTENNA UNIT INSTALLATION MATERIALS		CP03-16901	
EMCコア EMC CORE		E04SS251512 000-144-673-00	1
六角ボルト 刈割 HEX. BOLT (SLOTTED HEAD)		M10X25 SUS304 000-862-308-00	4
ミガキ平座金 FLAT WASHER		M10 SUS304 000-864-131-00	4
ハネ座金 SPRING WASHER		M10 SUS304 000-864-261-00	4

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。

TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

RSB-0094-075

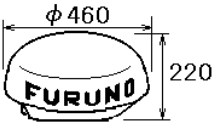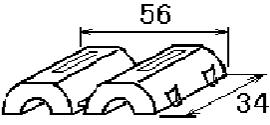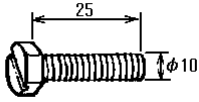NAME	OUTLINE	DESCRIPTION/CODE No.	Q'TY
ユニット UNIT			
空中線部 ANTENNA UNIT		RSB-0094-075 000-080-237-00	1
工事材料 INSTALLATION MATERIALS		CP03-25401	
EMIコア EMI CORE		RFC-10 000-141-085-10	1
六角ボルト 寸割 HEX. BOLT (SLOTTED HEAD)		M10X25 SUS304 000-862-308-00	4

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。







TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

## PACKING LIST

19AK-X-9856 -5 1/1

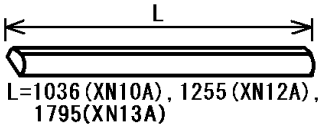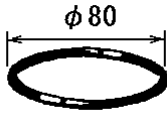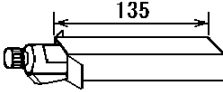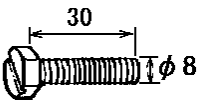XN10A,XN12A,XN13A

NAME	OUTLINE	DESCRIPTION/CODE	Q'TY
ユニット UNIT			
アンテナ ANTENNA		XN10A/12A/13A 008-390-960 **	1
アンテナ工材 ANTENNA INSTALLATION MATERIALS			
Oリング O-RING		JB1AG-80 000-851-313	1
ケミシール SILICON RUBBER		S-8400W アルミチューブ 50G 000-158-483	1
六角ボルト スリワ HEX. BOLT		M8X30 SUS304 000-862-151	4
ミガキ平座金 FLAT WASHER		M8 SUS304 000-864-130	4
バネ座金 SPRING WASHER		M8 SUS304 000-864-262	4

コード番号末尾の[\*\*]は、選択品の代表コードを表します。

CODE NUMBER ENDING WITH "\*\*" INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERIAL.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

19AK-X-9856

# FURUNO

CODE NO.		19AL-X-9401 -1
TYPE		1/1

工事材料表 INSTALLATION MATERIALS		MODEL1833/1833C			
番号 NO.	名称 NAME	略図 OUTLINE	型名/規格 DESCRIPTIONS	数量 Q'TY	用途/備考 REMARKS
1	ケーブル組品MJ CABLE ASSY.	 L=10M	MJ-B24LPF0002-100 CODE NO. 000-138-972-00	1	選択 TO BE SELECTED
2	ケーブル組品MJ CABLE ASSY.	 L=15M	MJ-B24LPF0002-150 CODE NO. 000-138-970-00	1	選択 TO BE SELECTED
3	ケーブル組品MJ CABLE ASSY.	 L=20M	MJ-B24LPF0002-200 CODE NO. 000-138-974-00	1	選択 TO BE SELECTED
4	ケーブル組品MJ CABLE ASSY.	 L=30M	MJ-B24LPF0002-300 CODE NO. 000-138-973-00	1	選択 TO BE SELECTED

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。

TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

19AL-X-9401

**FURUNO**

工事材料表		MODEL 1933/1933C/1933CR/1943/1943C		CODE NO.	19AL-X-9402 -2
INSTALLATION MATERIALS				TYPE	1/1
番号 NO.	名称 NAME	略図 OUTLINE	型名/規格 DESCRIPTIONS	数量 Q'TY	用途/備考 REMARKS
1	ケーブル組品MJ CABLE ASSY.	 L=10M	MJ-B24LPF0005-100 CODE NO. 000-140-434-00	1	選択 TO BE SELECTED
2	ケーブル組品MJ CABLE ASSY.	 L=15M	MJ-B24LPF0005-150 CODE NO. 000-140-435-00	1	選択 TO BE SELECTED
3	ケーブル組品MJ CABLE ASSY.	 L=20M	MJ-B24LPF0005-200 CODE NO. 000-140-436-00	1	選択 TO BE SELECTED
4	ケーブル組品MJ CABLE ASSY.	 L=30M	MJ-B24LPF0005-300 CODE NO. 000-140-437-00	1	選択 TO BE SELECTED

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。





TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

19AL-X-9402



**FURUNO**

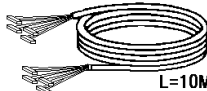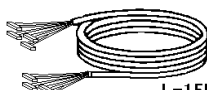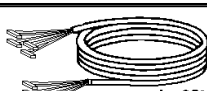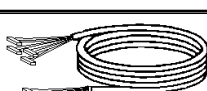工事材料表		MODEL1964C		CODE NO.	19AV-X-9402 -0
INSTALLATION MATERIALS				TYPE	1/1
番号 NO.	名称 NAME	略図 OUTLINE	型名/規格 DESCRIPTIONS	数量 Q'TY	用途/備考 REMARKS
1	ケーブル組品 CABLE ASSY.		RW-9771 *10M*	1	選択 TO BE SELECTED
			CODE NO.		
2	ケーブル組品 CABLE ASSY.		RW-9771 *15M*	1	選択 TO BE SELECTED
			CODE NO.		
3	ケーブル組品 CABLE ASSY.		RW-9771 *20M*	1	選択 TO BE SELECTED
			CODE NO.		
4	ケーブル組品 CABLE ASSY.		RW-9771 *30M*	1	選択 TO BE SELECTED
			CODE NO.		

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。


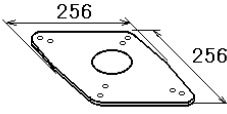
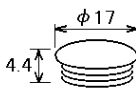
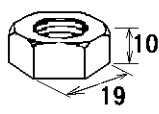

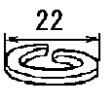
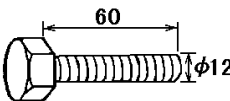
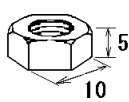


TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

19AV-X-9402

**FURUNO**

CODE NO.	008-503-360-00	03FR-X-9401 -10
TYPE	CP03-18401	1/2

工事材料表 INSTALLATION MATERIALS					
番号 NO.	名称 NAME	略図 OUTLINE	型名/規格 DESCRIPTIONS	数量 Q'TY	用途/備考 REMARKS
1	シールワッシャ SEAL WASHER		03-001-3002-0 CODE NO. 300-130-020-00	4	
2	防蝕ゴム CORROSION-PROOF RUBBER MAT		03-142-3001-0 CODE NO. 100-275-580-00	1	
3	キャップ CAP		040-4010 CODE NO. 000-164-929-10 000-515-332-00	4	
4	六角ナット 1種 HEX. NUT		M12 SUS304 CODE NO. 000-863-112-00	4	
5	ミガキ平座金 FLAT WASHER		M12 SUS304 CODE NO. 000-864-132-00	4	
6	バネ座金 SPRING WASHER		M12 SUS304 CODE NO. 000-864-263-00	4	
7	六角ボルト (全ネジ) HEX. BOLT		M12X60 SUS304 CODE NO. 000-162-813-10 000-862-191-00	4	
8	六角ナット 1種 HEX. NUT		M6 SUS304 CODE NO. 000-158-856-10 000-863-109-00	1	
9	ミガキ平座金 FLAT WASHER		M6 SUS304 CODE NO. 000-158-854-10 000-864-129-00	3	
10	バネ座金 SPRING WASHER		M6 SUS304 CODE NO. 000-158-855-10 000-864-260-00	1	




型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりませ

ん。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

# FURUNO

CODE NO.	008-503-360-00	03FR-X-9401 -10 2/2
TYPE	CP03-18401	

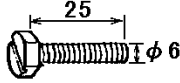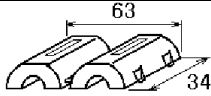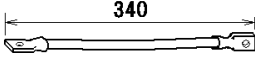工事材料表 INSTALLATION MATERIALS					
番号 NO.	名称 NAME	略図 OUTLINE	型名 / 規格 DESCRIPTIONS	数量 Q'TY	用途 / 備考 REMARKS
11	六角ボルト HEX. BOLT		M6X25 SUS304 ----- M6X25 SUS304 CODE NO. 000-162-871-10 000-862-180-00	1	
12	EMIコア EMI CORE		RFC-13 CODE NO. 000-141-084-10	3	
13	アース線 GROUNDING WIRE		RW-4747-1 03S4747-2 CODE NO. 000-566-000-01	1	



型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。

TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

# FURUNO

CODE NO.	008-443-690-00	19AQ-X-9401 -1
TYPE	CP03-25901	1/1

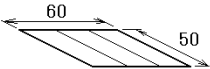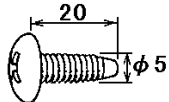工事材料表 INSTALLATION MATERIALS					
番号 NO.	名称 NAME	略図 OUTLINE	型名/規格 DESCRIPTIONS	数量 Q'TY	用途/備考 REMARKS
1	ヒューズ'バリマーク FUSE LABEL		03-153-1312-0	1	
			CODE NO. 100-292-140-00		
2	+トラスタップ'ソネジ' 1シユ SELF-TAPPING SCREW		5X20 SUS304	4	
			CODE NO. 000-162-608-10 000-802-081-00		

型式/コード 番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。 なお、品質は変わりません。




TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

19AQ-X-9401

# FURUNO





CODE NO.	008-444-420	19AQ-X-9301 -2 1/1
TYPE	SP03-14501	BOX NO. P

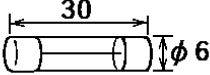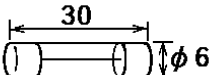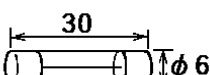SHIP NO.		SPARE PARTS LIST FOR			U S E			SETS PER VESSEL
ITEM NO.	NAME OF PART	OUTLINE	DWG. NO. OR TYPE NO.	QUANTITY			REMARKS/CODE NO.	
				WORKING		SPARE		
				PER SET	PER VES			
1	ヒューズ FUSE		FGBO 125V 15A PBF			3		
			FGBO 15A AC125V				000-155-827-10 000-549-014-00	
2	ヒューズ FUSE		FGBO 125V 7A PBF			3		
			FGBO 7A AC125V				000-155-831-10 000-549-013-00	
3	カンワイヒューズ FUSE		FGBO 125V 3A PBF			3		
			FGBO 3A AC125V				000-155-830-10 000-131-845-00	
MFR'S NAME	FURUNO ELECTRIC CO.,LTD.			DWG NO.	19AQ-X-9301		1/1	

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)  
 型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。 なお、品質は変わりません。  
 TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

**FURUNO**

CODE NO.	008-537-530-00	19AQ-X-9503 -1
TYPE	FP03-10001	1/1

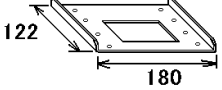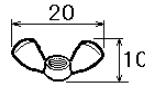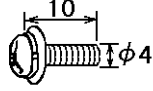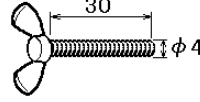付属品表					
ACCESSORIES					
番号 NO.	名称 NAME	略図 OUTLINE	型名/規格 DESCRIPTIONS	数量 Q'TY	用途/備考 REMARKS
1	フラッシュマウント金具 MOUNTING PLATE		19-023-1051-0	1	
			CODE NO. 100-307-920-00		
2	蝶ナット WING NUT		M4 YBSC2 MBN12	4	
			CODE NO. 000-863-306-00		
3	ワッシャーヘッドネジ WASHER HEAD SCREW		M4X10 C2700W MBN12	4	
			CODE NO. 000-881-446-00		
4	蝶ボルト WING SCREW		M4X30 YBSC2 MBN12	4	
			CODE NO. 000-804-799-00		







型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。

TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

19AQ-X-9503

PSU-005

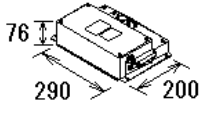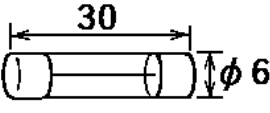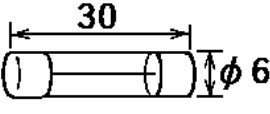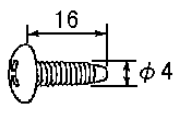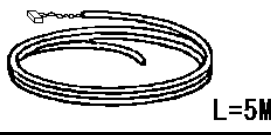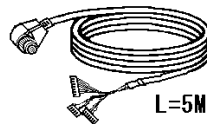NAME	OUTLINE	DESCRIPTION/CODE	Q'TY
<b>ユニット</b> UNIT			
空中線電源部 POWER SUPPLY UNIT		PSU-005 000-080-190-00	1
<b>予備品</b> SPARE PARTS		<b>SP03-14001</b>	
ヒューズ FUSE		FGBO 125V 15A PBF FGBO 15A AC125V 000-155-827-10 000-549-014-00	3
ヒューズ FUSE		FGBO 125V 7A PBF FGBO 7A AC125V 000-155-831-10 000-549-013-00	3
<b>工事材料</b> INSTALLATION MATERIALS		<b>CP03-24501</b>	
+トラスタップソネジ SELF-TAPPING SCREW		4X16 SUS304 1ｼﾞ 000-802-080-00	4
<b>その他工材</b> OTHER INSTALLATION MATERIALS			
ケーブル組品 CABLE ASSY.		VL3P-VV-S2X2C-AA050 000-152-217-10	1
ケーブル組品MJ CABLE ASSY.		MJ-B24LPF0009-050 000-158-092-00	1

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。

TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

**PSU-008**

NAME	OUTLINE	DESCRIPTION/CODE No.	Q'TY
<b>ユニット UNIT</b>			
空中線電源部 POWER SUPPLY UNIT		PSU-008 000-083-617-00	1
<b>予備品 SPARE PARTS</b>			
予備品 SPARE PARTS		SP03-14501 008-444-420-00	1
<b>工事材料 INSTALLATION MATERIALS</b>		<b>CP03-30600</b>	
ケーブル組品 CABLE ASSY.		VL3P-VV-S2X2C-AA050 000-152-217-10	1
ケーブル組品MJ CABLE ASSY		MJ-B24LPF0011-050 000-152-939-00	1
工事材料 INSTALLATION MATERIALS		CP03-30601 008-550-740-00	1
<b>図書 DOCUMENT</b>			
ヒューズ`変更のお願い NOTICE FOR FUSE REPLACEMENT		C32-00502-* 000-152-940-0*	1
設定要領書 INTERNAL SETTING (JR/EN)		C32-00505-* 000-153-867-0*	1

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。



TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)



# FURUNO

CODE NO.	008-550-740-00	19AV-X-9401 -1
TYPE	CP03-30601	1/1

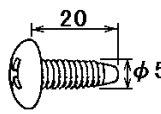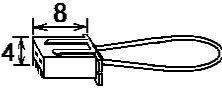工事材料表					
INSTALLATION MATERIALS					
番号 NO.	名称 NAME	略図 OUTLINE	型名/規格 DESCRIPTIONS	数量 Q'TY	用途/備考 REMARKS
1	+トラスタップネジ 1種 SELF-TAPPING SCREW		5X20 SUS304	4	
			CODE NO. 000-802-081-00		
2	コネクタ組品 CONNECTOR ASSY.		XH2P-L40-AGR	1	
			CODE NO. 000-153-879-10		

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。




TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

19AV-X-9401

# FURUNO

CODE NO.	008-444-420	19AQ-X-9301 -2 1/1
TYPE	SP03-14501	BOX NO. P

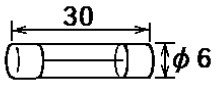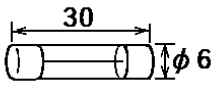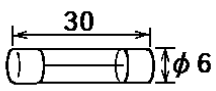SHIP NO.		SPARE PARTS LIST FOR		U S E			SETS PER VESSEL
ITEM NO.	NAME OF PART	OUTLINE	DWG. NO. OR TYPE NO.	QUANTITY			REMARKS/CODE NO.
				WORKING		SPARE	
				PER SET	PER VES		
1	ヒューズ FUSE		FGBO 125V 15A PBF			3	
			FGBO 15A AC125V				000-155-827-10 000-549-014-00
2	ヒューズ FUSE		FGBO 125V 7A PBF			3	
			FGBO 7A AC125V				000-155-831-10 000-549-013-00
3	カンワイヒューズ FUSE		FGBO 125V 3A PBF			3	
			FGBO 3A AC125V				000-155-830-10 000-131-845-00
MFR'S NAME		FURUNO ELECTRIC CO.,LTD.		DWG NO.	19AQ-X-9301	1/1	

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。 なお、品質は変わりません。

TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.





# FURUNO

表 2 TABLE 2

MODEL	MASS (kg ±0.1%)
RSB-0087/0087A/110	4.9
RSB-0094	5.2
RSB-0095	5.1

表 1 TABLE 1

寸法区分(mm)	公差(mm)
DIMENSIONS	TOLERANCE
0 < L ≤ 50	±1.5
50 < L ≤ 100	±2.5
100 < L ≤ 500	±3

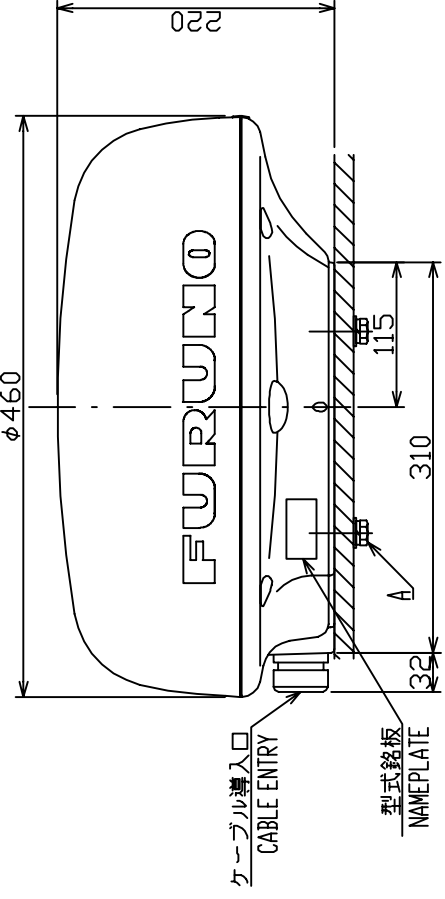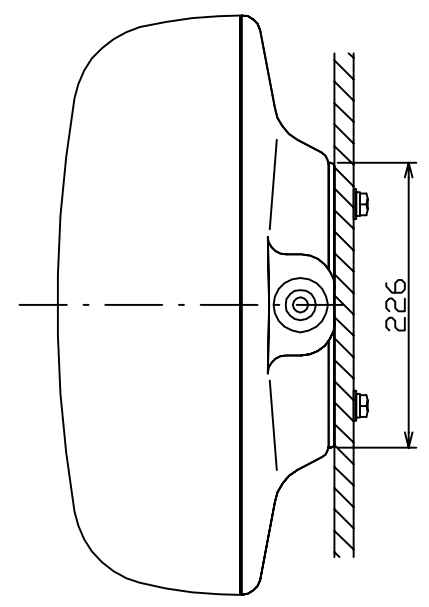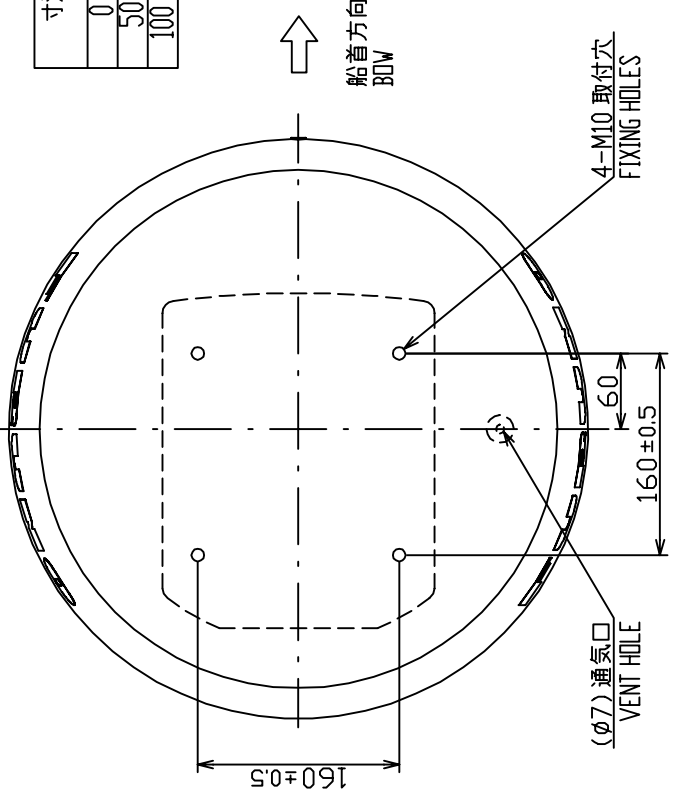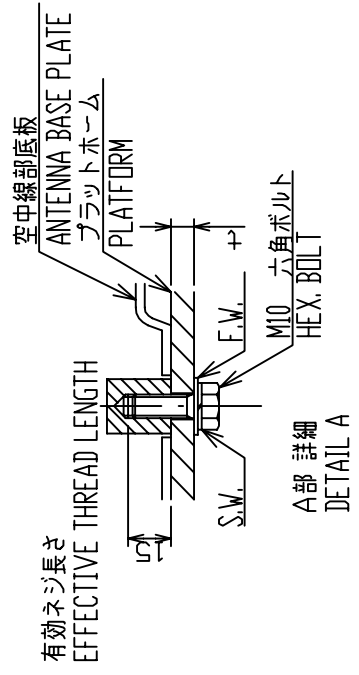

注記 1) 指定外の寸法公差は表 1 による。  
 2) 取付は M10 ボルトを使用のこと。  
 ネジ長さは板厚に依りて、20 (t ≤ 5) または 25 (5 < t ≤ 10) とする。

NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
 2. USE M10 BOLTS FOR FIXING UNIT.  
 SCREW LENGTH SHALL BE ACCORDING TO PLATFORM THICKNESS:  
 20 (t ≤ 5) OR 25 (5 < t ≤ 10).

DRAWN	MODEL 1724C	TITLE	RSB-0087/0087A/0094/0095/110
CHECKED	MODEL 1824C/1824C-BB	名称	空中線部
APPROVED	MODEL 1715	外寸図	
	MODEL 1823C	NAME	ANTENNA UNIT
SCALE	MODEL 1722/1722C/1723C		
DWG No.	MODEL 1712		
	03-161-100G-3/03-164-300G-1		OUTLINE DRAWING

FURUNO ELECTRIC CO., LTD.


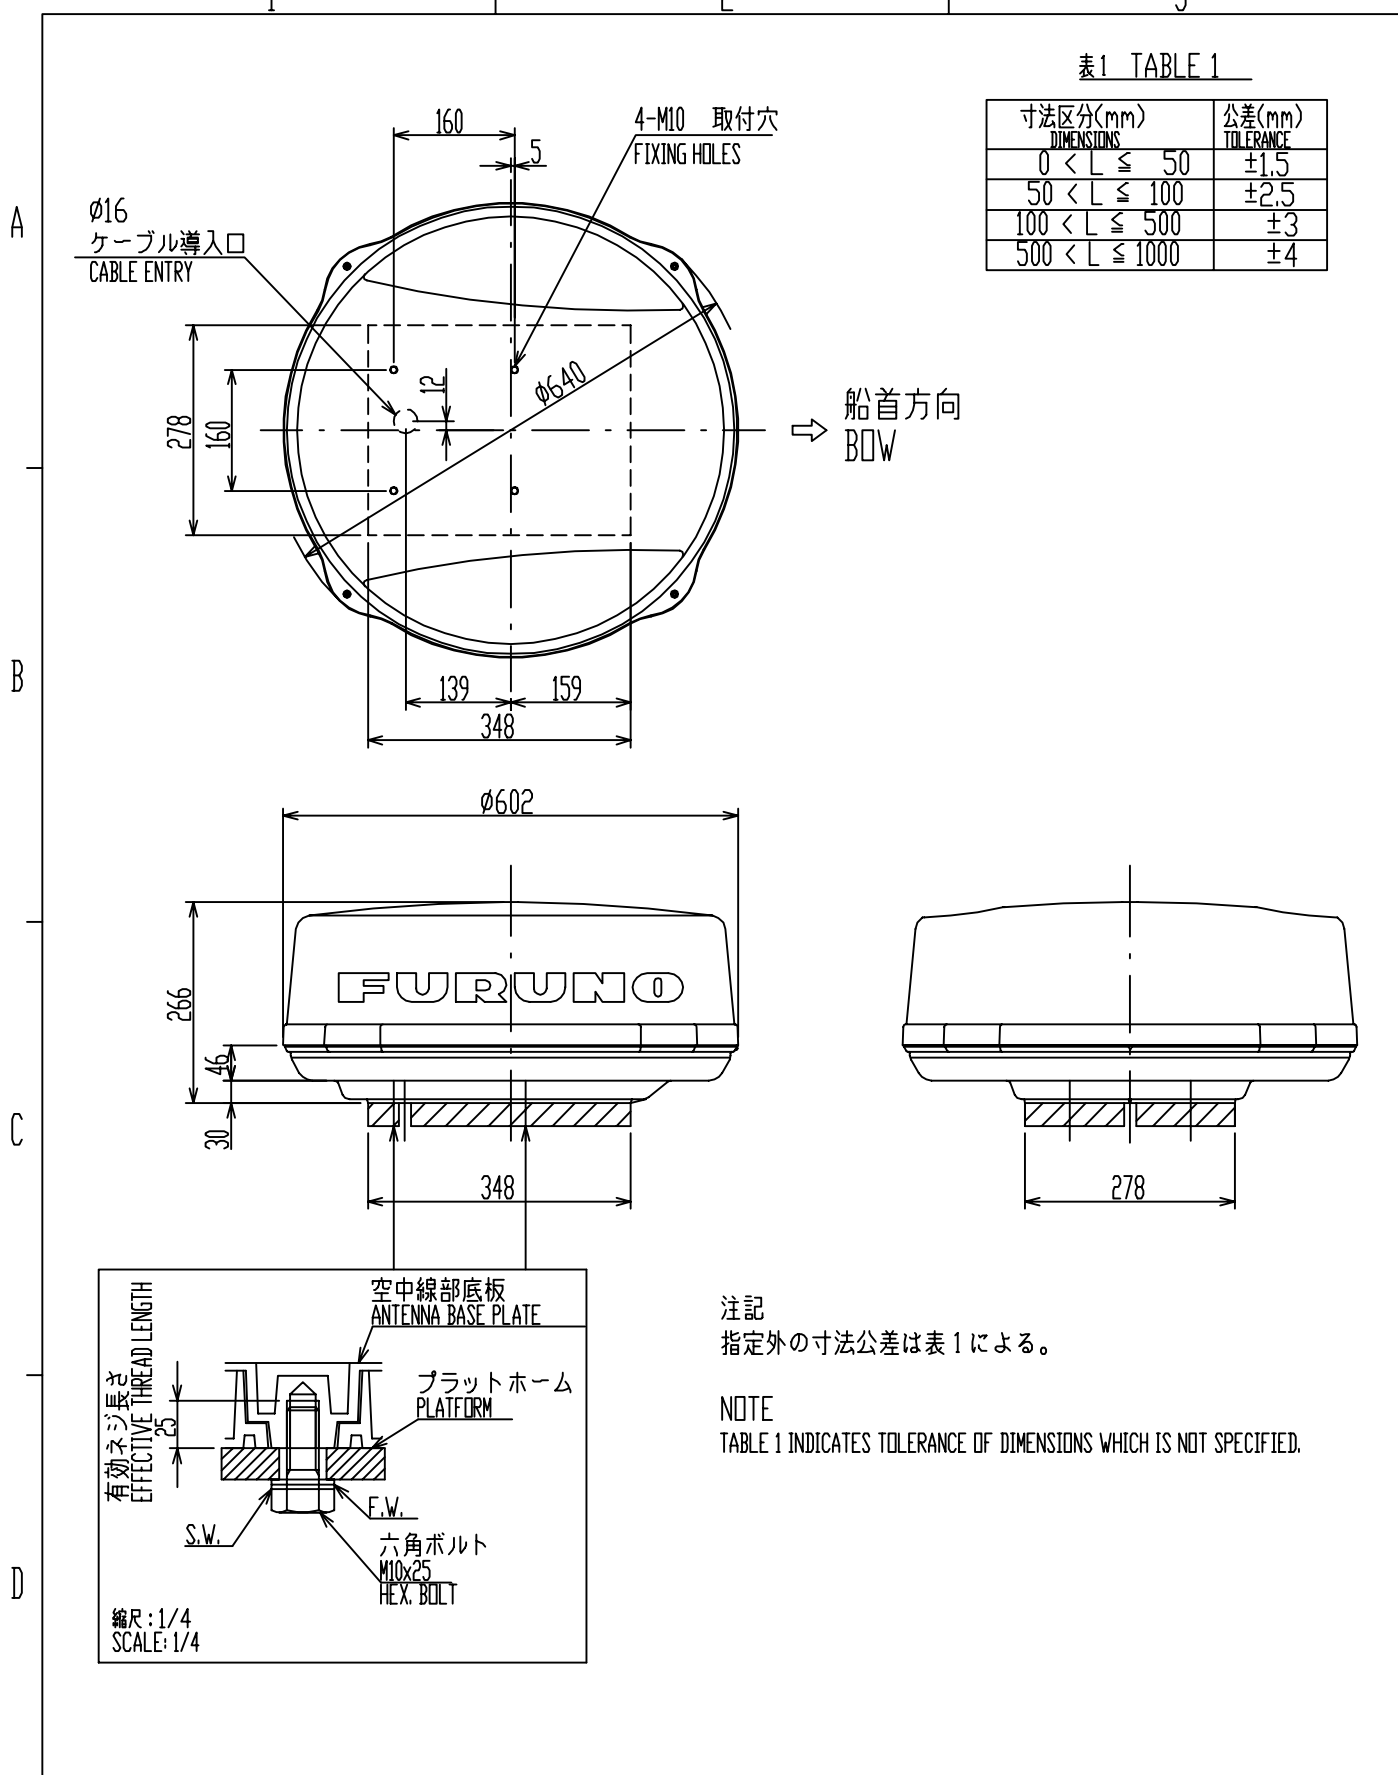


表1 TABLE 1

寸法区分(mm) DIMENSIONS	公差(mm) TOLERANCE
$0 < L \leq 50$	$\pm 1.5$
$50 < L \leq 100$	$\pm 2.5$
$100 < L \leq 500$	$\pm 3$
$500 < L \leq 1000$	$\pm 4$



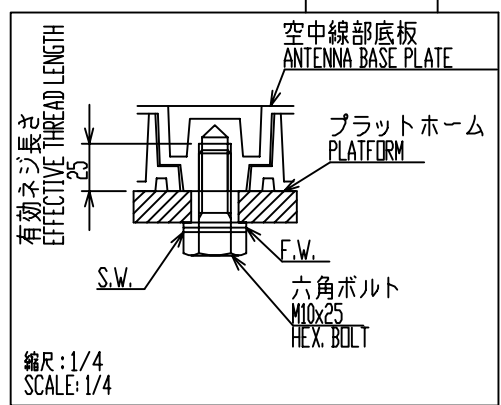


注記  
指定外の寸法公差は表1による。

NOTE  
TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.

DRAWN Feb. 3, '05	E. MIYOSHI	MODEL 1734C MODEL 1834C/1834C(-BB)	TITLE RSB-0071
CHECKED	TAKAHASHI, T	MODEL 1833/1833C MODEL 1732/1732C	名称 空中線部
APPROVED	Y. Hatai	RS-1000 MODEL 1832	外寸図
SCALE 1/10	MASS 8 $\pm 10\%$ kg		NAME ANTENNA UNIT
DWG.No. C3441-G01-G		03-136-6001-G2	OUTLINE DRAWING

4  
3  
2

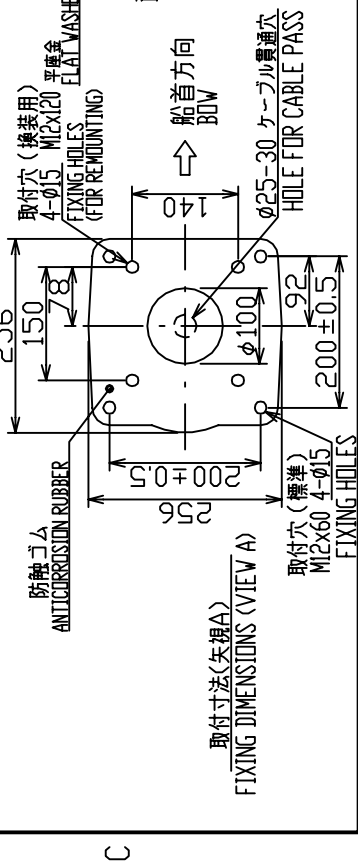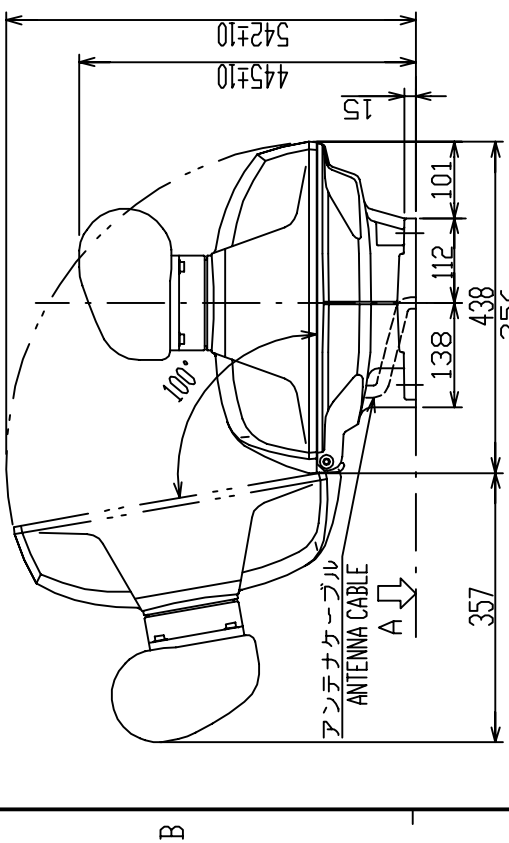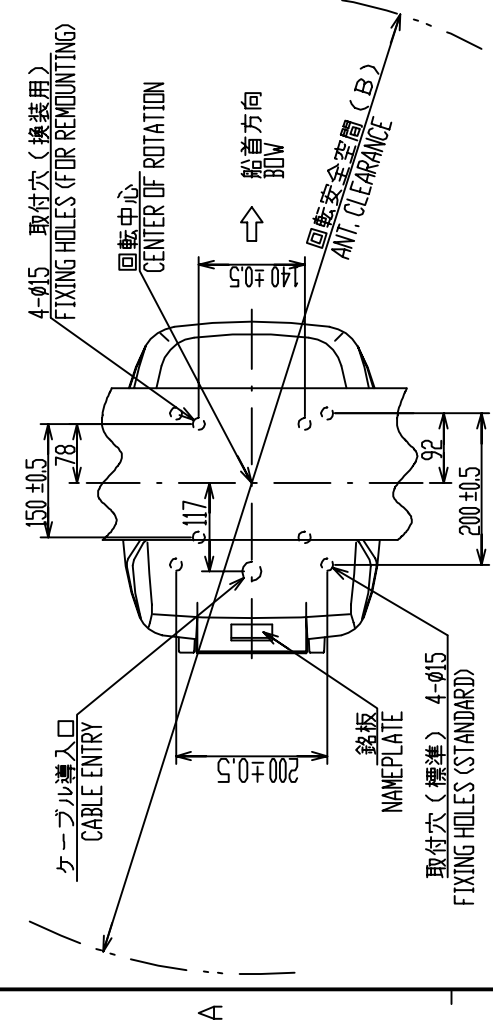

注記



- 1) 指定外寸法公差は表2による。
  - 2) 取付はM12ボルトを使用のこと。
  - 3) 本機取付台にφ25-30のケーブル貫通穴を開ける。
- NOTE
1. TABLE 2 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
  2. USE M12 BOLTS FOR FIXING THE UNIT.
  3. MAKE A HOLE φ25-30 ON MOUNTING MAST FOR CABLE PASS.

表 2 TABLE 2

寸法区分 (mm) DIMENSIONS	公差 (mm) TOLERANCE
L ≤ 50	±1.5
50 < L ≤ 100	±2.5
100 < L ≤ 500	±3
500 < L ≤ 1000	±4
1000 < L ≤ 2000	±5

表 1 TABLE 1

種類 TYPE	XN10A	XN12A
空中線長 (A) ANT. LENGTH (mm)	1036±10	1255±10
回転安全空間 (B) ANT. CLEARANCE (mm)	1200	1400
質量 (kg) MASS (10kg)	22	23

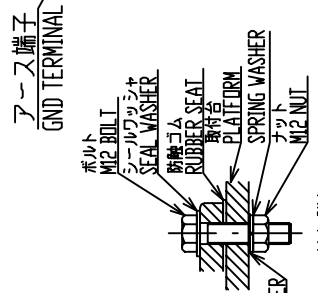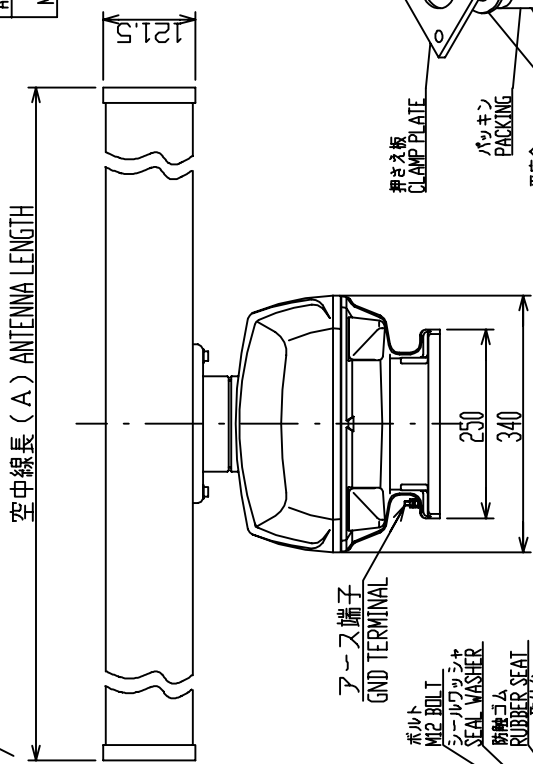

DRAWN	Jan. 12, '05 E. MIYOSHI	TITLE	RSB-0070/0073
CHECKED	TAKAHASHI, T	名称	空中線部
APPROVED	Y. Hatai	外寸図	
SCALE	1/10	NAME	ANTENNA UNIT
DRAWING	C3500-G01-D	OUTLINE DRAWING	





表1 TABLE 1

寸法範囲 (mm) DIMENSIONS	公差 (mm) TOLERANCE
0 < L ≤ 50	±1.5mm
50 < L ≤ 100	±2.5mm
100 < L ≤ 500	±3mm
500 < L ≤ 1000	±4mm
1000 < L ≤ 2000	±5mm

表2 TABLE 2

種類 TYPE	XN12A	XN13A
空中線長(A) ANT. LENGTH(mm)	1255±10	1795±10
安全空間(B) ANT. CLEARANCE(mm)	1400	1940
質量(kg) MASS	25	27





- 注記
- 1) 指定外寸法公差は表1による。
  - 2) 取付はM12ボルトを使用のこと。
  - 3) 空中線部の取付台にφ25-30のケーブル貫通穴を開ける。
  - 4) 初期製造分は取付寸法240x240で出荷しております。換装時に注意してください。
- NOTE
1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
  2. USE M12 BOLTS FOR FIXING THE UNIT.
  3. MAKE A HOLE φ25-30 IN MOUNTING BASE FOR CABLE ENTRY.
  4. NOTE FOR REPLACEMENT: FIXING HOLE DIMENSIONS ARE CHANGED FROM 240x240 OF PREVIOUS SETS TO 200x200.

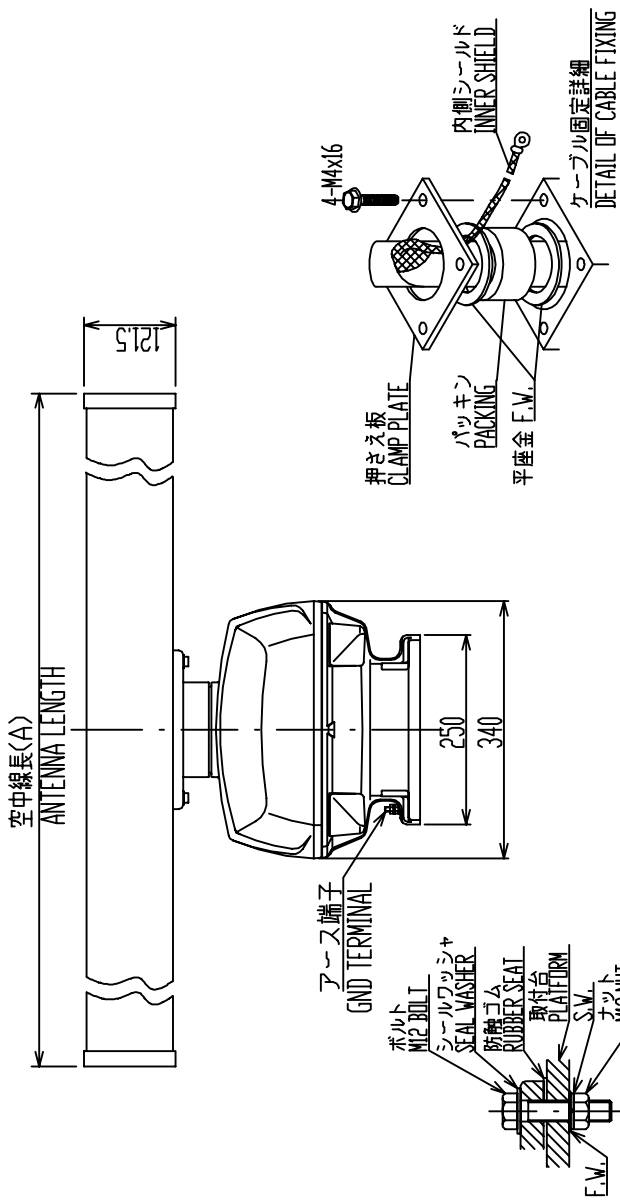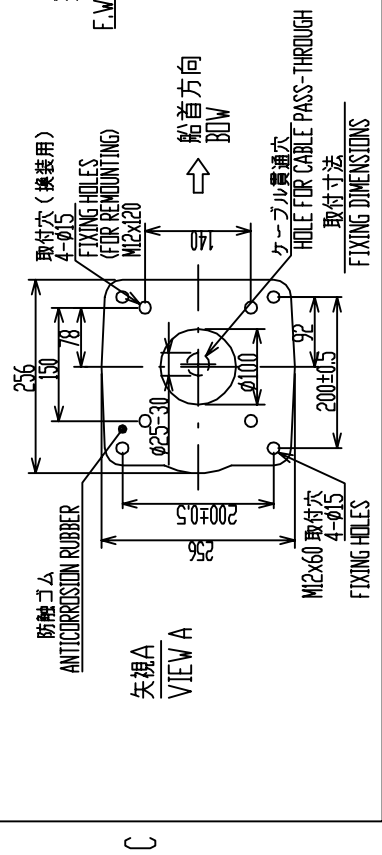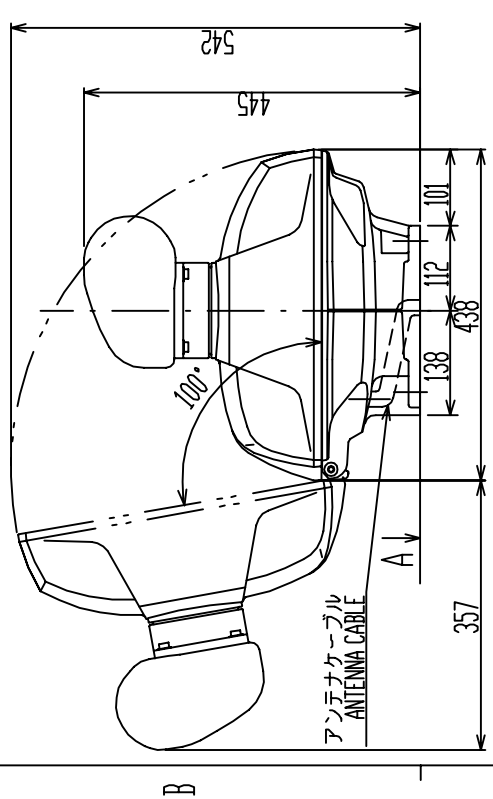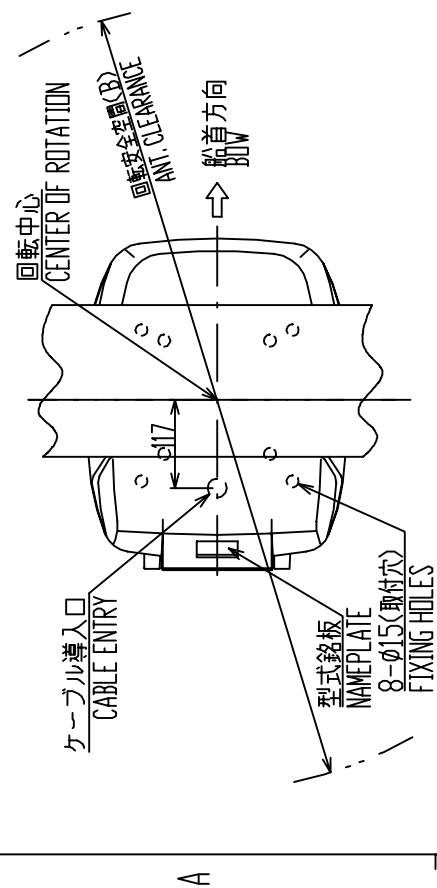

DRAWN	Apr. 4 '05	E. MIYOSHI	MODEL 1964C/1964C-3B	TITLE	RSB-0070/0072/0073 (XN12A/13A)
CHECKED		TAKAHASHI, T	FR-701R-1P	名称	空中線部
APPROVED		Y. Hatai	FR-7AS-100C	外寸図	
SCALE	1/10	質量表2を参照 SEE TABLE 2	MODEL 1942P2 FR-706Z/711Z/725Z-ER-8X2 SERIES	NAME	ANTENNA UNIT
DWG No.	C3459-G03-F			OUTLINE DRAWING	

表 1 TABLE 1

寸法区分 (mm) DIMENSIONS	公差 (mm) TOLERANCE
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

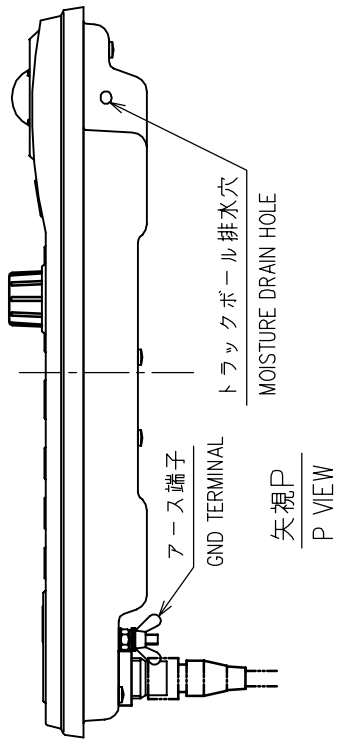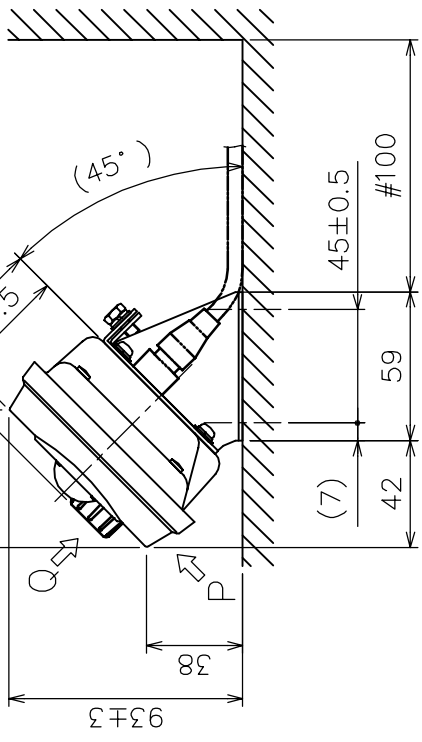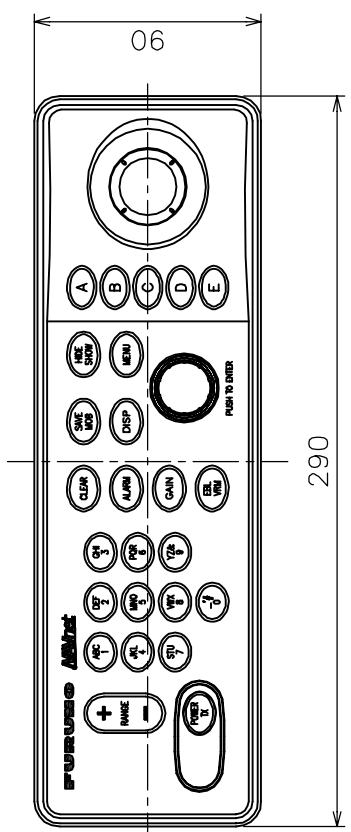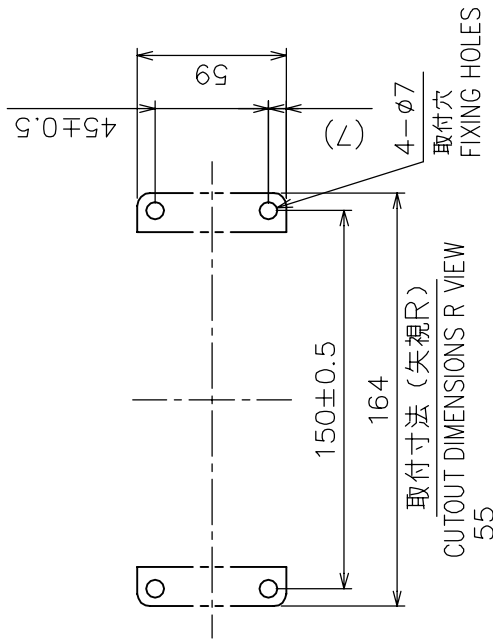

注記 1) #印寸法は最小サービス空間寸法とする。  
 2) 指定外の寸法公差は表1による。  
 3) 取付用ネジは+トラスター呼び径5 x 2.0を使用のこと。

NOTE 1. #: MINIMUM SERVICE CLEARANCE  
 2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
 3. USE 5X2.0 TAPPING SCREWS FOR FIXING THE UNIT.

DRAWN Dec. 3, '04	E. MIYOSHI	TITLE RCU-017
CHECKED	TAKAHASHI, T	名称 操作部 (卓上装備)
APPROVED	Y. Hatai	外寸図
SCALE 1/3	MASS: 1.0 ± 10% kg	NAME CONTROL UNIT (TABLETOP MOUNT)
DWG No. C3532-G01-C	19-023-110G-3	OUTLINE DRAWING

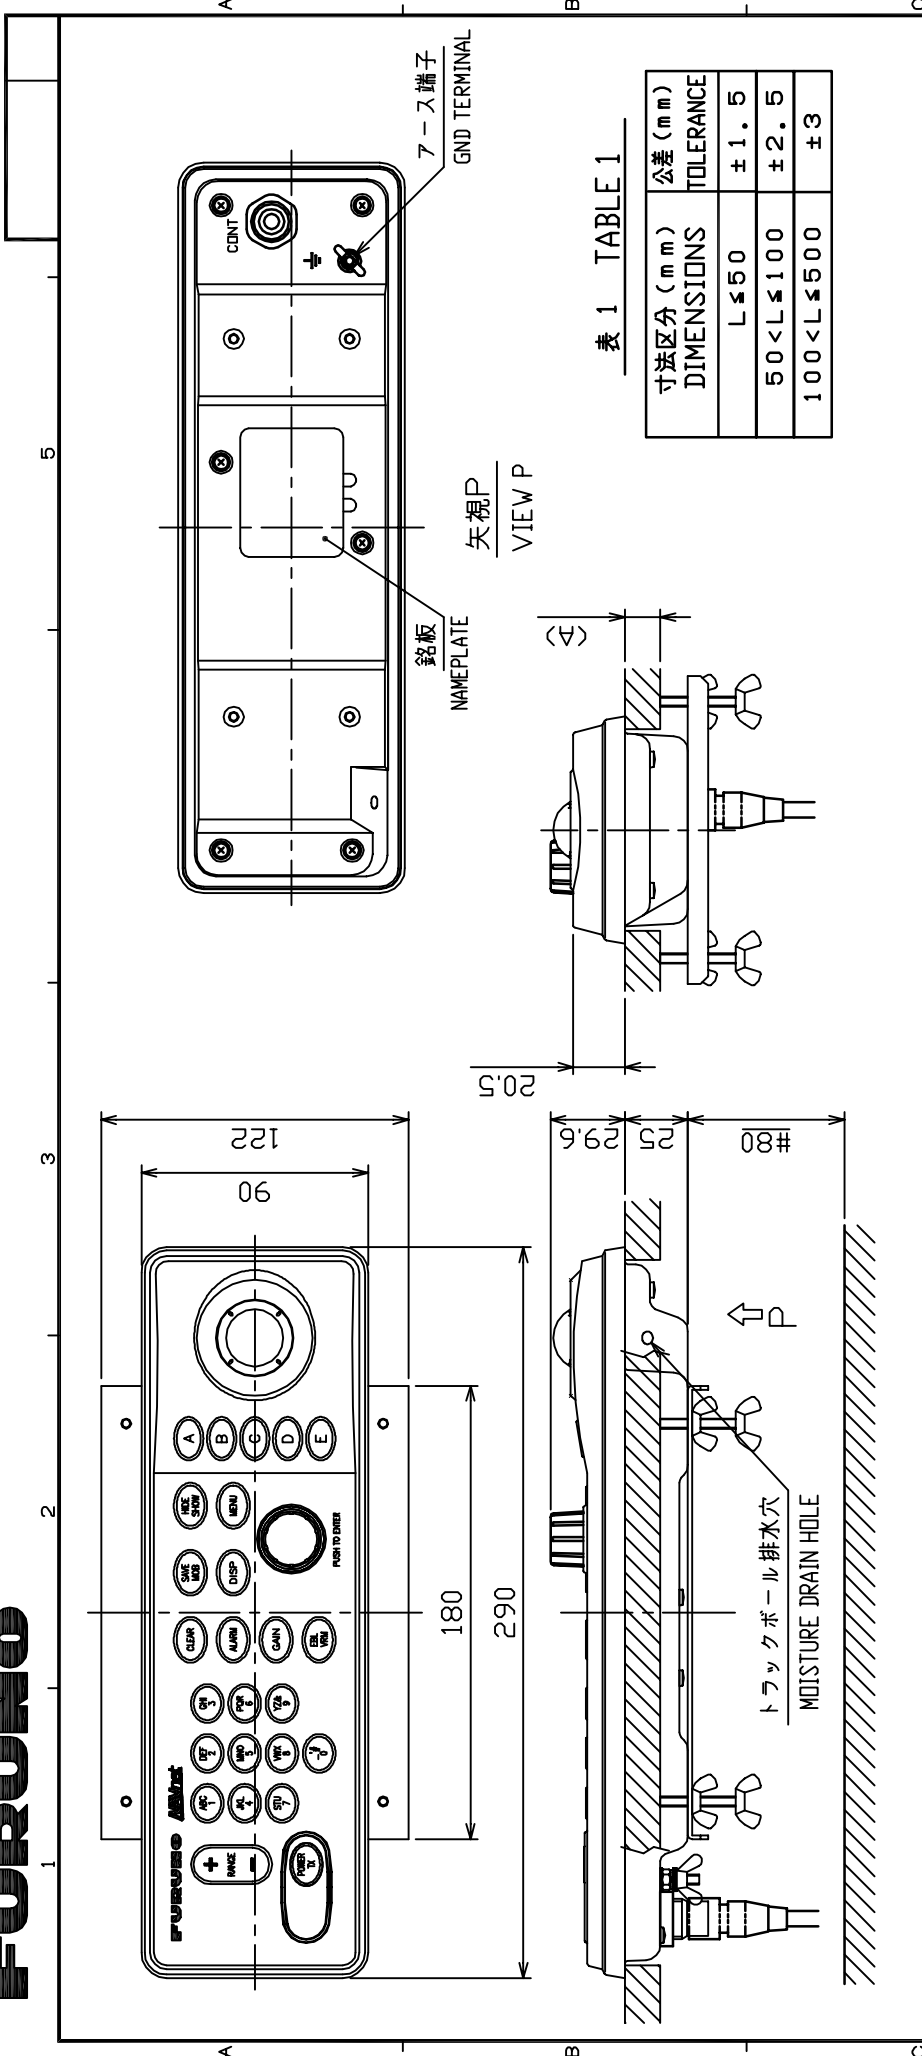


表 1 TABLE 1

寸法区分 (mm) DIMENSIONS	公差 (mm) TOLERANCE
$L \leq 50$	$\pm 1.5$
$50 < L \leq 100$	$\pm 2.5$
$100 < L \leq 500$	$\pm 3$

注 記 1) #印寸法は最小サージ空間寸法とする。  
 2) 指定外の寸法公差は表 1 による。  
 3) 壁の厚さ (A) は最小 1.0 最大 2.0 とする。

NOTE 1. # MINIMUM SERVICE CLEARANCE.  
 2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
 3. THICKNESS (A) OF PANEL IS 10-20 MM.

DRAWN Jpn. 12.05	E. MIYOSHI	TITLE RCU-017
CHECKED TAKAHASHI, T	MODEL 1920C-BB MODEL 1934C-BB/1944C-BB/1954C-BB	名称 操作部 (埋込装備)
APPROVED Y. Hatai	MODEL 1824C-BB/1834C-BB MODEL 1833C-BB SERIES	外寸図
SCALE 1/3	MASS 0.9 ±10% kg	NAME CONTROL UNIT (FLUSH MOUNT)
FIG No. C3532-G02-C	19-023-100G-3	OUTLINE DRAWING


取付穴寸法図  
CUTOUT DIMENSIONS



FURUNO

表 1 TABLE 1

寸法区分 (mm) DIMENSIONS	公差 (mm) TOLERANCE
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

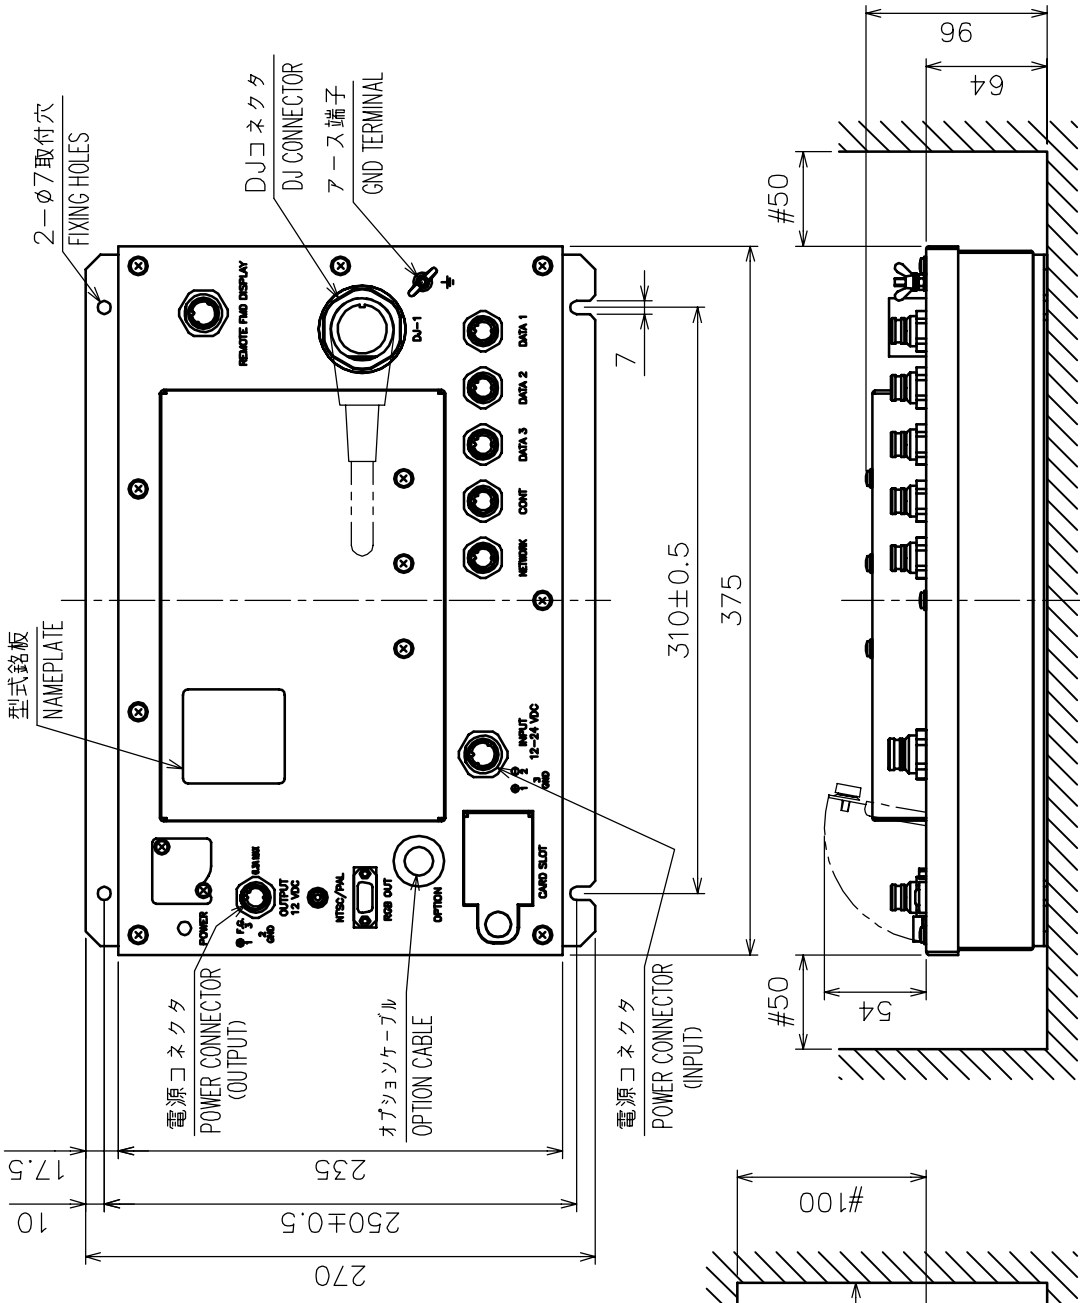

DRAWN	Jan. 12, '05	E. MIYOSHI	TITLE	RPU-015
CHECKED	TAKAHASHI, T	GO-1920C-BB	名称	制御部 (卓上装備)
APPROVED	Y. Hatai	MODEL 1034C-BB/1044C-BB/1054C-BB	外寸図	
SCALE	1/4	MASS 4.1 ±10%	NAME	PROCESSOR UNIT (TABLETOP MOUNT)
DWG No.	C3550-G01-A	19-025-300G-0	OUTLINE DRAWING	

- 注記 1) #印寸法は最小サービスクリアランスとする。  
 2) 指定外の寸法公差は表1による。  
 3) 取付用ネジはトラスタップピンネジ呼び径5×20を使用のこと。
- NOTE 1. # MINIMUM SERVICE CLEARANCE.  
 2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
 3. USE SELF-TAPPING SCREWS 5x20 FOR FIXING THE UNIT.

FURUNO ELECTRIC CO., LTD.

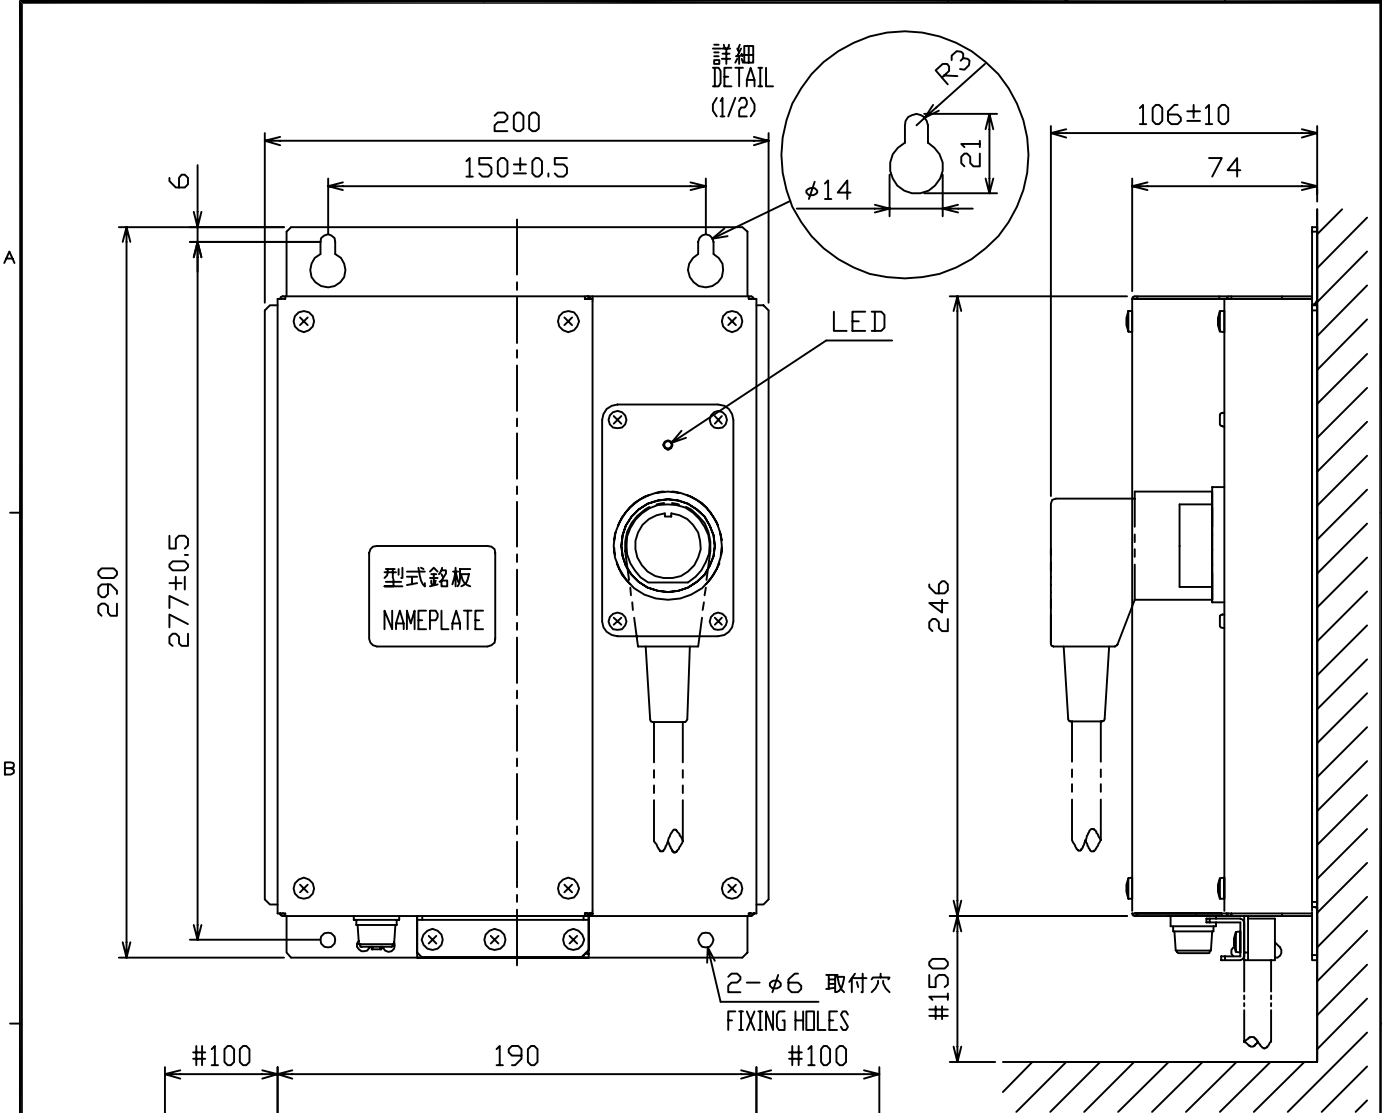


表 1 TABLE 1

寸法区分 (mm) DIMENSIONS	公差 (mm) TOLERANCE
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

- 注 記 1) #印寸法は最小サービス空間寸法とする。  
 2) 指定外の寸法公差は表 1 による。  
 3) 取付用ネジは+トラスタップピンネジ呼び径4×16を使用のこと。




- NOTE 1. # MINIMUM SERVICE CLEARANCE.  
 2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
 3. USE SELF-TAPPING SCREWS 4x16 FOR FIXING THE UNIT.

DRAWN Dec. 8, '02	E. MIYOSHI		TITLE PSU-005
CHECKED	TAKAHASHI, T	MODEL 1954C-BB	名称 電源部
APPROVED	Y. Hatai	MODEL 1954C MODEL 1953C	外寸図
SCALE 1/3	MASS 1.9 ±10% kg		NAME POWER SUPPLY UNIT
DWG.No. C3512-G01-B		19-022-200G-2	OUTLINE DRAWING

**FURUNO**

表 1 TABLE 1

寸法区分 (mm) DIMENSIONS	公差 (mm) TOLERANCE
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

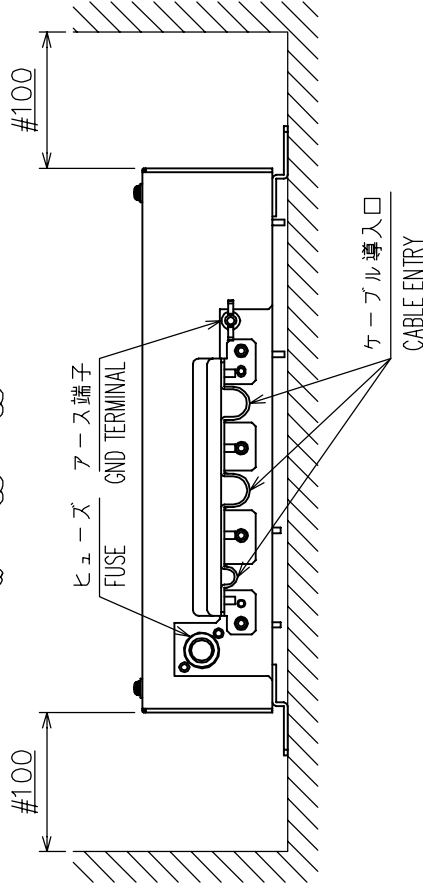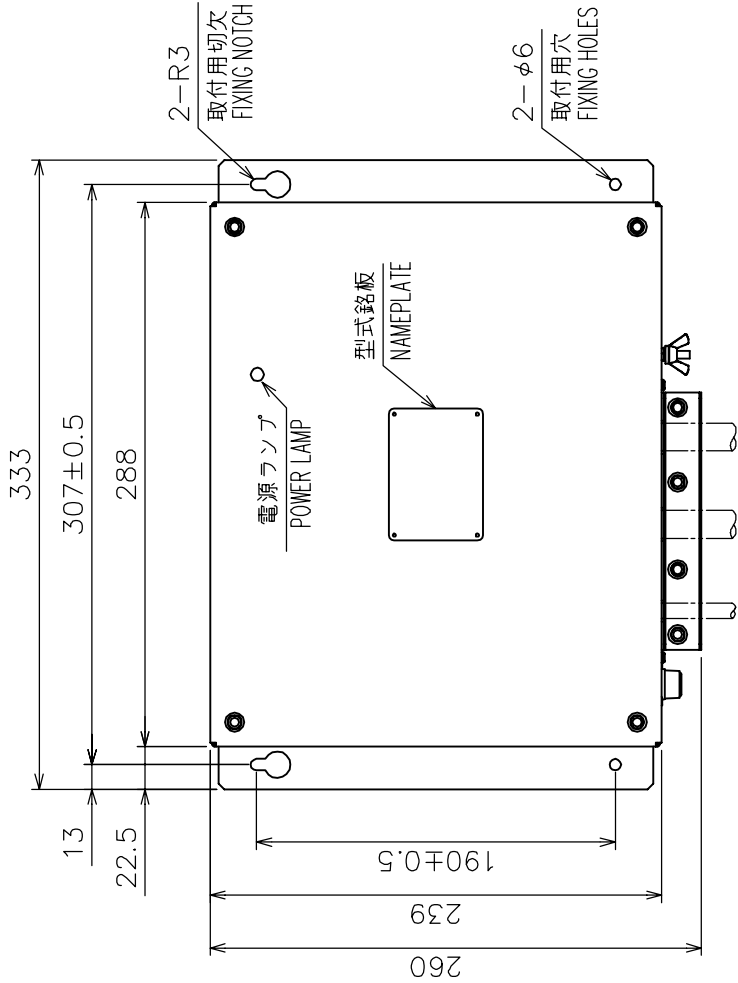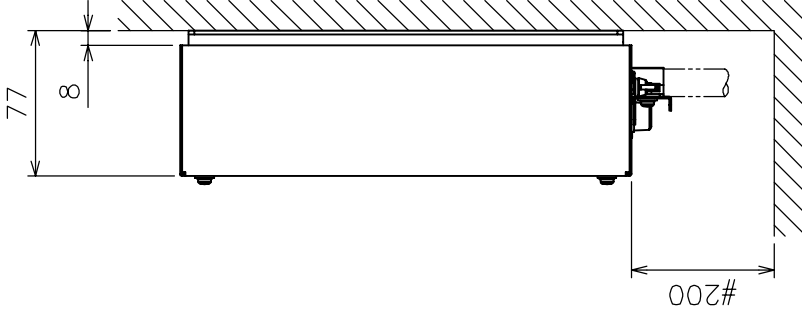

注 記

- 1) #印寸法は最小サービス空間寸法とする。
- 2) 指定外の寸法公差は表1による。
- 3) 取付用ネジはトラスタップピンゲネジ呼び径5×20を使用のこと。

NOTE

1. # MINIMUM SERVICE CLEARANCE.
2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
3. USE SELF-TAPPING SCREWS 5x20 FOR FIXING THE UNIT.





DRAWN	Apr. 8, '05	E. MIYOSHI	TITLE	PSU-008
CHECKED		TAKAHASHI, T	名称	空中線電源部
APPROVED		Y. Hatai	外寸図	
SCALE	1/4	MASS 2.7 kg	NAME	POWER SUPPLY UNIT
DWG.No.	C3548-601-A	19-025-400G-0		OUTLINE DRAWING

**FURUNO ELECTRIC CO., LTD.**

**FURUNO**

表 1 TABLE 1

寸法区分 (mm) DIMENSIONS	公差 (mm) TOLERANCE
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

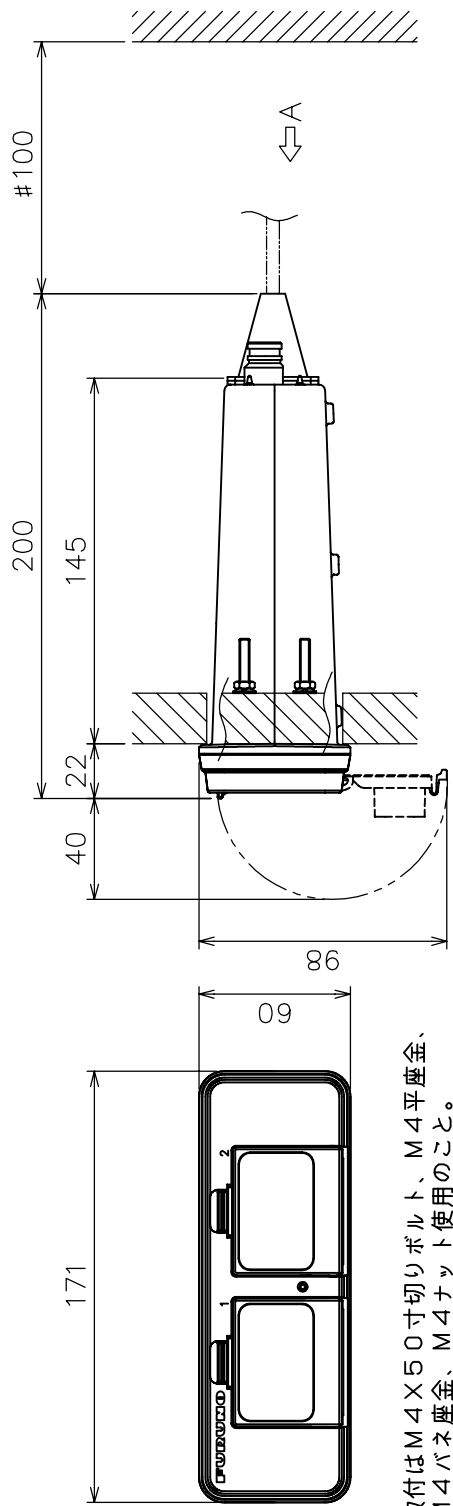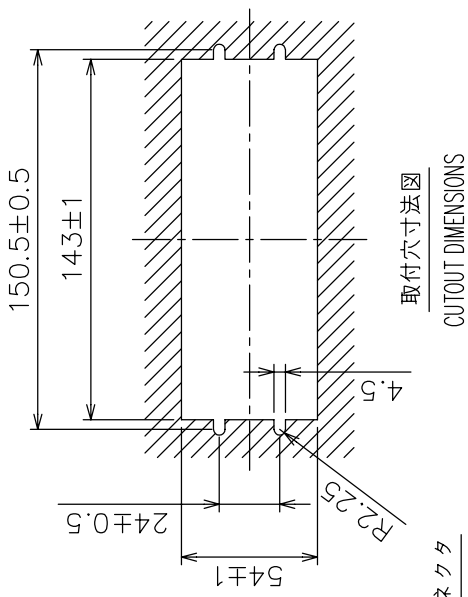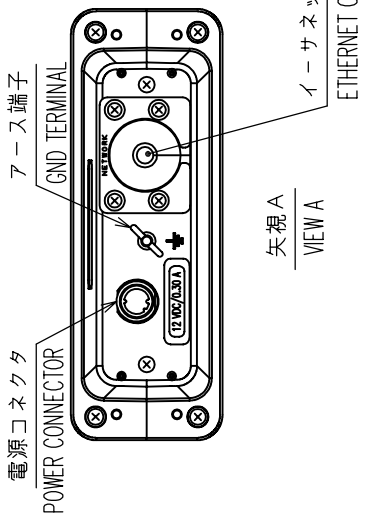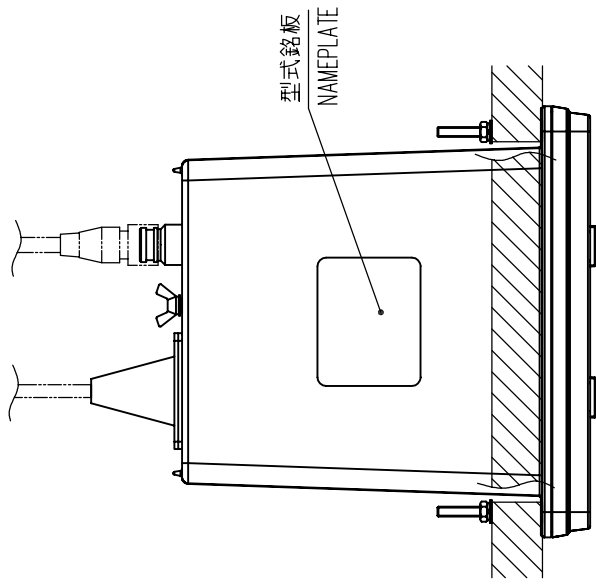

- 注 記
- 1) 取付は M4X50 寸切りボルト、M4 平座金、M4 バネ座金、M4 ナット 使用のこと。
  - 2) # 印寸法は最小サービスクリアランスとする。
  - 3) 指定外の寸法公差は表 1 による。
- NOTE
1. USE M4X50 BOLTS, M4 FLAT WASHERS, M4 SPRING WASHERS AND M4 NUTS FOR FIXING.
  2. # MINIMUM SERVICE CLEARANCE.
  3. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.

DRAWN	Mar. 29 '04 E. MIYOSHI	FAR-2117 SERIES	TITLE	CU-200
CHECKED	TAKAHASHI, T	MODEL 1833C	名称	防水型カードインターフェース(埋込装備)
APPROVED	Y. Hatai	MODEL 1833C-BB	外寸図	
SCALE	1/3	1/3	NAME	MEMORY CARD INTERFACE UNIT (FLUSH MOUNT)
DWG.No.	C3532-004-B	19-023-300G-1		OUTLINE DRAWING


**FURUNO ELECTRIC CO., LTD.**

**FURUNO**

表 1 TABLE 1

寸法区分 (mm) DIMENSIONS	公差 (mm) TOLERANCE
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3


4-φ6 取付穴  
FIXING HOLES

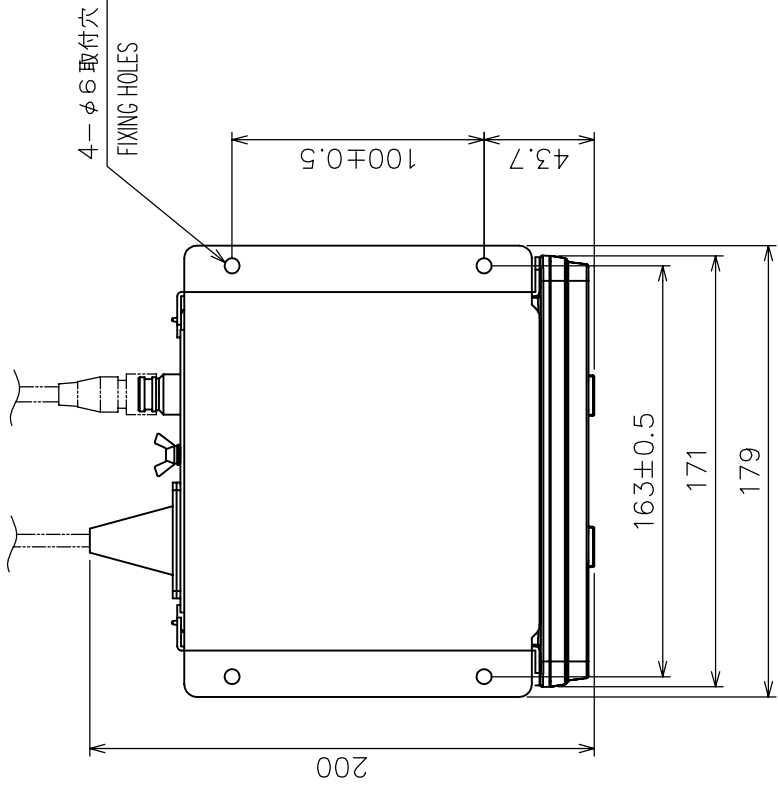



電源コネクタ  
POWER CONNECTOR

アース端子  
GND TERMINAL

イーサネットコネクタ  
ETHERNET CONNECTOR

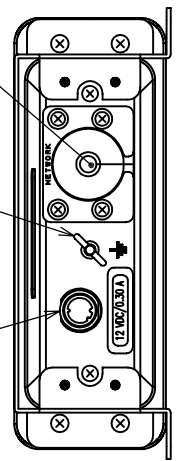


矢視 A  
VIEW A

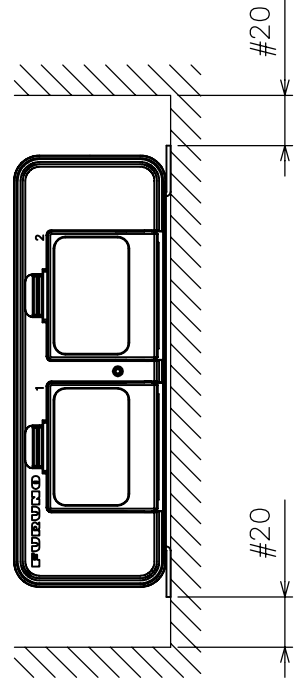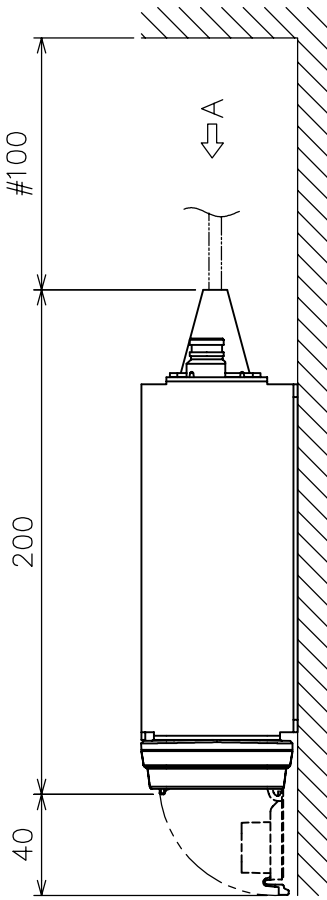

- 注 記
- # 印寸法は最小サービスクリアランスとする。
  - 指定外の寸法公差は表 1 による。
  - 取付用ネジは + トラスタップピンネジ呼び径 5 × 2.0 を使用のこと。
- NOTE
- # MINIMUM SERVICE CLEARANCE.
  - TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
  - USE SELF-TAPPING SCREWS 5X2.0 FOR FIXING THE UNIT.

DRAWN	Mar. 29 '04	E. MIYOSHI	FAR-2117 SERIES	TITLE	CU-200
CHECKED		TAKAHASHI, T	MODEL 1833C	名 称	防水型カードインターフェイス(卓上装備)
APPROVED		Y. Hatai	MODEL 1833C-BB		外寸図
SCALE	1/3	1/MS	1.3	NAME	MEMORY CARD INTERFACE UNIT (TABLETOP MOUNT)
DWG. No.	C3532-005-B		19-023-310G-1		OUTLINE DRAWING


**FURUNO ELECTRIC CO., LTD.**

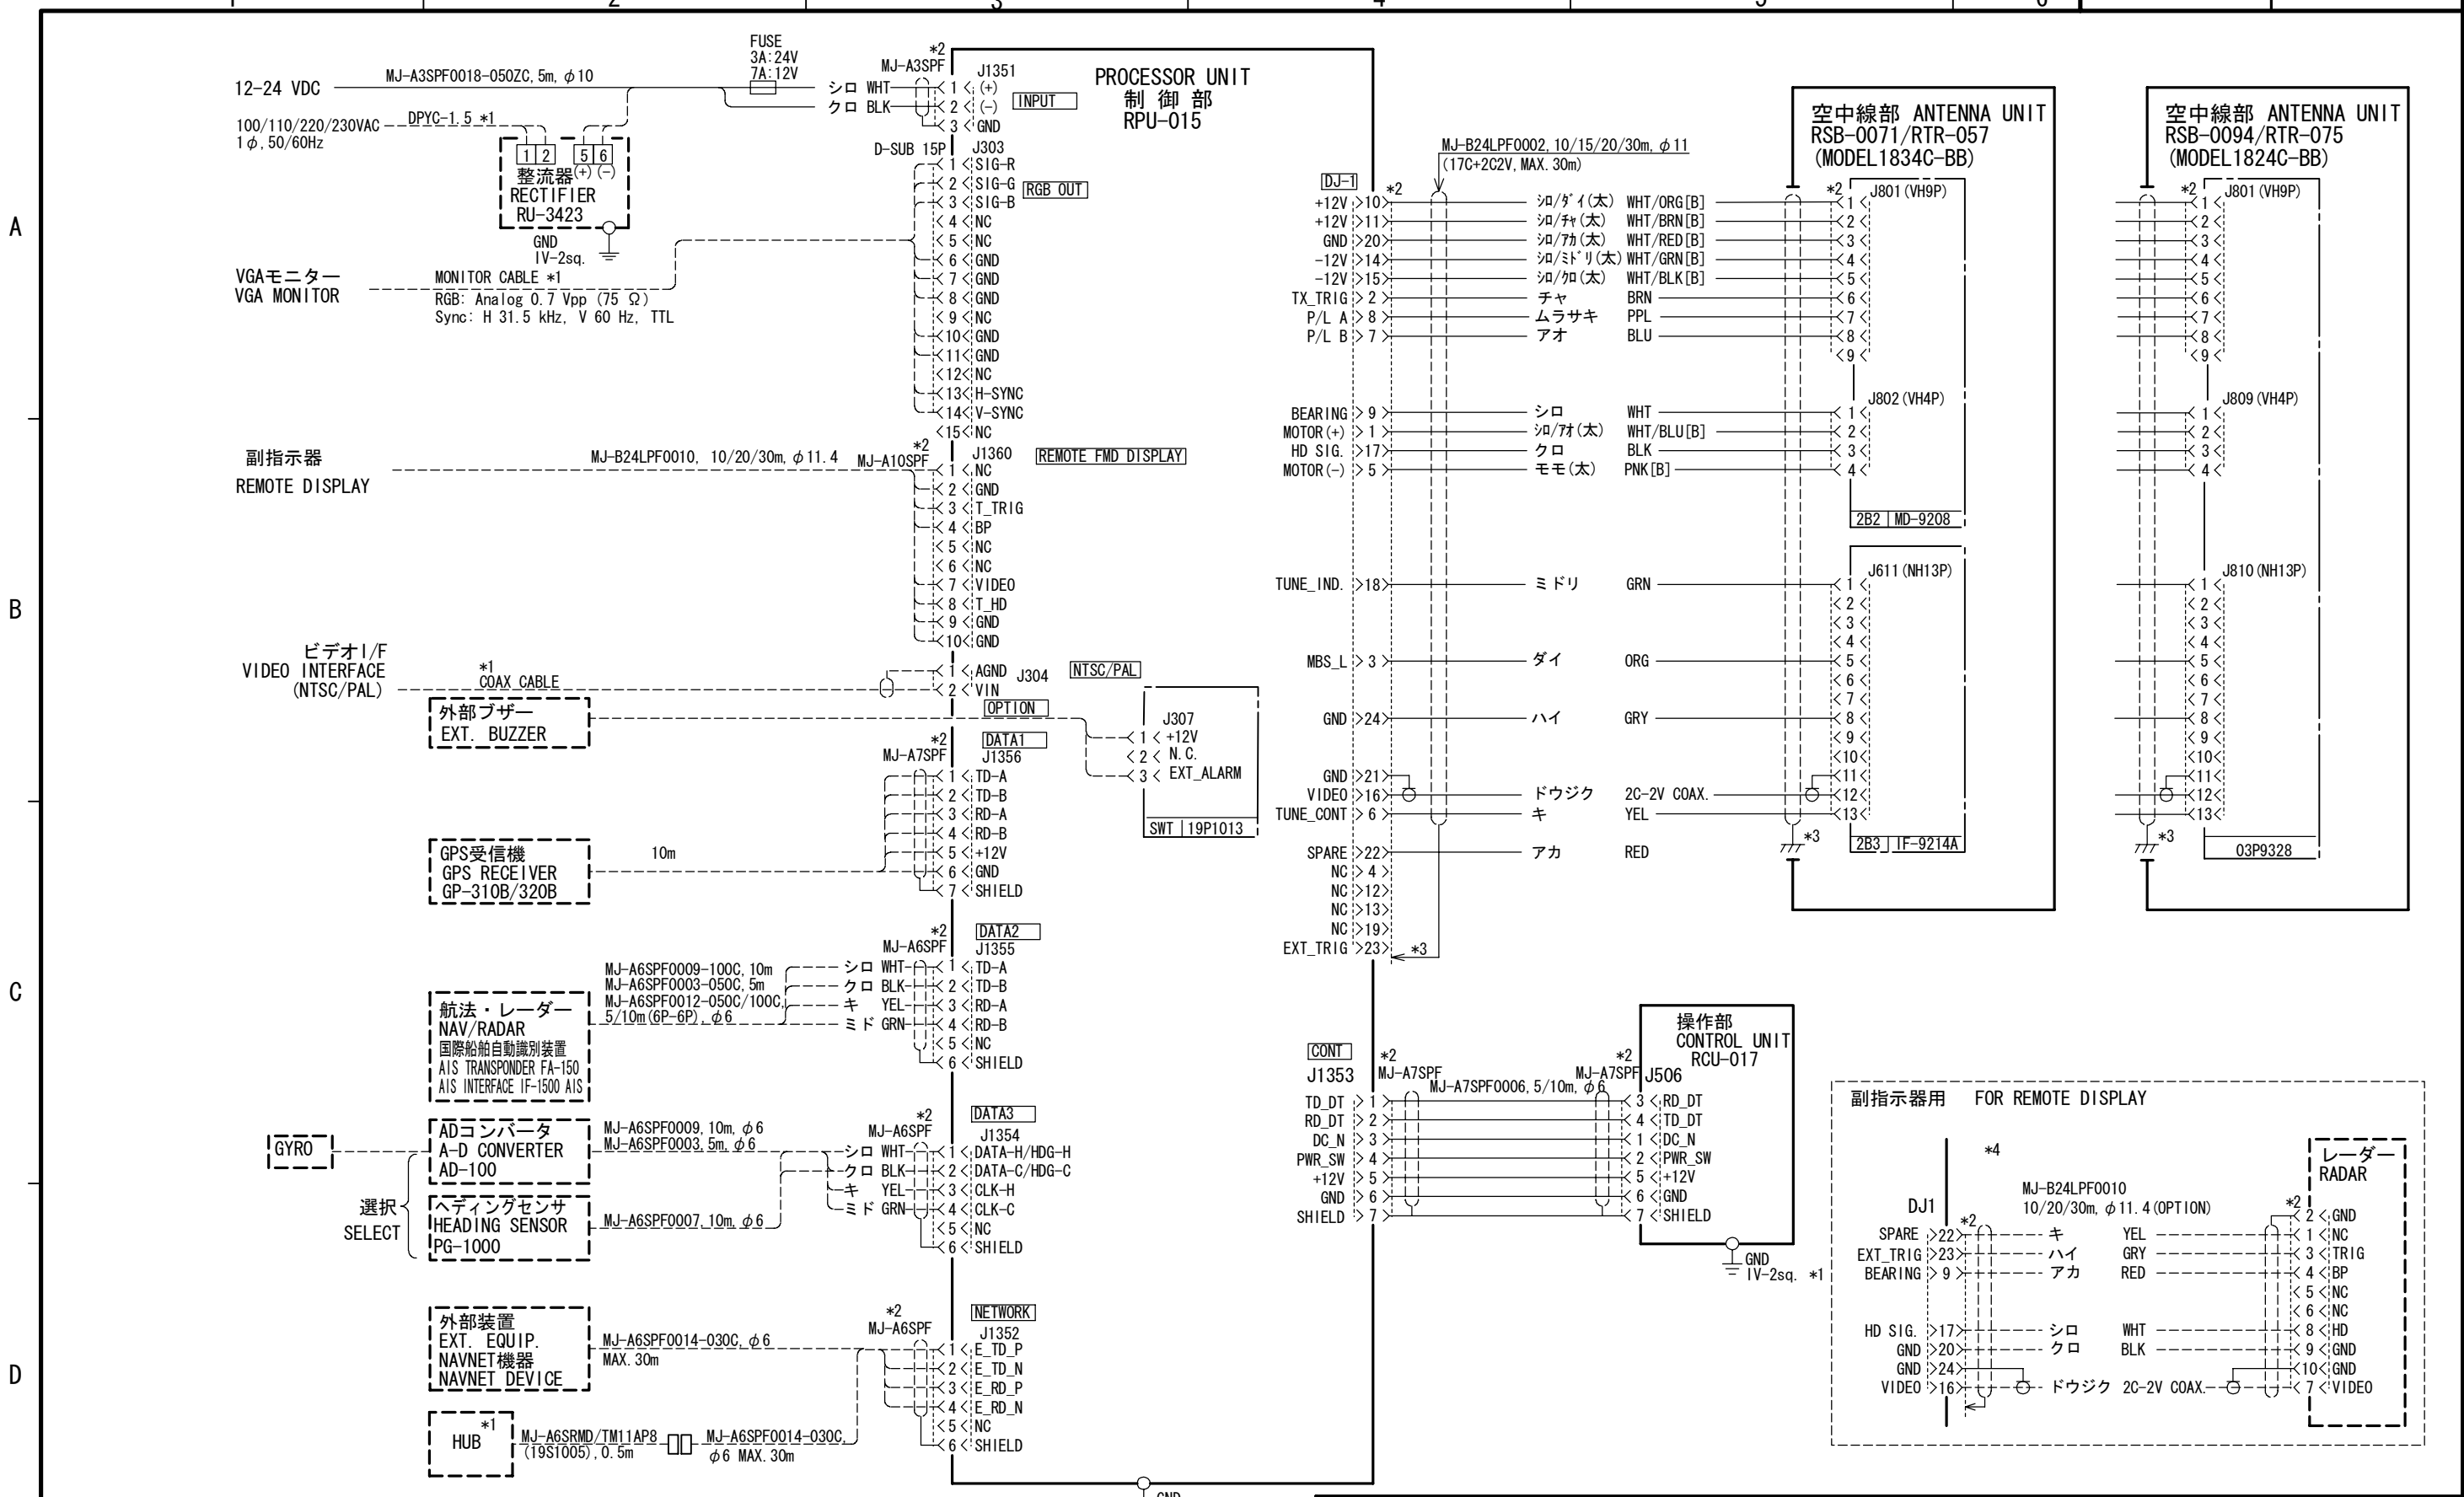

A  
B  
C  
D

- 注記**
- \*1) 造船所手配
  - \*2) コネクタは工場にて取付済み
  - \*3) シールドは両ユニット側で完全に接地すること。
  - \*4) 副指示器として使用する場合は、制御部の内部設定を変更する。
- NOTE**
- \*1. SHIPYARD SUPPLY
  - \*2. CONNECTOR PLUG FITTED AT FACTORY
  - \*3. SHIELD SHOULD BE EFFECTIVELY GROUNDED AT BOTH UNIT ENDS.
  - \*4. CHANGE SETTING IN PROCESSOR UNIT FOR USING AS A REMOTE DISPLAY.

DRAWN Jan. 30, '06 E. MIYOSHI	CHECKED TAKAHASHI, T	APPROVED Y. Hatai	TYPE MODEL 1824C-BB/1834C-BB
SCALE MASS kg	DWG. No. C3549-C01- F		名称 船舶用レーダー
			相互結線図
			NAME MARINE RADAR
			INTERCONNECTION DIAGRAM

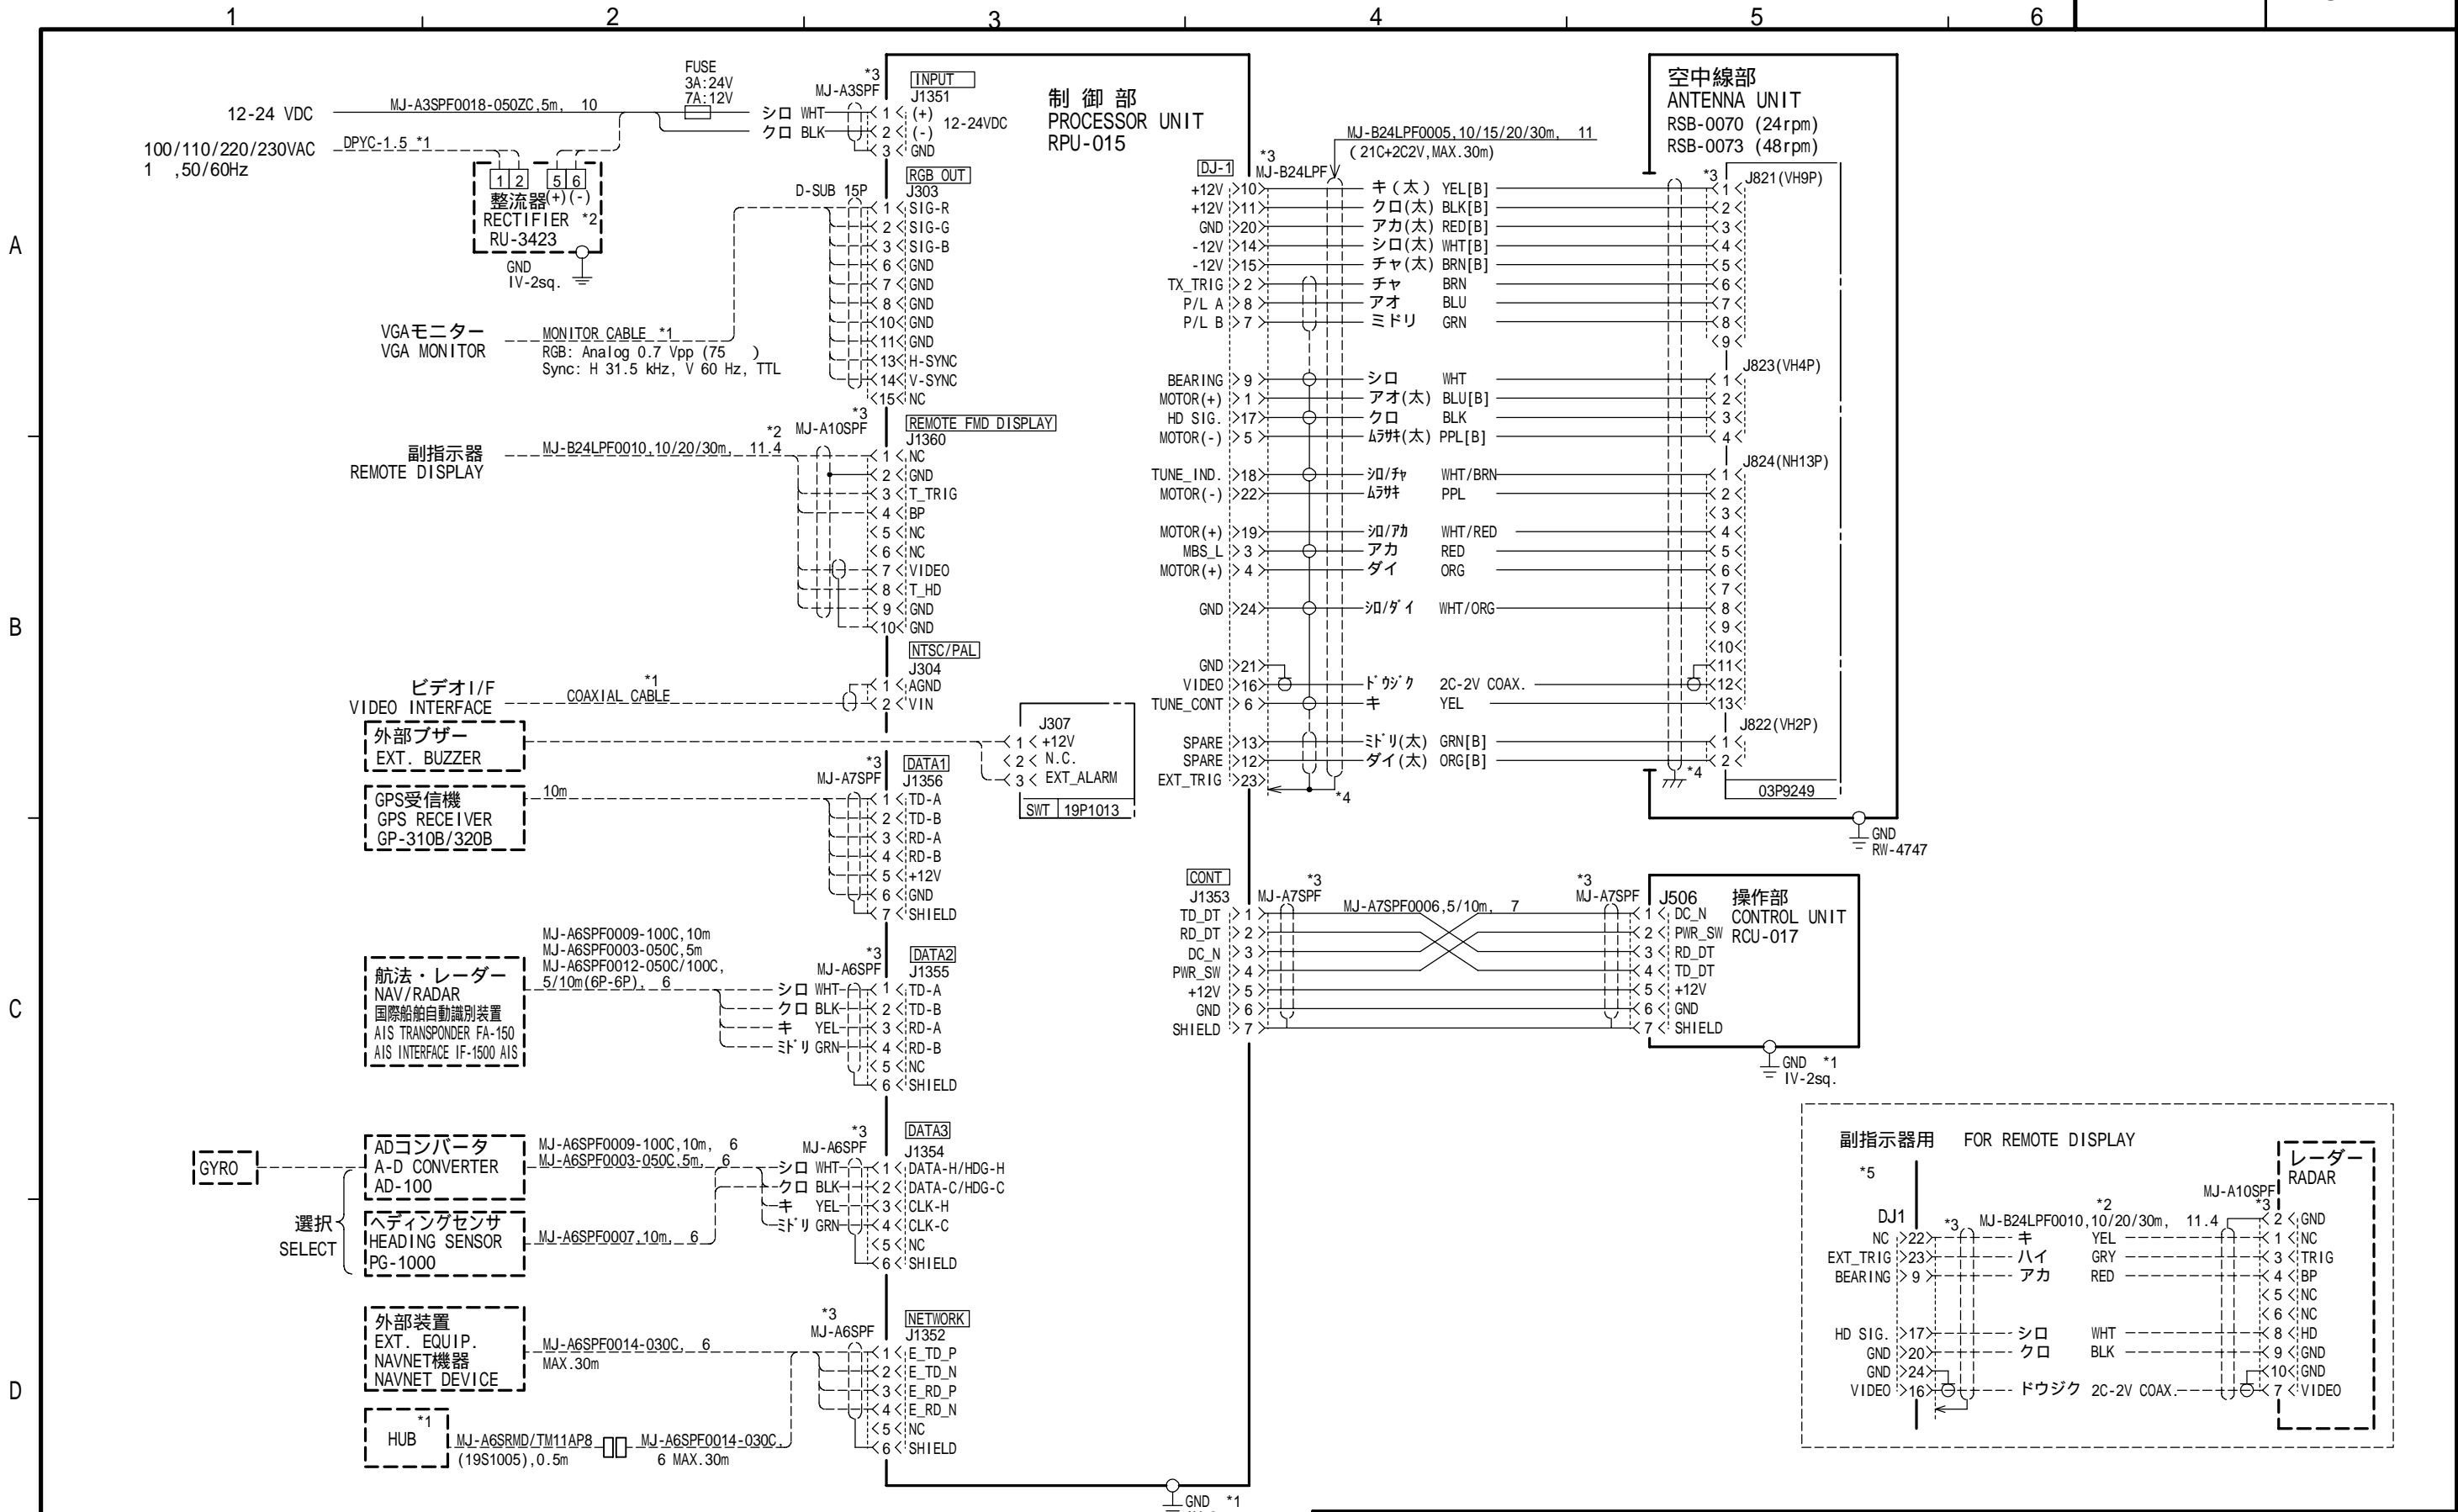


注記

- \*1) 造船所手配
- \*2) オプション
- \*3) コネクタは工場にて取付済み。
- \*4) シールドは両ユニット側で完全に接地すること。
- \*5) 副指示器として使用する場合は、制御部の内部設定を変更する。

NOTE

- \*1. SHIPYARD SUPPLY
- \*2. OPTION
- \*3. CONNECTOR PLUG FITTED AT FACTORY.
- \*4. SHIELD SHOULD BE EFFECTIVELY GROUNDED AT BOTH UNIT ENDS.
- \*5. CHANGE SETTING IN PROCESSOR UNIT FOR USING AS A REMOTE DISPLAY.

DRAWN Oct. 24, '05 E. MIYOSHI	CHECKED TAKAHASHI.T	APPROVED Y. Hatai	TYPE MODEL 1934C-BB/1944C-BB
SCALE MASS kg	DWG. No. C3551-C01- E		名称 船舶用レーダー
			相互結線図
			NAME MARINE RADAR
			INTERCONNECTION DIAGRAM

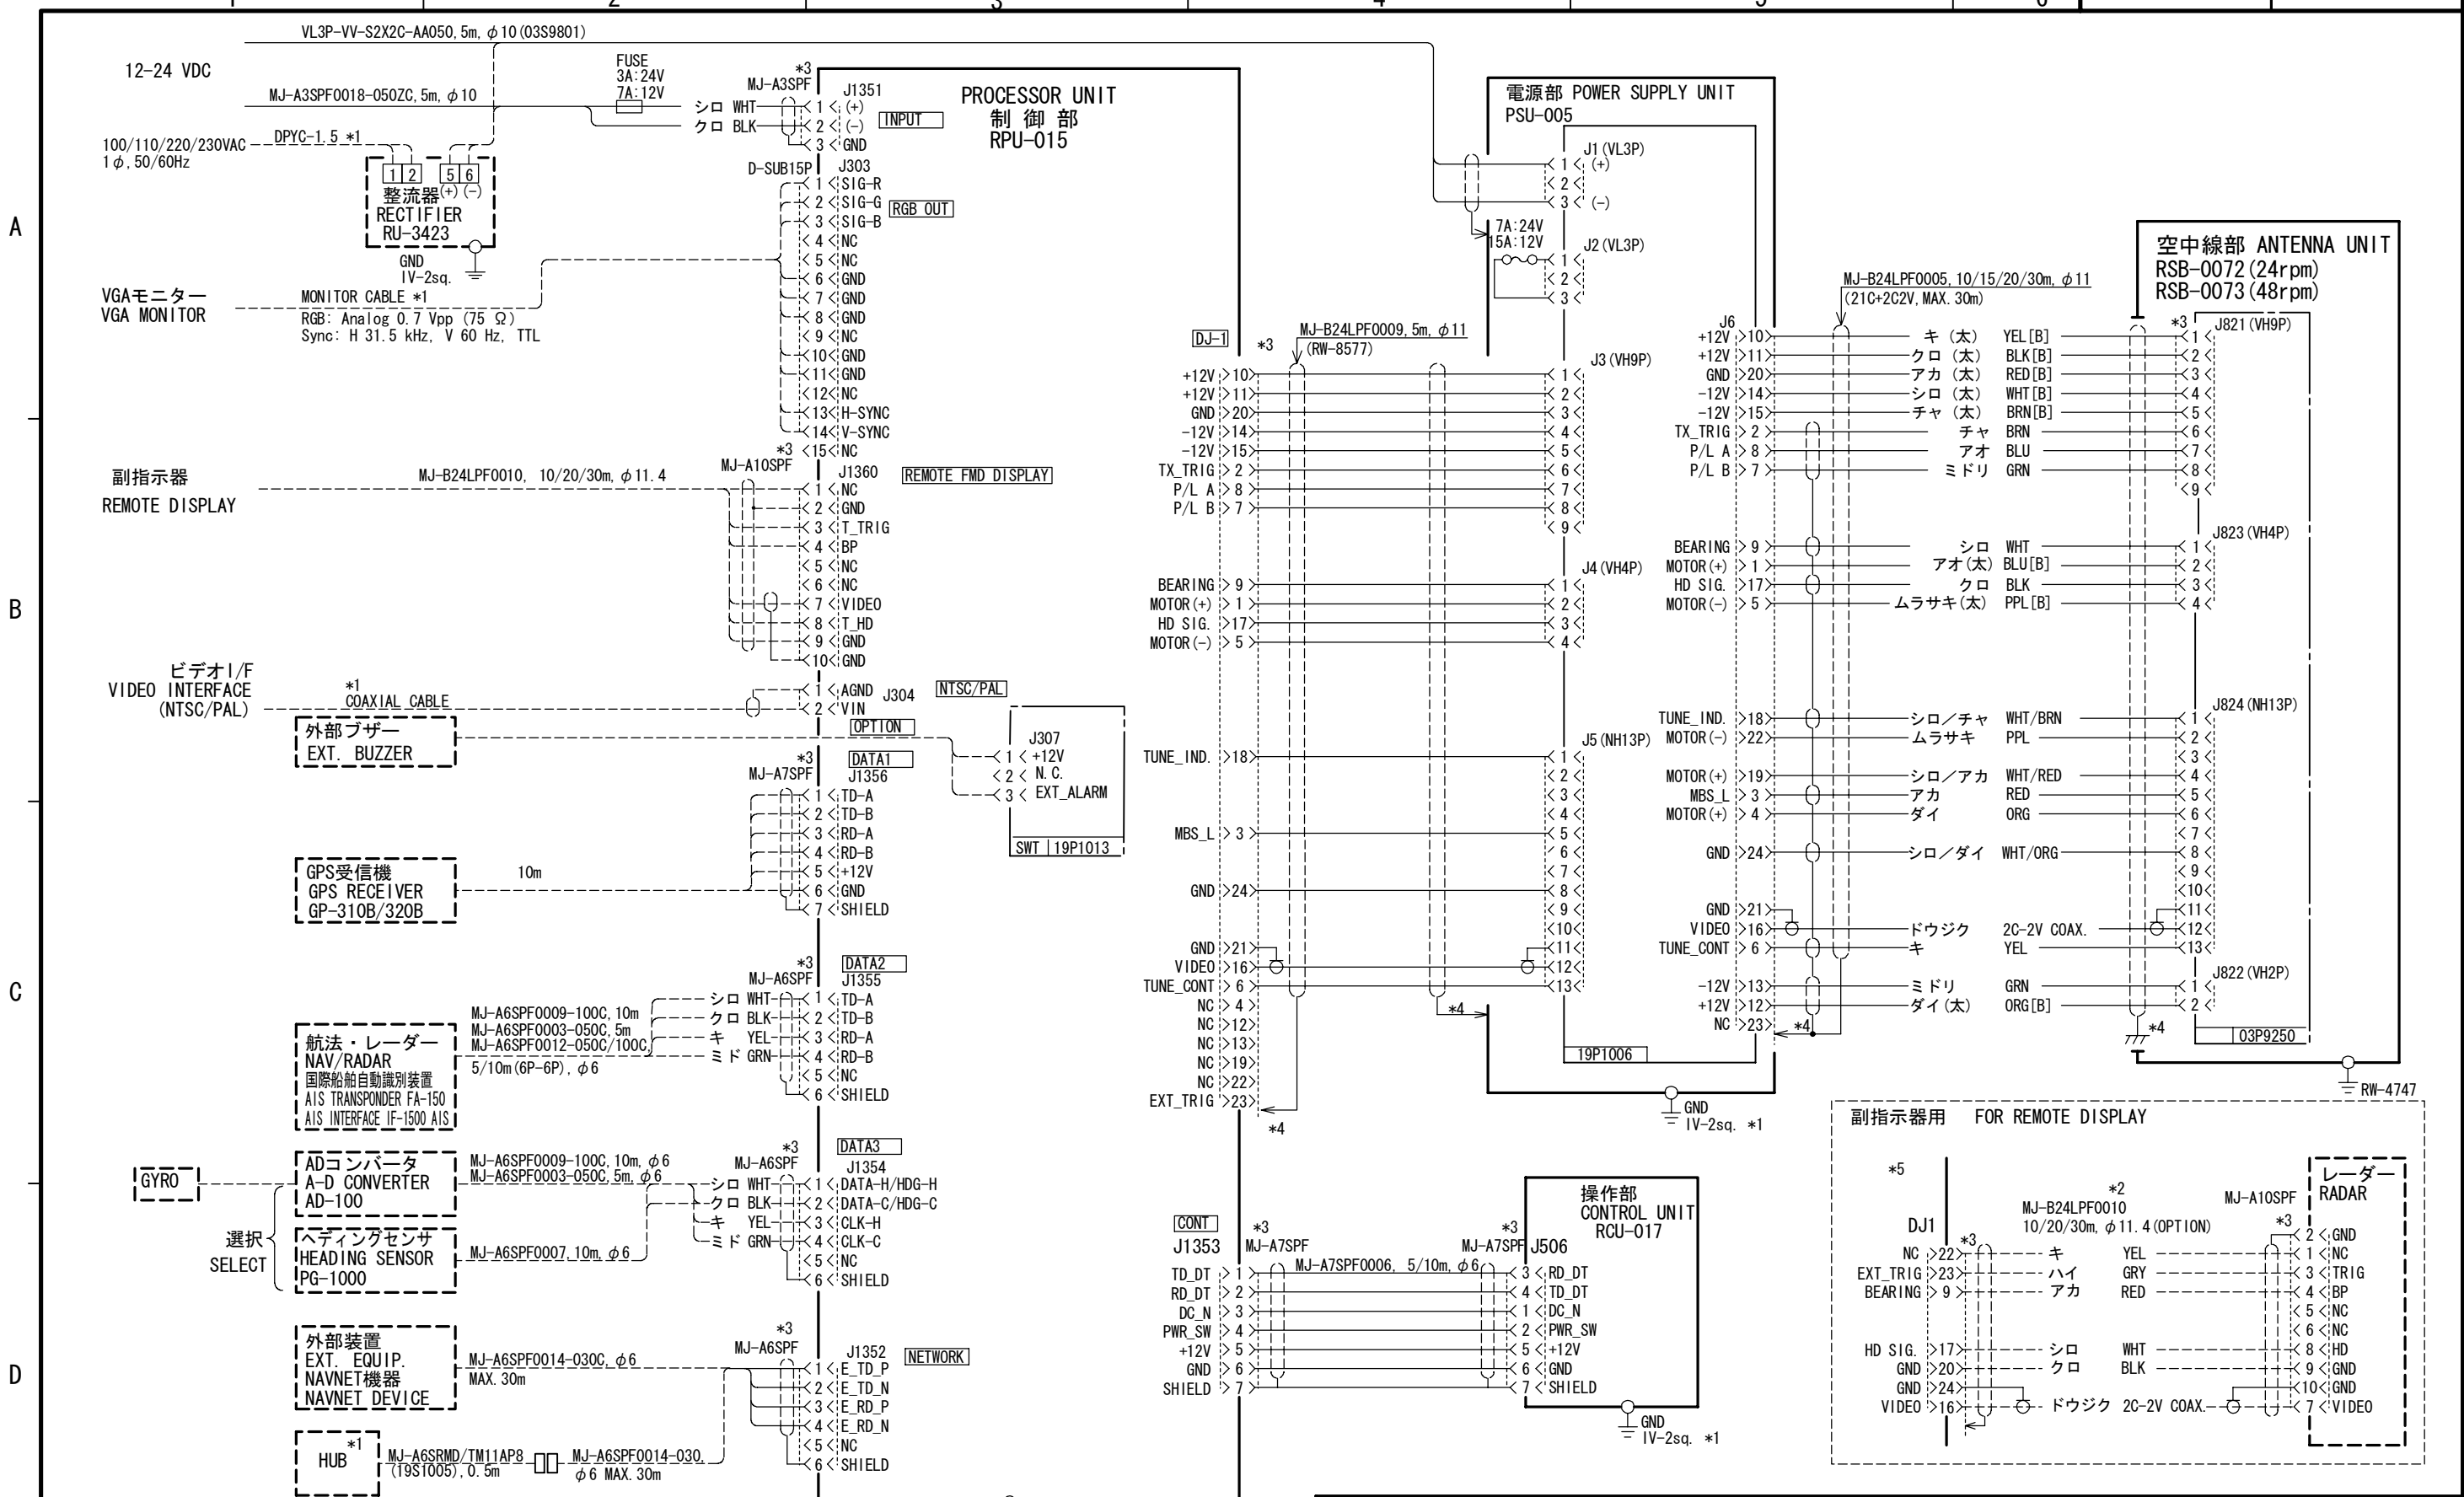


注記  
 \*1) 造船所手配  
 \*2) オプション  
 \*3) コネクタは工場にて取付済み  
 \*4) シールドは両ユニット側で完全に接地すること。  
 \*5) 副指示器として使用する場合は、制御部の内部設定を変更する。

NOTE  
 \*1. SHIPYARD SUPPLY  
 \*2. OPTION  
 \*3. CONNECTOR PLUG FITTED AT FACTORY  
 \*4. SHIELD SHOULD BE EFFECTIVELY GROUNDED AT BOTH UNIT ENDS.  
 \*5. CHANGE SETTING IN THE PROCESSOR UNIT FOR USING AS A REMOTE DISPLAY.

DRAWN Oct. 24, '05 E. MIYOSHI	CHECKED TAKAHASHI, T	APPROVED Y. Hatai	TYPE MODEL 1954C-BB
SCALE MASS kg	DWG. No. C3553-C01- F	19-025-7052-2	名称 船舶用レーダー
			相互結線図
			NAME MARINE RADAR
			INTERCONNECTION DIAGRAM




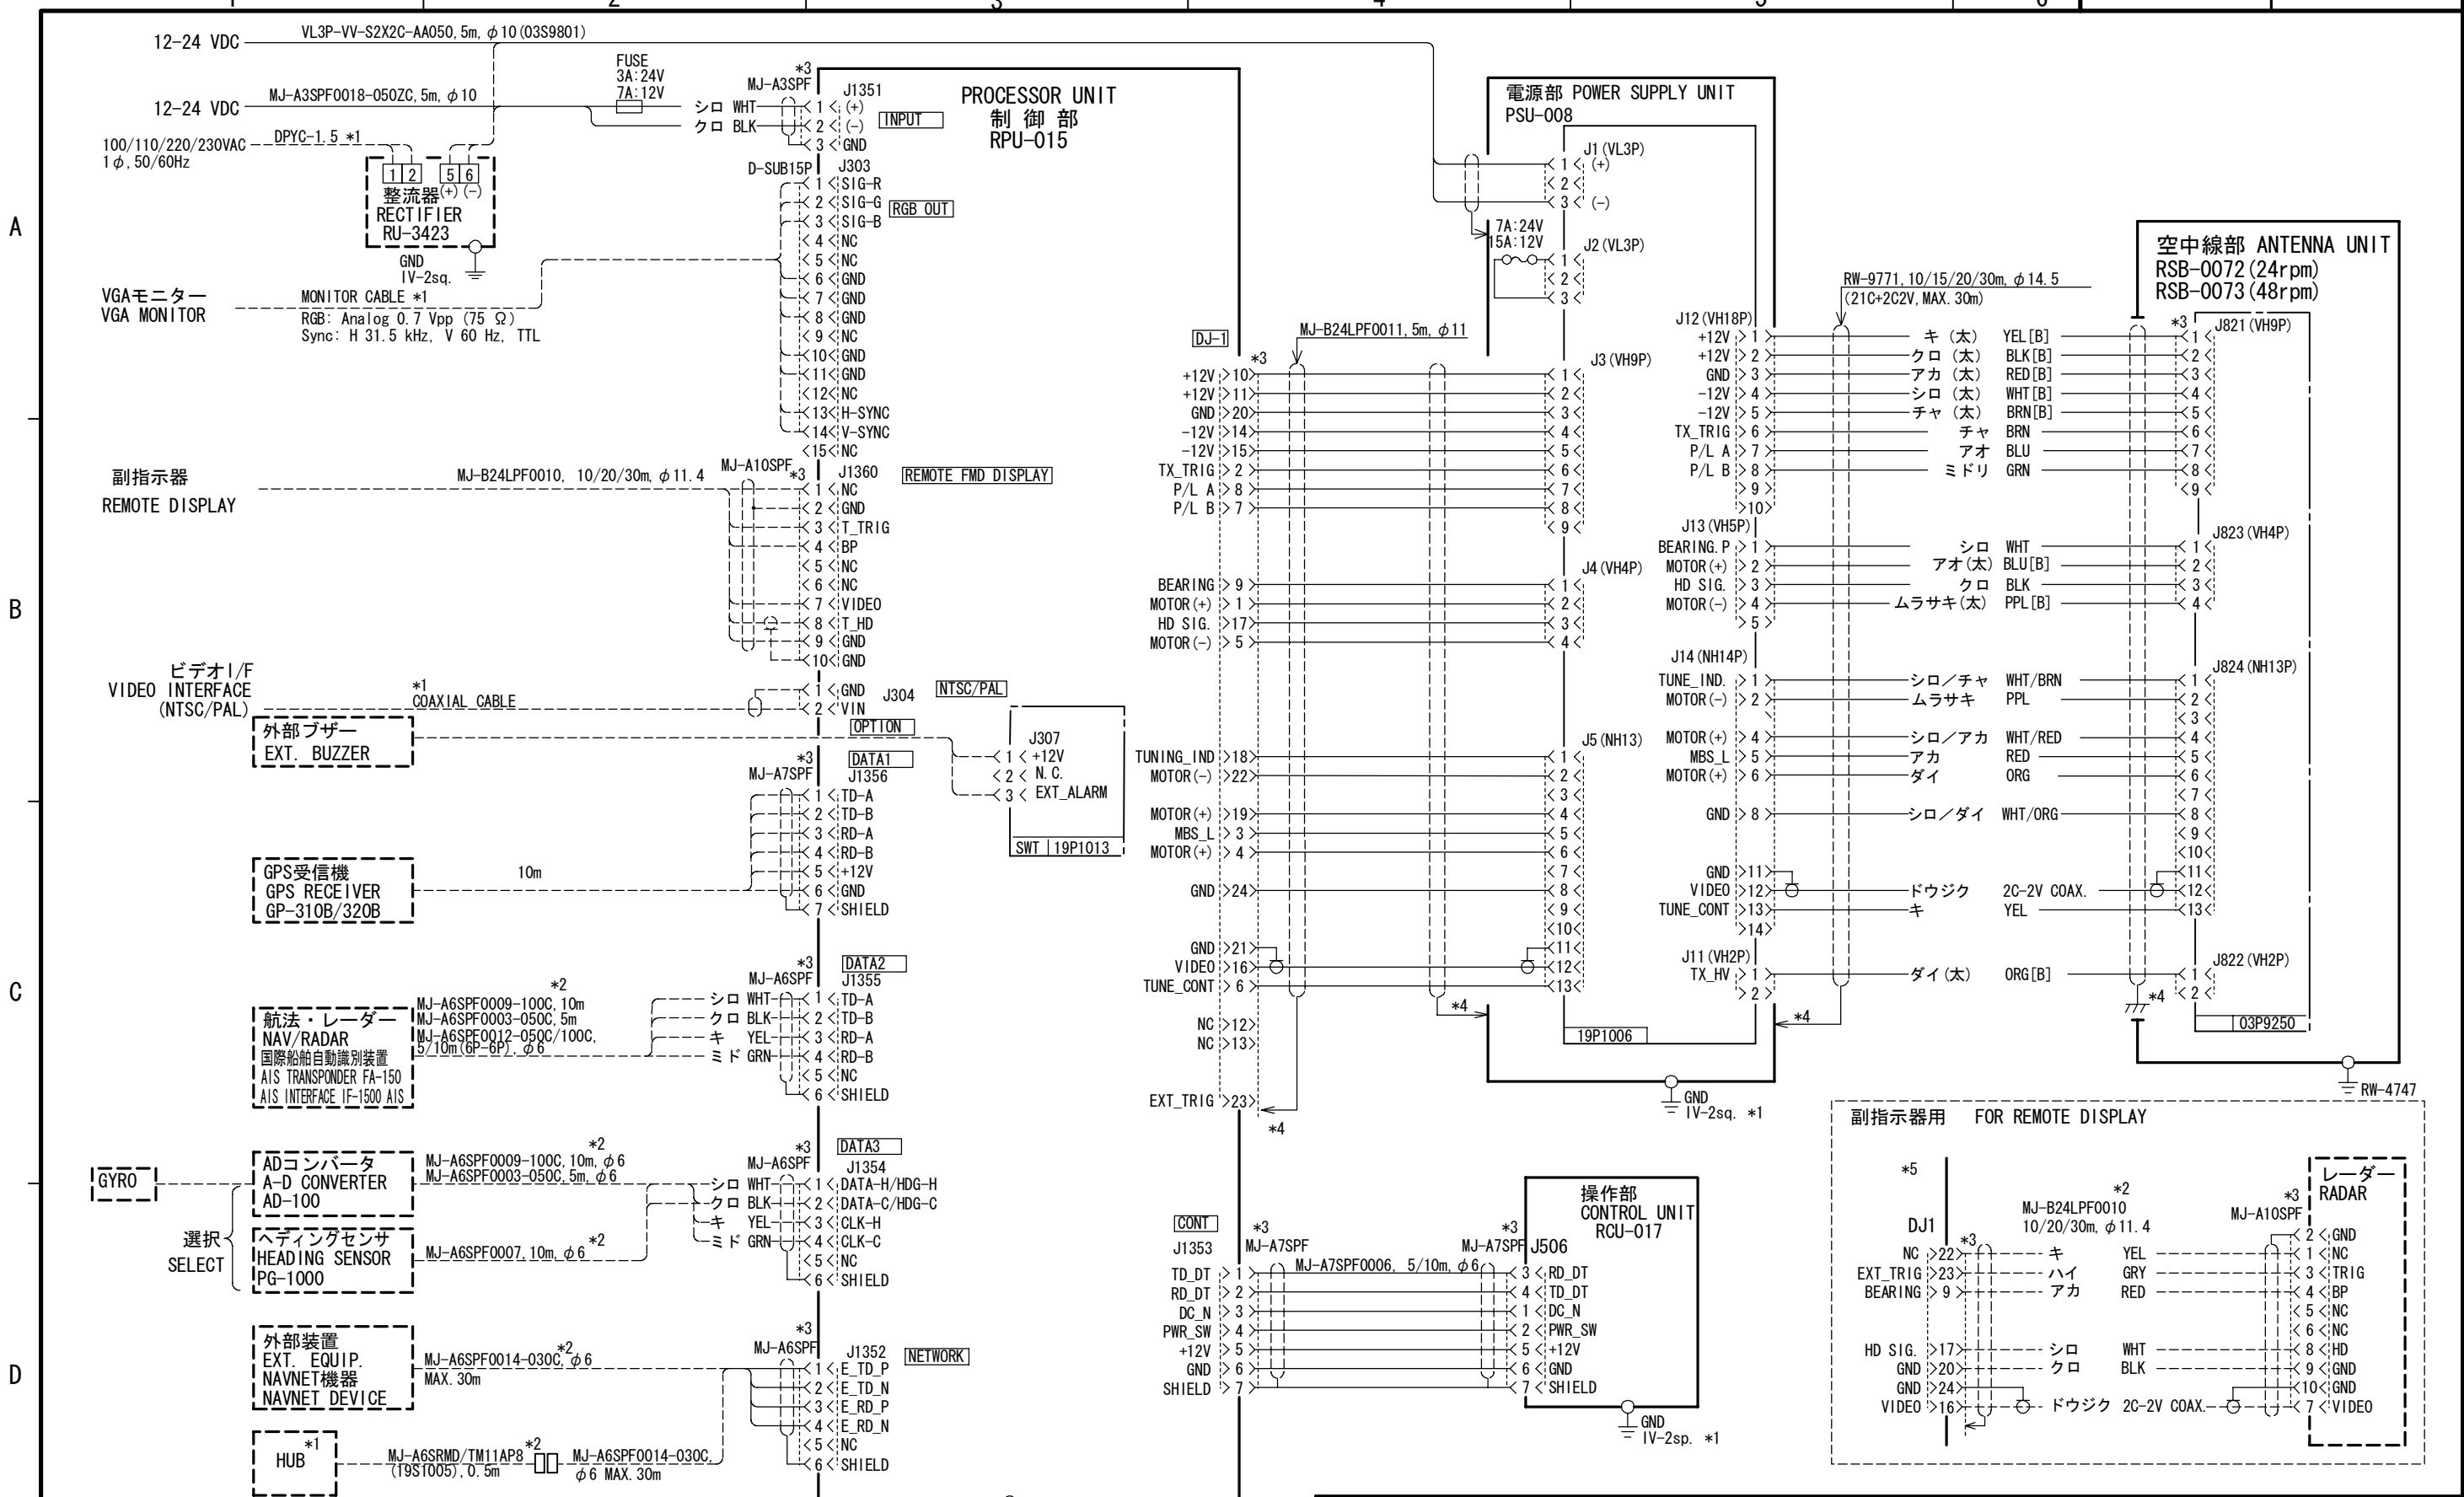

- 注記
- \*1) 造船所手配
  - \*2) オプション
  - \*3) コネクタは工場にて取付済み
  - \*4) シールドは両ユニット側で完全に接地すること。
  - \*5) 副指示器として使用する場合は、制御部の内部設定を変更する。

- NOTE
- \*1. SHIPYARD SUPPLY
  - \*2. OPTION
  - \*3. CONNECTOR PLUG FITTED AT FACTORY
  - \*4. SHIELD SHOULD BE EFFECTIVELY GROUNDED AT BOTH UNIT ENDS.
  - \*5. CHANGE SETTING IN THE PROCESSOR UNIT FOR USING AS A REMOTE DISPLAY.

DRAWN Jan. 30, '06 E. MIYOSHI	CHECKED TAKAHASHI, T	APPROVED Y. Hatai	TYPE MODEL 1964C-BB
SCALE MASS kg	DWG. No. C3554-C01-E	REF. No. 19-025-7053-2	名称 船舶用レーダー
			相互結線図
			NAME MARINE RADAR
			INTERCONNECTION DIAGRAM

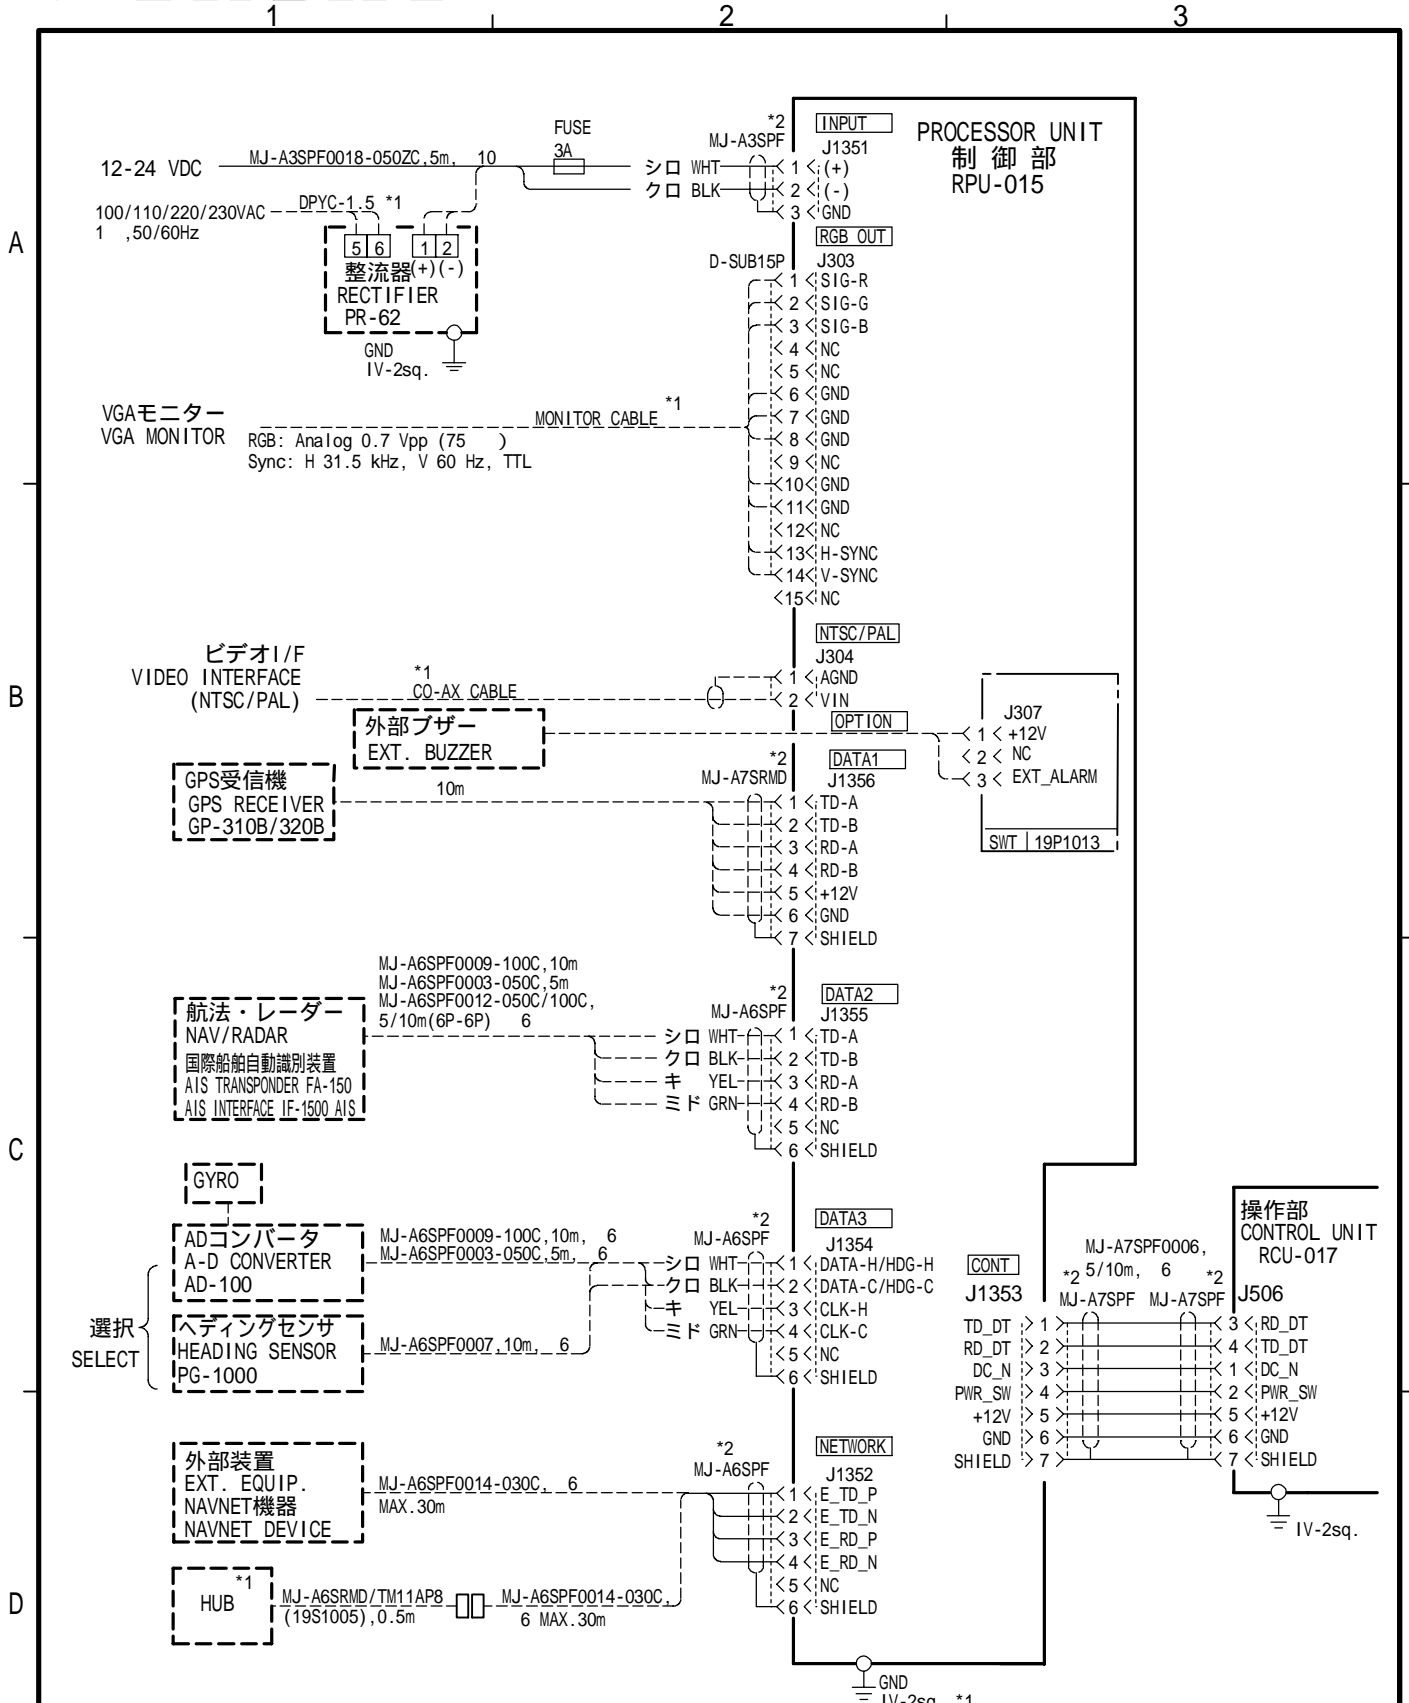

注記 NOTE  
 \*1) 造船所手配 \*1. SHIPYARD SUPPLY  
 \*2) コネクタは工場にて取付済み。 \*2. CONNECTOR PLUG FITTED AT FACTORY.

DRAWN Oct. 25, '05 E. MIYOSHI	TITLE GD-1920C-BB
CHECKED TAKAHASHI.T	名称 カラービデオプロッタ
APPROVED Y. Hatai	相互結線図
SCALE MASS ± 10% kg	NAME COLOR VIDEO PLOTTER
DWG. No. C4433-C01- E	INTERCONNECTION DIAGRAM